


Full IP67 Chassis Display

10.4/ 15/ 19"

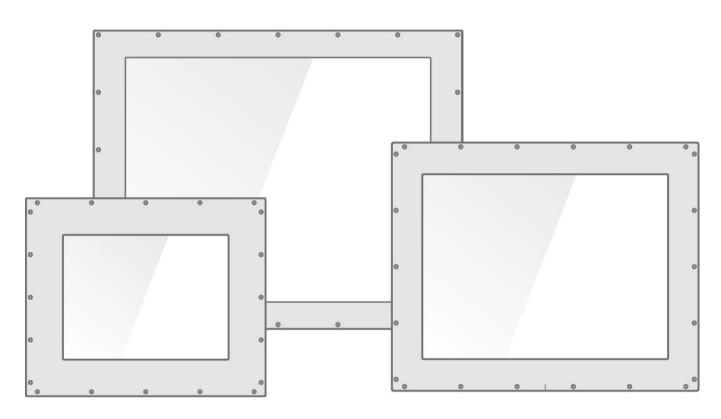

User Manual

Version 1.0 Document Part Number: 91521110103U

Please read these instructions carefully before using this product, and save this manual for future use.

Contents

Preface	3
About This User Manual	7
Chapter 1: Introduction	8
1.1 Overview	9
1.2 Product Features	9
1.3 Package Contents	9
1.4 Product Overview	10
1.5 Physical Buttons and LED Indicators	
1.6 Connectors	
Chapter 2: Installation	14
2.1 Wiring Requirements	
2.2 Mounting Guide	
2.2.2 VESA Mount	
2.2.3 Yoke Mount	
2.3 Cable Mounting Considerations	
2.4 Connecting Power	
2.5 Connecting Peripherals	
2.5.1 Power Cable	19
2.5.2 USB Cable for Touch	
2.5.3 RS-232 Cable for Touch	
2.5.4 VGA Cable	
2.5.5 DVI Cable	
Chapter 3: Operating the Device	22
3.1 Turning On and Off the Device	
3.2 OSD Menu Navigation	
3.3 Troubleshooting Guide	
Appendix	26
Appendix A: Frequency Table	
Appendix B: Cleaning the Monitor	

Preface

Copyright Notice

No part of this document may be reproduced, copied, translated, or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the prior written permission of the original manufacturer.

Trademark Acknowledgement

Brand and product names are trademarks or registered trademarks of their respective owners.

Disclaimer

We reserve the right to make changes, without notice, to any product, including circuits and/or software described or contained in this manual in order to improve design and/or performance. We assume no responsibility or liability for the use of the described product(s) conveys no license or title under any patent, copyright, or masks work rights to these products, and make no representations or warranties that these products are free from patent, copyright, or mask work right infringement, unless otherwise specified. Applications that are described in this manual are for illustration purposes only. We make no representation or guarantee that such application will be suitable for the specified use without further testing or modification.

Warranty

Our warranty guarantees that each of its products will be free from material and workmanship defects for a period of one year from the invoice date. If the customer discovers a defect, we will, at his/her option, repair or replace the defective product at no charge to the customer, provide it is returned during the warranty period of one year, with transportation charges prepaid. The returned product must be properly packaged in its original packaging to obtain warranty service. If the serial number and the product shipping data differ by over 30 days, the in-warranty service will be made according to the shipping date. In the serial numbers the third and fourth two digits give the year of manufacture, and the fifth digit means the month (e. g., with A for October, B for November and C for December).

For example, the serial number 1W16Axxxxxx means October of year 2016.

Customer Service

We provide a service guide for any problem by the following steps: First, visit the website of our distributor to find the update information about the product. Second, contact with your distributor, sales representative, or our customer service center for technical support if you need additional assistance.

You may need the following information ready before you call:

- Product serial number
- Software (OS, version, application software, etc.)
- Description of complete problem
- The exact wording of any error messages

In addition, free technical support is available from our engineers every business day. We are always ready to give advice on application requirements or specific information on the installation and operation of any of our products.

Naming Rule

R10L100-67XXXX

ltem	Description		
R	Panel Type		
10	Panel Size		
LXXX	Panel Specifications		
67	Mechanical Type (Full IP67)		
хххх	Panel Model		

Advisory Conventions

Four types of advisories are used throughout the user manual to provide helpful information or to alert you to the potential for hardware damage or personal injury. These are Notes, Important, Cautions, and Warnings. The following is an example of each type of advisory.



Note:

A note is used to emphasize helpful information



Important:

An important note indicates information that is important for you to know.



Caution/ Attention

A Caution alert indicates potential damage to hardware and explains how to avoid the potential problem.

Unealerted' attention indique un dommage possible à l'équipement et explique comment éviter le problem potentiel.



Warning!/ Avertissement!

An Electrical Shock Warning indicates the potential harm from electrical hazards and how to avoid the potential problem. Un Avertissement de Choc Électriqueindique le potentiel de chocssur des emplacements électriques et comment éviterces problèmes.



Alternating Current / Mise à la Terre The Protective Conductor Terminal (Earth Ground) symbol indicates the potential risk of serious electrical shock due to improper grounding. Le symbole de Miseà Terre indique le risqué potential de choc électrique

grave à la terre incorrecte.

Safety Information

Warning!/ Avertissement!

A

Always completely disconnect the power cord from your chassis whenever you work with the hardware. Do not make connections while the power is on. Sensitive electronic components can be damaged by sudden power surges. Only experienced electronics personnel should open the PC chassis.

Toujours débrancher le cordon d'alimentation du chassis lorsque vous travaillez sur celui-ci. Ne pas brancher de connections lorsque l'alimentation est présente. Des composantes électroniques sensibles peuvent être endommagées par des sauts d'alimentation. Seulement du personnel expérimenté devrait ouvrir ces chassis.

Caution/ Attention

Always ground yourself to remove any static charge before touching the CPU card. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components in a static-dissipative surface or static-shielded bag when they are not in the chassis.

Toujours verifier votre mise à la terre afin d'éliminer toute charge statique avant de toucher la carte CPU. Les équipements électroniques moderns sont très sensibles aux décharges d'électricité statique. Toujours utiliser un bracelet de mise à la terre comme précaution. Placer toutes les composantes électroniques sur une surface conçue pour dissiper les charge, ou dans un sac anti-statique lorsqu'elles ne sont pas dans le chassis.



Safety Precautions

For your safety carefully read all the safety instructions before using the device. Keep this user manual for future reference.

- Always disconnect this equipment from any AC outlet before cleaning. Do not use liquid or spray detergents for cleaning. Use a damp cloth.
- For pluggable equipment, the power outlet must be installed near the equipment and must be easily accessible.
- Keep this equipment away from humidity.
- Put this equipment on a reliable surface during installation. Dropping it or letting it fall could cause damage.
- The openings on the enclosure are for air convection and to protect the equipment from overheating.



Caution/ Attention

Do not cover the openings!

- Before connecting the equipment to the power outlet make sure the voltage of the power source is correct.
- Position the power cord so that people cannot step on it. Do not place anything over the power cord.
- If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient over-voltage.
- Never pour any liquid into an opening. This could cause fire or electrical shock.
- Never open the equipment. For safety reasons, only qualified service personnel should open the equipment.
- All cautions and warnings on the equipment should be noted.



Caution/ Attention

Always ground yourself to remove any static charge before touching the board. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components in a static-dissipative surface or staticshielded bag when they are not in the chassis.

About This User Manual

This User Manual provides information about using the Winmate® Full IP67 Chassis Display. The documentation set provides information for specific user needs, and includes:

• Full IP67 Chassis Display User Manual – contains detailed description on how to use the display, its components and features.



Note:

Some pictures in this guide are samples and can differ from actual product.

Models

Screen Size	Model Name
10.4"	R10L100-67T2ST
15"	R15L600-67C3ST
19"	R19L300-67M1ST

Document Revision History

Version	Date	Note
1.0	15-Dec-2018	New document release.

Chapter 1: Introduction

This chapter gives you product overview, describes features and hardware specification. You will find all accessories that come with the display device in the packing list. Mechanical dimensions and drawings included in this chapter.

1.1 Overview

Congratulations on purchasing Winmate® Full IP67 Chassis Display. Winmate multipurpose and waterproof fully sealed IP67 display is protected against outer dust and water splash, and ideal for use in harsh environments such as food processing and packaging automation. food processing and packaging automation.

1.2 Product Features

Full IP67 Chassis Display features:

- 10.4/ 15/ 19" TFT LCD
- VGA video input
- RS-232 or USB for touch
- Full IP67 water and dust proof
- SUS 304 stainless steel enclosure
- Supports VESA mount
- Suitable for food and pharmaceutical industry

1.3 Package Contents

Carefully remove the box and unpack your display. Please check if all the items listed below are inside your package. If any of these items are missing or damaged contact us immediately.

Standard factory shipment list:




Varies by product



• **Power Cord** Varies by country



User Manual (Hardcopy)
 Part No. 91521110103R

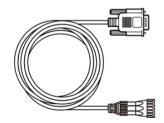

• VGA Cable

Part No. 944115010000



• AC Adapter Part No. 50W, 90PO12050002 Part No. 80W, 90PO12080003

1.4 Product Overview


This section describes physical appearance of the Full IP67 Chassis Display.

Notice that input and output connectors vary by product size and specifications. The picture above shows only a prototype model for information purposes only.

56.4


0

10.4-inch, R10L100-67T2ST

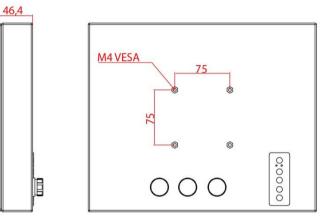

15-inch, R15L600-67C3ST


 Unit:mm

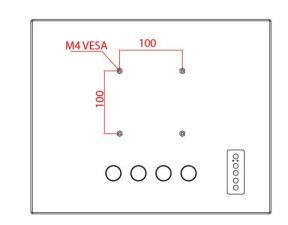

Unit:mm


19-inch, R19L300-67M1ST

Unit:mm

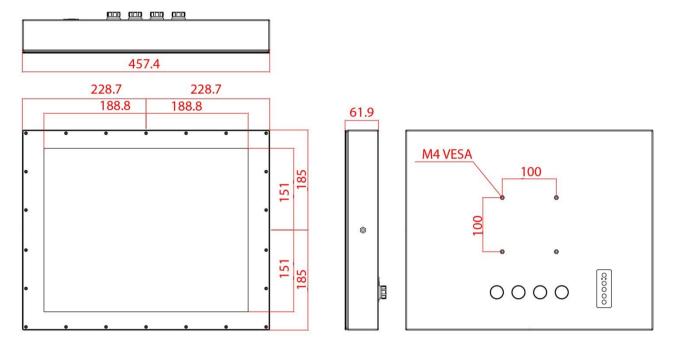

1.5 Physical Buttons and LED Indicators

Physical buttons and LED indicators located on the rear side of the Display.

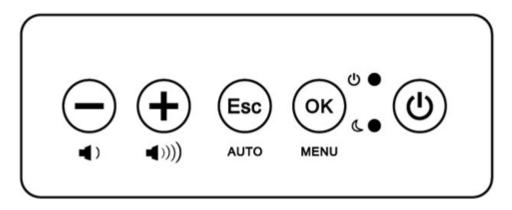

Physical Buttons


lcon	Button	Description
()	DOWN/ VOLUME DOWN	Press to decrease the volume or volume down when without OSD menu.
(+)))	UP/ VOLUME UP	Press to increase the value or volume up when without OSD menu.
Esc) AUTO	ESC/ AUTO	Press to exit the menu or auto adjustment when without OSD menu.
	OK/ MENU	Press to confirm the action or to call main OSD menu.
٨	Power On/ Off	Press to power on or power off the device.

LED Indicators

LED Type	Status	Description	
(U) 🔴	On	Power is on	
U •	Off	Power is off	
1	On	System is in standby mode	
	Off	System is idle	

1.6 Connectors

Full IP67 Chassis Display has M25 type connectors with protection caps.

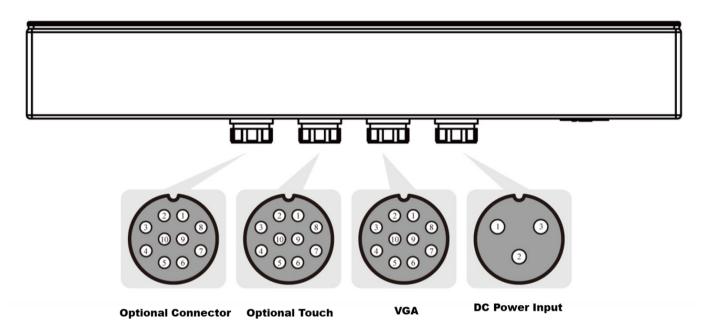

Caution/ Attention

To maintain device's IP67 rating close the I/O and tighten protection caps when I/O is not used.

Pour maintenir la norme IP67 de l'appareil près d'E / S et serrer capuchons de protection lorsque E / S est pas utilisé.

Chapter 2: Installation

This chapter provides hardware installation instructions and mounting guide for all available mounting options. Pay attention to cautions and warning to avoid any damages

2.1 Wiring Requirements

The following common safety precautions should be observed before installing any electronic device:

- Strive to use separate, non-intersecting paths to route power and networking wires. If power wiring and device wiring paths must cross make sure the wires are perpendicular at the intersection point.
- Keep the wires separated according to interface. The rule of thumb is that wiring that shares similar electrical characteristics may be bundled together.
- Do not bundle input wiring with output wiring. Keep them separate.
- When necessary, it is strongly advised that you label wiring to all devices in the system.
- Do not run signal or communication wiring and power wiring in the same conduit. To avoid interference, wires with different signal characteristics (i.e., different interfaces) should be routed separately.
- Be sure to disconnect the power cord before installing and/or wiring your device.
- Verify the maximum possible current for each wire gauge, especially for the power cords. Observe all electrical codes dictating the maximum current allowable for each wire gauge.
- If the current goes above the maximum ratings, the wiring could overheat, causing serious damage to your equipment.

Be careful when handling the unit. When the unit is plugged in, the internal components generate a lot of heat which may leave the outer casing too hot to touch.

2.2 Mounting Guide

The Full IP67 Chassis supports VESA mount for wall and desk installation. Refer to sub-sections below for more details.



Caution/ Attention

Follow mounting instructions and use recommended mounting hardware to avoid the risk of injury.

Suivez les instructions de montage et d'utilisation recommandé le matériel de montage pour éviter le risque de blessure.


2.2.2 VESA Mount

The Display has VESA mount holes on the rear side. Follow instructions below to mount the unit with VESA mount bracket.

Size	VESA Dimensions	Screw Hole Diameter
10.4"	75 x 75 mm	VESA M4, D=5 mm
15", 19"	100 x 100 mm	VESA M4, D=5 mm

Installation Instruction:

- 1. Screw VESA bracket to the fixture (ex. swing arm) with four VESA screws.
- 2. Place the device on VESA bracket.

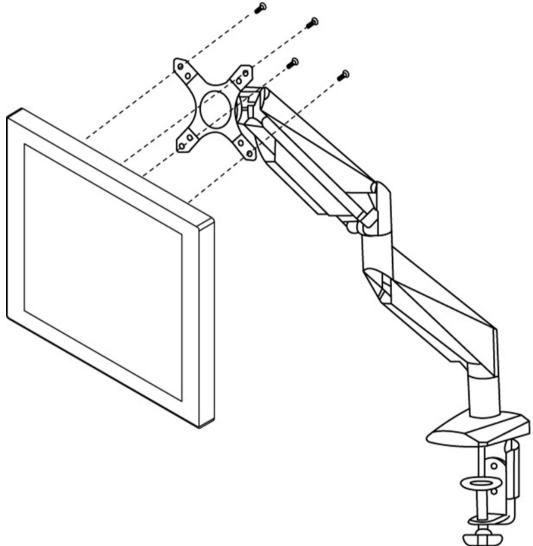


Notice that VESA stand and mounting kit are not provided by Winmate.

2.2.3 Yoke Mount

Yoke Mount solution allows installing the display with the bracket.

Mounting instruction:

- 1. Place the Display on the bracket stand, aiming screw holes for each other.
- 2. Secure screws to fix the device upon the bracket stand.
- 3. Firmly secure the locking handle to the Display.

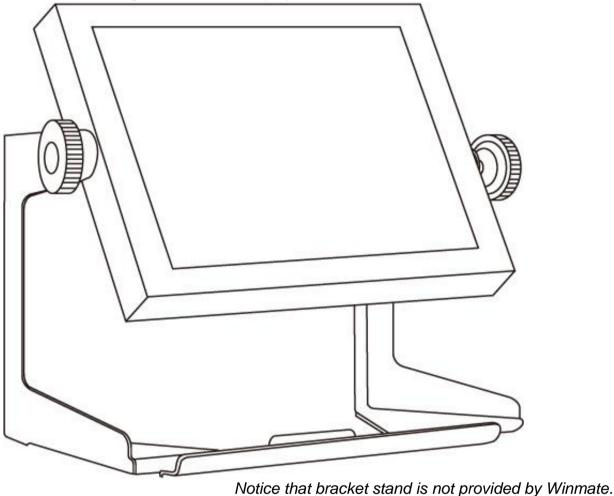

·····

2.3 Cable Mounting Considerations

For a nice look and safe installation, make sure cables are neatly hidden behind the device.



Caution/ Attention

Observe all local installation requirements for connection cable type and protection level.

Suivre tous les règlements locaux d'installations, de câblage et niveaux de protection.



Caution/ Attention


Turn off the device and disconnect other peripherals before installation. Éteindre l'appareil et débrancher tous les périphériques avant l'installation.

2.4 Connecting Power

This section provides information on how to use connectors on the Display. Be cautious while working with these modules. Please carefully read the content of this chapter in order to avoid any damages.

Installation instruction:

- 1. Connect the AC cord to the AC IN terminal on the AC adapter.
- 2. Connect the DC OUT terminal of the AC adaptor to the DC IN terminal on the monitor.
- 3. Align the notch on the cord connector with the guiding groove and plug it in.
- 4. Connect the AC cord plug to the power outlet.

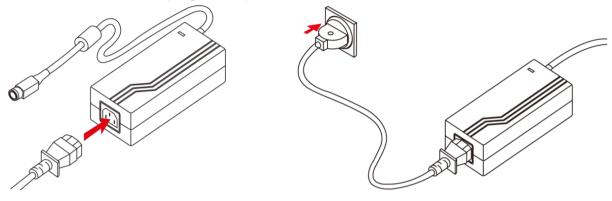

2.5 Connecting Peripherals

The panel control port is designed for monitors that work with a variety of compatible video sources. Due to the possible deviations between these signal sources, you may have to make adjustments to the monitor settings from the OSD menu when switching between these sources.




Note:

Notice that standard input terminals include VGA. Your device may be equipped with USB for touch, DVI input terminals based on your order.

2.5.1 Power Cable


The Full IP67 Chassis Display has M25 type connectors. Use power cable to connect display to the source of power.

The display support 12V DC power input.

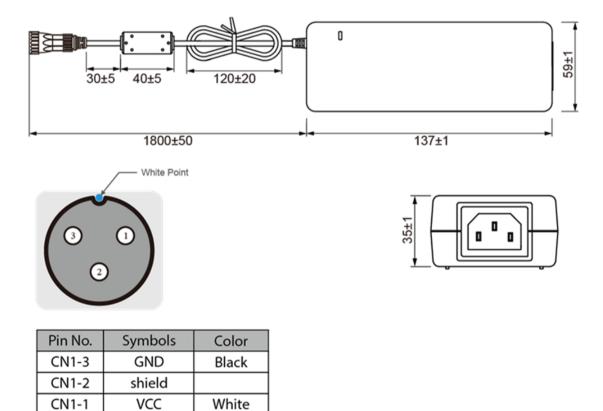

2.5.2 USB Cable for Touch


The display may have optional M25 type USB connector for touch based on your order. Use USB cable to connect touch.

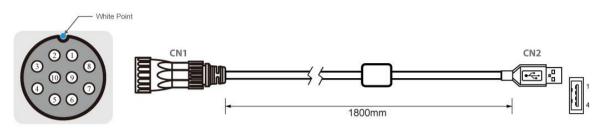


1	Pin No.	Symbols	Color	Pin No.	Symbols	Color	
	CN1-1	VCC	RED	CN2-1	VCC	RED]
	CN1-2	D-	WHITE	CN2-2	D-	WHITE	Twist
	CN1-3	D+	GREN	CN2-3	D+	GREN	
	CN1-4	GND	BLACK	CN2-4	GND	BLACK]
	CN1-5	Shield		CN2	Shield]

2.5.3 RS-232 Cable for Touch

The display may have optional M25 type serial port connector based on your order. Use serial cable to connect touch.



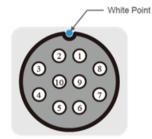


-			
	Color	Symbols	Pin No.
] ←	Green	DCD-CON2	CN1-1
] ←	Brown	DSR-CON2	CN1-2
] ←	Red	RXD-CON2	CN1-3
] ←	Orange	RTS-CON2	CN1-4
]←	Blue	TXD-CON2	CN1-5
] ←	White	CTS-CON2	CN1-6
] ←	Purple	DTR-CON2	CN1-7
] ←	Yellow	RI-CON2	CN1-8
] ←	Black	GND-CON2	CN1-9
] ←		NC	CN1-10

	Pin No.	Symbols	Color
\leftrightarrow	CN2-1	DCD-CON2	Green
\leftrightarrow	CN2-6	DSR-CON2	Brown
\leftrightarrow	CN2-2	RXD-CON2	Red
\leftrightarrow	CN2-7	RTS-CON2	Orange
\leftrightarrow	CN2-3	TXD-CON2	Blue
\leftrightarrow	CN2-8	CTS-CON2	White
\leftrightarrow	CN2-4	DTR-CON2	Purple
\leftrightarrow	CN2-9	RI-CON2	Yellow
\leftrightarrow	CN2-5	GND-CON2	Black
\leftrightarrow	CN2-10	NC	

2.5.4 VGA Cable


The display has M25 type VGA connector. Use VGA cable to connect the display to other external devices.



	CN1] [CN2	
Pin No.	Symbols	Color	1 1	Pin No.	Symbols	Color
1	R	Red	$ \leftrightarrow $	1	R	Red
2	R-GIND	Black	↔ [6	R-GIND	Black
3	G	Green	$ \leftrightarrow [$	2	G	Green
4	G-GND	Black	$ \leftrightarrow $	7	G-GND	Black
5	В	Blue	$ \leftrightarrow $	3	В	Blue
6	B-GND	Black	$ \leftrightarrow $	8	B-GND	Black
7	SDA	Yellow	$ \leftrightarrow $	12	SDA	Yellow
8	HS	Orange	$ \leftrightarrow $	13	HS	Orange
9	VS	White	$ \longleftrightarrow $	14	VS	White
10	SCL	Brown	$ \leftrightarrow $	15	SCL	Brown
			ʻ [4	HS-C	GDN
				5	N	С
			[9	N	С
			[10	N	С
			1	11	VS-C	5DN

2.5.5 DVI Cable

The display may have optional DVI connector based on your order. Use DVI cable to connect the display to other external device.



CN1				CN2
Pin No.	Symbol	$ \leftrightarrow $	Pin No.	Symbol
CN1-1	TMDS Data2-]↔	CN2-1	TMDS Data2-
CN1-2	TMDS Data2+]↔	CN2-2	TMDS Data2+
CN1-3	TMDS Data2 Shield	$ \leftrightarrow $	CN2-3	TMDS Data2 Shield
CN1-4	NC		CN2-4	NC
CN1-5	NC		CN2-5	NC
CN1-6	DDC Clock	$] \longleftrightarrow$	CN2-6	DDC Clock
CN1-7	DDC Data	$] \longleftrightarrow$	CN2-7	DDC Data
CN1-8	NC		CN2-8	NC
CN1-9	TMDS Data 1-]↔	CN2-9	TMDS Data 1-
CN1-10	TMDS Data 1+]↔	CN2-10	TMDS Data 1+
CN1-11	TMDS Data 1 Shield]↔	CN2-11	TMDS Data 1 Shield
CN1-12	NC		CN2-12	NC
CN1-13	NC]	CN2-13	NC
CN1-14	+5V Power]↔	CN2-14	+5V Power
CN1-15	Ground]↔	CN2-15	Ground
CN1-16	Hot Plug Detect]↔	CN2-16	Hot Plug Detect
CN1-17	TMDS Data 0-]↔	CN2-17	TMDS Data 0-
CN1-18	TMDS Data 0+	$ \leftrightarrow $	CN2-18	TMDS Data 0+
CN1-19	TMDS Data 0 Shield]↔	CN2-19	TMDS Data 0 Shield
CN1-20	NC	1	CN2-20	NC
CN1-21	NC]	CN2-21	NC
CN1-22	TMDS Data Clock Shield	$] \longleftrightarrow$	CN2-22	TMDS Data Clock Shield
CN1-23	TMDS Clock+	$ \leftrightarrow $	CN2-23	TMDS Clock+
CN1-24	TMDS Clock-	↔	CN2-24	TMDS Clock-


Chapter 3: Operating the Device

In this chapter you will find instructions on how to operate the display.

3.1 Turning On and Off the Device

To turn on the system:

- 1. Connect the power adapter cable to the DC input of the display.
- 2. Connect the power cord to the power adapter.
- 3. Connect the power cord to a power outlet.
- 4. Press the power button located on the OSD control panel on the rear to turn on the system.

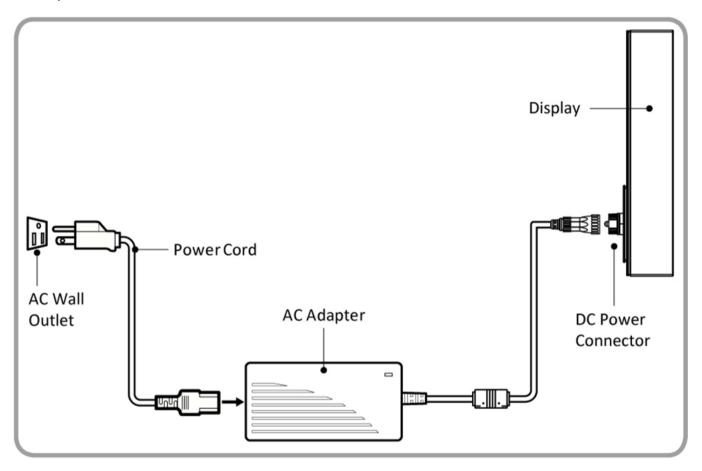

To shut down your device, do the following disconnect the power cord and the device will automatically turn off.

3.2 OSD Menu Navigation

OSD Icon	Sub-menu	Settings	Note	
	BRIGHTNESS	slider bar	Default 50	
			Delault 50	
	Use to adjust the screen's brigh			
		slider bar	Default 50	
	Use to adjust the screen's contrast. Range 0 to 100			
POSITION		slider bar	Default 50	
	Use to adjust the image to the left or right on the screen. Range 0 to 100			
	V POSITION	slider bar	Default 50	
	Use to adjust the image up or de		100	
IMAGE	AUTO	Select and execute		
	Use to choose the best settings			
		slider bar		
	Use to adjust the value of horizo			
	-	slider bar		
	Use to adjust the phase control	(May be required to optimize the	e display quality)	
	WHITE BALANCE	Select and execute		
	Use to set RGB signal voltage le	evel		
	USER	R.G.B slider bar		
	Choose RED/GREEN/BLUE to	set value of color temperature b	rightness.	
	9300K	Select and execute		
<u></u>	Use to set value of monitor for the	he CIE coordinate 9300 color te	mperature	
COLOR	6500K	Select and execute		
	Use to set value of monitor for the CIE coordinate 6500 color temperature			
		slider bar	Default 50	
	Set value of monitor for ADC Br	ightness. Range 0 to 100		
	GAMMA 0	Select and execute	Default GAMMA0	
	Choose the parameter of GAMMA 0 as default setting.			
VII	GAMMA 1	Select and execute		
GAMMA	Choose the parameter of GAMM	A 1 as default setting.		
	GAMMA 2	Select and execute		
	Choose the parameter of GAMN			
		Select and execute	Default mode	
	Auto detect the input source		Deladit mode	
(III)(O	ANALOG	Select and execute		
CHANNEL	Switch the setting of signal input			
CHANNEL	•••	Select and execute		
	Switch the setting of signal input			
RECALL	YES	Select and execute		
	Recall the factory default setting			
	NO	Select and execute		
	Return to main menu			
EXIT		Salaat and avecute		
EXIT	YES	Select and execute		

3.3 Troubleshooting Guide

If your monitor fails to operate correctly, check the following chart for possible solution before calling for repairs:

Condition	Check Point	
The picture does not appear	 Check if the signal cable is firmly seated in the socket. Check if the Power is ON at the computer Check if the brightness control is at the appropriate position, not at the minimum. 	
The screen is not synchronized	 Check if the signal cable is firmly seated in the socket. Check if the output level matches the input level of your computer. Make sure the signal timings of the computer system are within the specification of the monitor. If your computer was working with a CRT monitor, you should check the current signal timing and turn off your computer before you connect the VGA Cable to this monitor. 	
The position of the screen is not in the center	Adjust the H-position, and V-position, or Perform the Auto adjustment.	
The screen is too bright (too dark)	Check if the brightness or contrast control is at the appropriate position, not at the Maximum (Minimum).	
The screen is shaking or waving	 Perform the Auto adjustment. Moving all objects which emit a magnetic field such as motor or transformer, away from the monitor. Check if the specific voltage is applied. Check if the signal timing of the computer system is within the specification of monitor. 	

*If you are unable to correct the fault by using this chart, stop using your monitor and contact your distributor or dealer for further assistance.

Appendix

This chapter contains additional product information, including troubleshooting guide and frequency table

Appendix A: Frequency Table

The choice of supported modes depends on the monitor native resolution. Refer to the table below for more information about available input signals.

Signal name	Vertical Frequency (Hz)	DVI	VGA
	60	✓	~
640 x 480	72	v	~
	75	✓	~
480P	60	✓	~
	60	✓	~
800 x 600	72	v	~
	75	~	~
	60	✓	~
1024 x 768	72	✓	~
	75	✓	v
720P	60	✓	v
	60	✓	~
1280 x 1024	72	✓	~
	75	✓	v
1600 x 1200	60	✓	~
1920 x 1080	60	✓	~
1920 x 1200	60	~	~

Appendix B: Cleaning the Monitor

Before cleaning:

- Make sure the device is turned off.
- Disconnect the power cable from any AC outlet.

When cleaning:

- Use water up to 80°C to clean the housing.
- Wipe the screen with a clean, soft, lint-free cloth. This removes dust and other particles.
- The display area is highly prone to scratching. Does not use ketene type material (for example Acetone), Ethyl alcohol, toluene, ethyl acid or Methyl chloride to clear the panel. It may permanently damage the panel and void the warranty.
- If it is still not clean enough, apply a small amount of non-ammonia, non-alcohol based glass cleaner onto a clean, soft, lint-free cloth, and wipe the screen.
- Don not use oil directly on the display screen. If droplets are allowed to drop on the screen, permanent staining or discoloration may occur.



Winmate Inc. 9F, No.111-6, Shing-De Rd., San-Chung District, New Taipei City 24158, Taiwan, R.O.C www.winmate.com