



User Manual

SOM-2569

ADVANTECH

Enabling an Intelligent Planet

Copyright

The documentation and the software included with this product are copyrighted 2020 by Advantech Co., Ltd. All rights are reserved. Advantech Co., Ltd. reserves the right to make improvements in the products described in this manual at any time without notice. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written permission of Advantech Co., Ltd. Information provided in this manual is intended to be accurate and reliable. However, Advantech Co., Ltd. assumes no responsibility for its use, nor for any infringements of the rights of third parties, which may result from its use.

Acknowledgments

Intel® and Pentium® are trademarks of Intel® Corporation.

Microsoft Windows and MS-DOS are registered trademarks of Microsoft Corp.

All other product names or trademarks are properties of their respective owners.

Product Warranty (2 years)

Advantech warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Advantech, or which have been subject to misuse, abuse, accident or improper installation. Advantech assumes no liability under the terms of this warranty as a consequence of such events.

Because of Advantech's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If an Advantech product is defective, it will be repaired or replaced at no charge during the warranty period. For out-of-warranty repairs, you will be billed according to the cost of replacement materials, service time and freight. Please consult your dealer for more details.

If you think you have a defective product, follow these steps:

1. Collect all the information about the problem encountered. (For example, CPU speed, Advantech products used, other hardware and software used, etc.) Note anything abnormal and list any onscreen messages you get when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information readily available.
3. If your product is diagnosed as defective, obtain an RMA (return merchandise authorization) number from your dealer. This allows us to process your return more quickly.
4. Carefully pack the defective product, a fully-completed Repair and Replacement Order Card and a photocopy proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

Declaration of Conformity

CE

This product has passed the CE environmental specifications test. Criteria for passing included operating the equipment in an industrial enclosure. In order to protect the product from damage by ESD (Electrostatic Discharge) and EMI leakage, we strongly recommend the use of CE-compliant industrial enclosure products.

FCC Class B

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

FM

This equipment has passed the FM certification. According to the National Fire Protection Association, work sites are classified into different classes, divisions and groups, based on hazard considerations. This equipment is compliant with the specifications of Class I, Division 2, Groups A, B, C, and D indoor hazards.

Technical Support and Assistance

1. Visit the Advantech website at <http://support.advantech.com> where you can find the latest information about the product.
2. Contact your distributor, sales representative, or Advantech's customer service center for technical support if you need additional assistance. Please have the following information ready before you call:
 - Product name and serial number
 - Description of your peripheral attachments
 - Description of your software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wording of any error messages

Warnings, Cautions, and Notes

Warning! Warnings indicate conditions, which if not observed, can cause personal injury!



Caution! Cautions are included to help you avoid damaging hardware or losing data. e.g.



There is a danger of a new battery exploding if it is incorrectly installed. Do not attempt to recharge, force open, or heat the battery. Replace the battery only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

Note! Notes provide optional additional information.



Document Feedback

To assist us in making improvements to this manual, we welcome comments and constructive criticism. Please send all such - in writing to: support@advantech.com.

Packing List

Before setting up the system, check that the items listed below are included and in good condition. If any item does not accord with the table, please contact your dealer immediately.

- SOM-2569 CPU module
- 1 x Heatsreader (1960083260N001 or 1960083261N001)

Safety Instructions

1. Read these safety instructions carefully.
2. Keep this User Manual for later reference.
3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a reliable surface during installation. Dropping it or letting it fall may cause damage.
7. The openings on the enclosure are for air convection. Protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
9. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
12. Never pour any liquid into an opening. This may cause fire or electrical shock.
13. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
14. If one of the following situations arises, get the equipment checked by service personnel:
 - The power cord or plug is damaged
 - Liquid has penetrated into the equipment
 - The equipment has been exposed to moisture
 - The equipment does not work well, or you cannot get it to work according to the user's manual
 - The equipment has been dropped and damaged
 - The equipment has obvious signs of breakage
15. **DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE MAY GO BELOW -20 °C (-4 °F) OR ABOVE 60 °C (140 °F). THIS COULD DAMAGE THE EQUIPMENT. THE EQUIPMENT SHOULD BE IN A CONTROLLED ENVIRONMENT.**
16. **CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER, DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.**

The sound pressure level at the operator's position according to IEC 704-1:1982 is no more than 70 dB (A).

DISCLAIMER: This set of instructions is given according to IEC 704-1. Advantech disclaims all responsibility for the accuracy of any statements contained herein.

Safety Precaution - Static Electricity

Follow these simple precautions to protect yourself from harm and the products from damage.

- To avoid electrical shock, always disconnect the power from your PC chassis before you work on it. Don't touch any components on the CPU card or other cards while the PC is on.
- Disconnect power before making any configuration changes. The sudden rush of power as you connect a jumper or install a card may damage sensitive electronic components.

CONTENTS

| | | |
|------------------|---|-----------|
| Chapter 1 | General Information | 1 |
| 1.1 | Introduction | 2 |
| 1.2 | Functional Block Diagram | 4 |
| 1.3 | Product Specification | 5 |
| 1.3.1 | Compliance | 5 |
| 1.3.2 | Feature List | 5 |
| 1.3.3 | Processor System | 6 |
| 1.3.4 | Memory | 6 |
| 1.3.5 | Graphics / Audio | 6 |
| 1.3.6 | Expansion Interface | 6 |
| 1.3.7 | Serial Bus | 6 |
| 1.3.8 | I/O | 7 |
| 1.3.9 | Power Management | 8 |
| 1.3.10 | Environment | 9 |
| 1.3.11 | MTBF | 9 |
| 1.3.12 | OS Support | 9 |
| 1.3.13 | Advantech iManager | 9 |
| 1.3.14 | Power Consumption | 9 |
| 1.3.15 | Performance | 10 |
| 1.3.16 | Selection Guide w/ P/N | 10 |
| 1.3.17 | Packing List | 10 |
| 1.3.18 | Development Board | 11 |
| 1.3.19 | Optional Accessories | 11 |
| 1.3.20 | Pin Description | 11 |
| | | |
| Chapter 2 | Mechanical Information | 13 |
| 2.1 | Board Information | 14 |
| | Figure 2.1 Atom_E3900 Board chips identify – Front | 14 |
| | Figure 2.2 Atom_E3900 Board chips identify – Rear | 14 |
| 2.2 | Mechanical Diagram | 15 |
| | Figure 2.3 Atom_E3900 Board Mechanical Diagram - Front | 15 |
| | Figure 2.4 Atom_E3900 Board Mechanical Diagram – Rear | 15 |
| | Figure 2.5 Atom_E3900 Board Mechanical Diagram – Side1 ... | 15 |
| | Figure 2.6 Atom_E3900 Board Mechanical Diagram – Side2 ... | 15 |
| | Figure 2.7 Pentium_Celeron_N_J Series Board Mechanical Diagram – Front | 16 |
| | Figure 2.8 Pentium_Celeron_N_J Series Board Mechanical Diagram – Rear | 16 |
| | Figure 2.9 Pentium_Celeron_N_J Series Board Mechanical Diagram – Side1 | 16 |
| | Figure 2.10 Pentium_Celeron_N_J Series Board Mechanical Diagram – Side2 | 16 |
| 2.3 | Assembly Diagram | 17 |
| | Figure 2.11 Assembly Diagram | 17 |
| | Figure 2.12 Main Chip Height and Tolerance | 17 |
| | Figure 2.13 Main Chip Height and Tolerance | 18 |
| | | |
| Chapter 3 | AMI BIOS | 19 |
| 3.1 | Introduction | 20 |
| | Figure 3.1 Setup program initial screen | 20 |
| 3.2 | Entering Setup | 20 |

| | | |
|--------|--|----|
| 3.3 | Main Setup | 21 |
| | Figure 3.2 Main setup screen | 21 |
| 3.4 | Advanced BIOS Features Setup | 22 |
| | Figure 3.3 Advanced BIOS features setup screen | 22 |
| 3.4.1 | Trusted Computing | 23 |
| | Figure 3.4 Trusted Computing | 23 |
| 3.4.2 | ACPI Settings | 24 |
| | Figure 3.5 ACPI Settings | 24 |
| 3.4.3 | Embedded Controller | 25 |
| | Figure 3.6 Embedded Controller | 25 |
| | Figure 3.7 Serial Port 1 Configuration | 26 |
| | Figure 3.8 Serial Port 2 Configuration | 27 |
| | Figure 3.9 Hardware Monitor | 28 |
| 3.4.4 | Serial Port Console Redirection | 28 |
| | Figure 3.10 Serial Port console Redirection | 28 |
| 3.4.5 | CPU Configuration | 30 |
| | Figure 3.11 CPU Configuration | 30 |
| | Figure 3.12 Socket 0 CPU Information | 31 |
| | Figure 3.13 CPU Power Management | 32 |
| 3.4.6 | Network Stack Configuration | 33 |
| | Figure 3.14 Network Stack Configuration | 33 |
| 3.4.7 | CSM Configuration | 34 |
| | Figure 3.15 CSM Configuration | 34 |
| 3.4.8 | NVMe Configuration | 35 |
| | Figure 3.16 NVMe Configuration | 35 |
| 3.4.9 | SDIO Configuration | 36 |
| | Figure 3.17 SDIO Configuration | 36 |
| 3.4.10 | USB Configuration | 37 |
| | Figure 3.18 USB Configuration | 37 |
| 3.4.11 | Security Configuration | 38 |
| | Figure 3.19 Security Configuration | 38 |
| 3.5 | Chipset Setup | 39 |
| | Figure 3.20 Chipset Setup | 39 |
| 3.5.1 | North Bridge | 40 |
| | Figure 3.21 North Bridge | 40 |
| 3.5.2 | South Bridge | 41 |
| | Figure 3.22 South Bridge | 41 |
| 3.5.3 | Uncore Configuration | 42 |
| | Figure 3.23 Uncore Configuration | 42 |
| 3.5.4 | South Cluster Configuration | 43 |
| | Figure 3.24 South Cluster Configuration | 43 |
| | Figure 3.25 HD-Audio Configuration | 44 |
| | Figure 3.26 PCI Express Configuration | 45 |
| | Figure 3.27 PCI Express Root Port 1 /LAN0 | 46 |
| | Figure 3.28 PCI Express Root Port 2 WIFI LAN | 47 |
| | Figure 3.29 PCI Express Root Port 0 | 48 |
| | Figure 3.30 PCI Express Root Port 1 | 49 |
| | Figure 3.31 PCI Express Root Port 2 | 50 |
| | Figure 3.32 PCI Express Root Port 3/LAN1 | 51 |
| | Figure 3.33 SATA Drives | 52 |
| | Figure 3.34 SCC Configuration | 53 |
| | Figure 3.35 USB Configuration | 54 |
| | Figure 3.36 Miscellaneous Configuration | 55 |
| 3.6 | Security Chipset | 56 |
| | Figure 3.37 Security Chipset | 56 |
| 3.7 | Boot Setup | 57 |
| | Figure 3.38 Boot Setup | 57 |
| 3.8 | Save & Exit | 58 |
| | Figure 3.39 Save & Exit | 58 |

| | | |
|-------------------|--|-----------|
| Chapter 4 | S/W Introduction & Installation | 59 |
| 4.1 | S/W Introduction..... | 60 |
| 4.2 | Driver Installation | 60 |
| 4.2.1 | Windows Driver Setup | 60 |
| 4.2.2 | Other OS..... | 60 |
| 4.3 | Advantech iManager | 61 |
| Appendix A | Pin Assignment | 63 |
| A.1 | SOM-2569 Pin Assignment..... | 64 |
| Appendix B | Watchdog Timer | 73 |
| B.1 | Programming the Watchdog Timer | 74 |
| Appendix C | System Assignments | 75 |
| C.1 | System I/O Ports | 76 |
| C.2 | Interrupt Assignments | 78 |
| C.3 | 1st MB Memory Map | 88 |

Chapter 1

General Information

This chapter details background information on the SOM-2569 CPU Computer on Module.

Sections include:

- Introduction
- Functional Block Diagram
- Product Specification

1.1 Introduction

SOM-2569 is equipped with Intel Atom[®] x7-E3950, Celeron[®] and Pentium[®] N series platforms manufactured by Intel on 14nm processor technology. This product supports DDR4 2400MT/s with up to 8GB capacity. SOM-2569 supports WI-FI and Bluetooth modules with onboard with dual GbE. This machine also features onboard eMMC storage up to 64 GB. SOM-2569 supports 4 x PCIe x1. SOM-2569 is an energy-efficient and versatile computing solution in a compact module (82 x 50 mm/ 3.22 x 1.96 in).

SOM-2569 WI-FI module supports 802.11a/b/g/n/ac 2x2, is Wave-2 compliant with MU-MIMO, and is a complete 802.11n MIMO solution for 2.4GHz and 5Ghz bands. Maximum PHY data rate up to 866.7Mbps using 80MHz bandwidth. SOM-2569 supports Bluetooth 4.1/4.2 systems and is a LE Secure Connection using a software upgrade. SOM-2569 is compatible with Bluetooth v2.1 and v3.0+EDR. It supports multiple-displays — DP++, HDMI, LVDS, and DDI 4K. SOM-2569 also supports dual channel LVDS at 1366x768 resolution.


Advantech iManager (SUSI4) supports varied embedded application requirements such as a multi-level watchdog timer, voltage and temperature monitoring, thermal protection and mitigation through processor throttling, LCD backlight on/off and brightness control, and embedded storage for customized information. Combined with Advantech WISE-PaaS/RMM, it can remotely monitor and control devices. All Advantech SMARC modules integrate iManager and WISE-PaaS/RMM to offer add-on value for customers.

Acronyms

| Term | Define |
|------------------|--|
| AC'97 | Audio CODEC (Coder-Decoder) |
| ACPI | Advanced Configuration Power Interface – standard to implement power saving modes in PC-AT systems. |
| BIOS | Basic Input Output System – firmware in PC-AT system that is used to initialize system components before handing control over to the operating system. |
| CAN | Controller-area network (CAN or CAN-bus) is a vehicle bus standard designed to allow micro controllers to communicate with each other within a vehicle without a host computer. |
| DDI | Digital Display Interface – containing Display Port, HDMI/DVI, and SDVO. |
| EAPI | <p>Embedded Application Programmable Interface.</p> <p>Software interface for COM Express[®] specific industrial function:</p> <ul style="list-style-type: none"> ■ System information ■ Watchdog timer ■ I²C Bus ■ Flat Panel brightness control ■ User storage area ■ GPIO |
| GbE | Gigabit Ethernet |
| GPIO | General purpose input output |
| HDA | Intel High Definition Audio (HD Audio) refers to the specification released by Intel in 2004 for delivering high definition audio that is capable of playing back more channels at higher quality than AC'97. |
| I ² C | Inter Integrated Circuit – 2 wire (clock and data) signaling scheme allowing communication between integrated circuit, primarily used to read and load register values. |
| ME | Management Engine |
| PC-AT | “Personal Computer – Advanced Technology” – an IBM trademark term used to refer to Intel based personal computer in 1990s. |
| PEG | PCI Express Graphics |
| RTC | Real Time Clock – battery backed circuit in PC-AT systems that keeps system time and date as well as certain system setup parameters. |
| SPD | Serial Presence Detect – refers to serial EEPROM on DRAMs that has DRAM Module configuration information. |
| TPM | Trusted Platform Module, chip to enhance the security features of a computer system. |
| UEFI | Unified Extensible Firmware Interface |
| WDT | Watchdog Timer |

1.2 Functional Block Diagram

Block Diagram

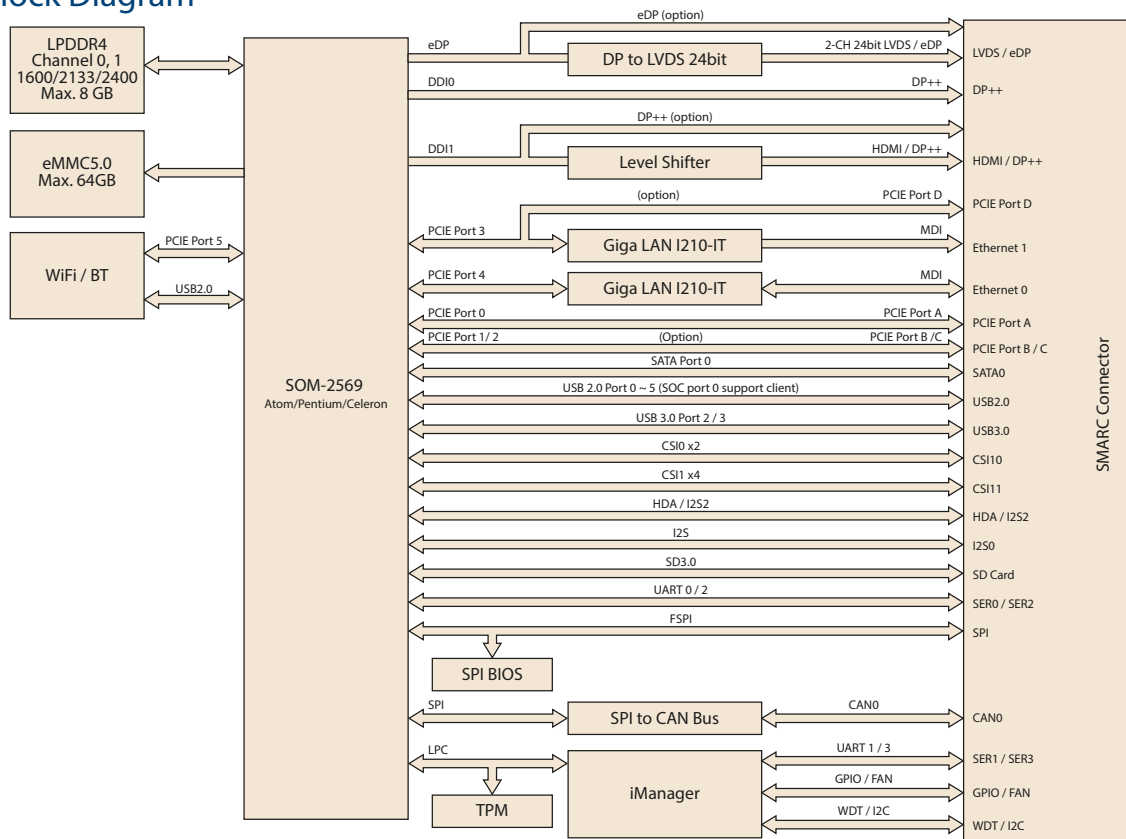

1.3 Product Specification

1.3.1 Compliance

- SMARC 2.0 and SMARC 2.1
- Basic Size – 82 x 50 mm (3.22 x 1.96 in)

1.3.2 Feature List

| Feature | Min/Max in spec | SOM-2569 |
|-------------------|---------------------|----------|
| Memory | 1 | LPDDR4 |
| eMMC (on module) | 0/(N/A) | 1 |
| LVDS LCD/eDP | 0/1 | 1 |
| HDMI/DP++ | 0/1 | 1 |
| DP++ | 0/1 | 1 |
| Camera (MIPI-CSI) | 0/2 | 2 |
| SDIO | 0/1 | 1 |
| SPI | 0/2 | 1 (SPI) |
| Audio I2S | 0/1 | 1 |
| Audio HDA/I2S2 | 0/1 | 1 |
| SMBus | 0/1 | 1 |
| I ² C | I ² C2/6 | 5 |
| Serial Port | 2/4 | 4 |
| CAN Bus | 0/2 | 0 |
| USB2.0 | 2/6 | 6 |
| USB3.0 | 0/2 | 2 |
| USB (OTG) | 0/2 | 1 |
| PCIe (Gen2) | 0/4 | 4 |
| SATA | 0/1 | 1 |
| GbE | 0/2 | 2 |
| Watchdog | 0/1 | 1 |
| GPIO | 12/12 | 12 |
| Management | 1/1 | 1 |
| Boot Select | 1/1 | 1 |
| JTAG (on board) | 0/1 | 0 |
| Wife Module | 0/1 | 1 |
| TPM | 0/(N/A) | 1 |
| RTC | 0/1 | 1 |

1.3.3 Processor System

| CPU | Std. Freq. | Max. Turbo Freq. | Core | Cache (MB) | TDP(W) |
|---------------|------------|------------------|------|------------|--------|
| Atom X7-E3950 | 1.6GHz | 2.0GHz | 4 | 2 | 12 |
| Atom X5-E3940 | 1.6GHz | 1.8GHz | 4 | 2 | 9 |
| Atom X5-E3930 | 1.3GHz | 1.8GHz | 2 | 2 | 6 |
| Pentium N4200 | 1.1GHz | 2.5GHz | 4 | 2 | 6 |
| Pentium N3350 | 1.1GHz | 2.4GHz | 2 | 2 | 6 |

1.3.4 Memory

Dual channels on-board LPDDR4 2400MHz up to 8GB (non-ECC).

1.3.5 Graphics / Audio

Graphic Core: Intel® Gen9 HD/P630 Graphic supports DX12, OGL5.0, OCL2.1, and MPEG2, HEVC/H265, VC1/WMV9 HW decode/encode/transcode acceleration.

| CPU | Graphic Core | Base Freq. | Max Freq. |
|---------------|-----------------|------------|-----------|
| Atom X7-E3950 | Gen9 HD Graphic | 500MHz | 650MHz |
| Atom X5-E3940 | Gen9 HD Graphic | 400MHz | 600MHz |
| Atom X5-E3930 | Gen9 HD Graphic | 400MHz | 550MHz |
| Pentium N4200 | Gen9 HD Graphic | 200MHz | 750MHz |
| Pentium N3350 | Gen9 HD Graphic | 200MHz | 650MHz |

1.3.6 Expansion Interface

1.3.6.1 PCIe x1

PCI Express x1: Supports default 4 ports PCIe x1 compliant to PCIe Gen2 (5.0 GT/s) specification, configurable to PCIe x4 or PCIe x2 upon request. Several configurable combinations may need BIOS modifications. Please contact Advantech sales or FAE for more details.

| SMARC PCIe Lane | Possible Link Configuration | | | |
|-----------------|-----------------------------|----|----|----|
| PCIe A | x1 | x2 | x2 | x4 |
| PCIe B | x1 | | | |
| PCIe C | x1 | x2 | | |
| PCIe D | x1 | | | |

1.3.7 Serial Bus

1.3.7.1 SMBus

Supports SMBus 2.0 specification.

1.3.7.2 I²C Bus

Supports I²C bus 7-bit and 8-bit address modes, up to 400KHz.

1.3.8 I/O

1.3.8.1 Gigabit Ethernet

Ethernet: Intel I210 Gigabit LAN supports 10/100/1000 Mbps Speed.

1.3.8.2 SATA

Supports 1 ports SATA3.0 (6.0 Gb/s). Supports AHCI 1.3.1 mode.

1.3.8.3 USB 3.0/USB 2.0

2 ports USB3.0 (5.0 Gbps) and 6 ports USB2.0 (480Mbps, include 1 client port) which are backwardly compatible to USB1.x.

1.3.8.4 USB 3.0

| | | |
|--------------------|------------|----|
| SMARC | P0 | P1 |
| SoC | P0 | P1 |
| SMARC | USB_0_1_OC | |
| SoC USB_OC# | OC_0# | |

1.3.8.5 USB 2.0

| | | | | | | | |
|--------------------|---------|----|----|-------|----|----|----|
| SMARC | P0 | P1 | P2 | P3 | P4 | P5 | P6 |
| SoC | P0 | P1 | P2 | P3 | P4 | P5 | P6 |
| SMARC | OC_0123 | | | OC_45 | | - | |
| SoC USB_OC# | OC_0 | | | OC_1 | | | |

1.3.8.6 HDA

Supports HD-Audio and LPE Audio for DDI[1:0] (Display Port and HDMI), 1.8V signal level, up to 24 MHz serial data clock.

1.3.8.7 SPI Bus

Supports Master SPI operation only. SPI clock can be 50MHz, 33MHz, or 20MHz, capacity up to 16MB.

1.3.8.8 eMMC

eMMC v5.0 HS400 DDR Mode. Supports data transfers in 1-bit, 4-bit, and 8-bit modes. Maximum HS400 Dual Rate 400 MB/s (200 MHz).

1.3.8.9 GPIO

12 x programmable general purpose Input or output (GPIO).

1.3.8.10 SDIO

Supports one SDIO 3.0 interface.

1.3.8.11 TXE

Trusted Execution Engine 3.0 (TXE3.0).

1.3.8.12 SMBus

SMBus 2.0 specification. Supports SMBALERT# signal. Signal level 3.3V or 1.8V selectable.

1.3.8.13 TPM

Supports TPM 2.0 module by default.

1.3.8.14 Serial port

Watchdog Timer

Supports multi-level watchdog time-out output. Provides 1-65535 levels, from 100ms to 109.22 minutes intervals.

Serial port

2 ports 4-wire HSUART signal interface using RTS/CTS control only:

- Programmable FIFO enable/disable
- 64B iDMA FIFO per channel with up to 32B burst capability
- Even, odd, or no parity bit selectable
- 1, 1.5, or 2 stop bit selectable

BIOS

BIOS chip is on module by default. Also allows the user to place BIOS chip on carrier board with appropriate design and a pull-down to GND on BIOS_DISABLE# pin.

Note! *If system COMS is cleared, we strongly suggest to go to the BIOS setup menu and load the default settings at the first time of boot up.*



1.3.9 Power Management

1.3.9.1 Power Supply

Supports both ATX and AT power modes. VSB is for suspend power and can be option if not require standby (suspend-to-RAM) support. RTC Battery may be option if keep time/date is not require.

- **VCC:** 5V +/- 5%
- **VSB:** 5V +/- 5% (Suspend power)
- **RTC Battery Power:** 2.0V - 3.3V

1.3.9.2 Power Sequence

According to SMARC 2.0/SMARC 2.1 specifications

1.3.9.3 Wake Event

Various wake-up events for different scenarios.

Wake-on-LAN(WOL): Wake to S0 from S3/S4/S5.

USB Wake: Wake to S0 from S3/S4.

PCIe Device Wake: depends on user inquiry and may need customized BIOS.

1.3.9.4 Advantech S5 ECO Mode (Deep Sleep Mode)

Advantech iManager provides additional features for allowing the system to enter a suspended low power mode – S5 ECO mode. In this mode, the module will cut all power including suspend/active power to the chipset and keep an on-module controller active. In this mode, only <50mW of power will be consumed increasing battery life. While this mode is enabled in BIOS, the system (or module) will only boot using the power button in-place of other methods such as WOL.

1.3.10 Environment

1.3.10.1 Temperature

Operating: 0 ~ 60 °C (32 ~ 140 °F), **Storage:** -40 °C ~ 85 °C(-40 ~ 185 °F)

Extended temperature support: -40 ~ 85 °C(-40 ~ 185 °F)

1.3.10.2 Humidity

Operating: 40 °C @ 95% relative humidity, non-condensing

Storage: 60 °C @ 95% relative humidity, non-condensing

1.3.10.3 Vibrations

3.5G, 5~500Hz X/Y/Z Axis

1.3.10.4 Drop Test (Shock)

Federal Standard 101 Method 5007 test procedure with standard packing.

1.3.10.5 EMC

CE EN55022 Class B and FCC Certifications: validated with standard development boards on Advantech chassis.

1.3.11 MTBF

Please refer Advantech SOM-2569 Series Reliability Prediction Report No: TBD. (Estimated date: 2020 Q1).

1.3.12 OS Support

To install the drivers, please connect to the Internet and browse to the website <http://support.advantech.com.tw> to download the setup file.

1.3.13 Advantech iManager

Supports APIs for GPIO, smart fan control, multi-stage watchdog timer and output, temperature sensor, hardware monitor, etc. Followed by PICMG EAPI 1.0 specification that provides backward compatibility.

1.3.14 Power Consumption

| Power Consumption Table (Watt.) | | | | |
|---------------------------------|---------------------|------------|---------|----------------|
| VSB=5V | Active Power Domain | | | Mechanical off |
| Power State | S0 Max. Load | S0 Burn-in | S0 Idle | RTC (uA) |
| SOM-2569+SOM-DB2500 | 14.11 | 11.943 | 3.45W | 5.46 |

Hardware Configurations:

- MB:** SOM-2569 CNCCA-S7A1
- DRAM:** 8GB DDR4 2400MHz
- Carrier board:** SOM-DB2500-00A1
- Wireless function:** Wi-Fi/BT

Test Condition:

- Test temperature:** room temperature (about 25 °C /77 °F)
- Test voltage:** rated voltage DC +5.0V
- Test loading:**
 - **Maximum load mode:** According to Intel thermal/power test tools

- **Burn-in mode:** Burn-in Test V8.1 Pro (1023) for 64 bit Windows (CPU, RAM, 2D&3D Graphics and Disk with 100%)
 - **Idle mode:** DUT power management off and no running any program
4. **OS:** Windows 10 Enterprise

1.3.15 Performance

For reference performance or benchmark data that compare with other module, please refer to “Advantech COM Performance & Power Consumption Table”.

1.3.16 Selection Guide w/ P/N

| P/N | CPU | Freq. | Cores | CPU TDP | Memory | eMMC | Wi-Fi/ BT | Thermal Solution | Operating Temperature |
|--------------------|---------------|-------|-------|---------|--------|-------|-----------|------------------|---------------------------|
| SOM-2569CNCCA-S7A1 | Atom x7-E3950 | 1.6 | 4 | 12W | 8GB | 64GB | Yes | Passive | 0 ~ 60 °C (32 ~140 °F) |
| SOM-2569BNBCA-S7A1 | Atom x7-E3950 | 1.6 | 4 | 12W | 4GB | 32GB | Yes | Passive | 0 ~ 60 °C (32 ~140 °F) |
| SOM-2569BNBC-S7A1 | Atom x7-E3950 | 1.6 | 4 | 12W | 4GB | 32GB | - | Passive | 0 ~ 60 °C (32 ~140 °F) |
| SOM-2569BNBC-S6A1 | Atom x5-E3940 | 1.6 | 4 | 9.5W | 4GB | 32GB | - | Passive | 0 ~ 60 °C (32 ~140 °F) |
| SOM-2569BNOC-S3A1 | Atom x5-E3930 | 1.3 | 2 | 6.5W | 4GB | - | - | Passive | 0 ~ 60 °C (32 ~140 °F) |
| SOM-2569CNCCA-S2A1 | Pentium N4200 | 1.1 | 4 | 6W | 8GB | 64GB | Yes | Passive | 0 ~ 60 °C (32 ~140 °F) |
| SOM-2569BCBC-S1A1 | Celeron N3350 | 1.1 | 2 | 6W | 4GB | 32GB | - | Passive | 0 ~ 60 °C (32 ~140 °F) |
| SOM-2569BNBX-S7A1 | Atom x7-E3950 | 1.6 | 4 | 12W | 4GB | 32GB- | | Passive | -40 ~ 85 °C (-40 ~185 °F) |

1.3.17 Packing List

| Part No. | Description | Quantity |
|----------------|-------------------------------------|----------|
| - | SOM-2569 SMARC Module | 1 |
| 1960093125T001 | SOM-2569 E3900 SKU heat spreader | 1 |
| 1970004428N001 | SOM-2569 N Series SKU heat spreader | 1 |

1.3.18 Development Board

| Part No. | Description |
|-----------------|-----------------------------|
| SOM-DB2500-00A1 | Development Board for SMARC |

1.3.19 Optional Accessories

| Part No. | Description |
|----------------|--------------------------------|
| 1960093089T001 | Semi-Heatsink, 82L x 34W x 18H |

1.3.20 Pin Description

Advantech provides useful checklists for schematic design and layout routing. The schematic checklist details pin electrical properties and connection instructions for different user scenarios. The user checklist further specifies layout constraints and recommendations for trace length, impedance, and other relevant information during design.

Please contact the nearest Advantech branch office for access to design documents and further advance support.

Chapter 2

Mechanical Information

This chapter details mechanical information on the SOM-2569 CPU Computer on Module.

Sections include:

- Board Information
- Mechanical diagram
- Assembly diagram

2.1 Board Information

The figures below indicate the main chips on SOM-2569 Computer-on-Module. Please aware on these positions while design customer's own carrier board to avoid mechanical violence and thermal solutions contacts for best thermal dissipation performance.

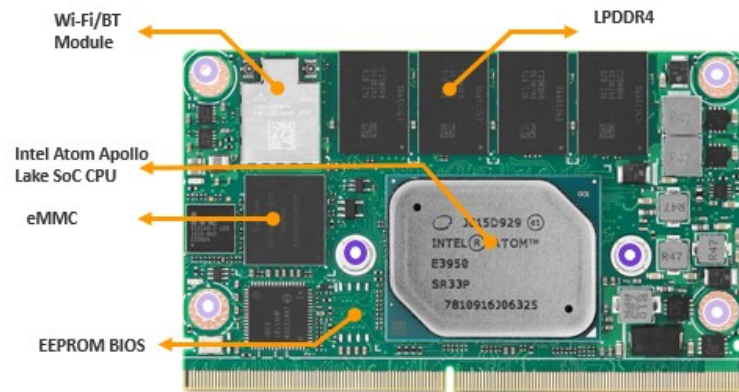


Figure 2.1 Atom_E3900 Board chips identify – Front



Figure 2.2 Atom_E3900 Board chips identify – Rear

2.2 Mechanical Diagram

For more detail about 2D/3D models, please refer to the Advantech COM support service website <http://com.advantech.com>.

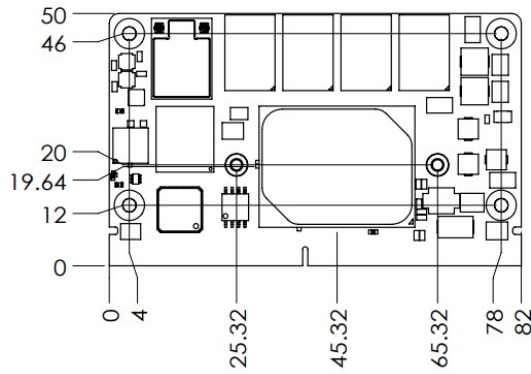


Figure 2.3 Atom_E3900 Board Mechanical Diagram - Front

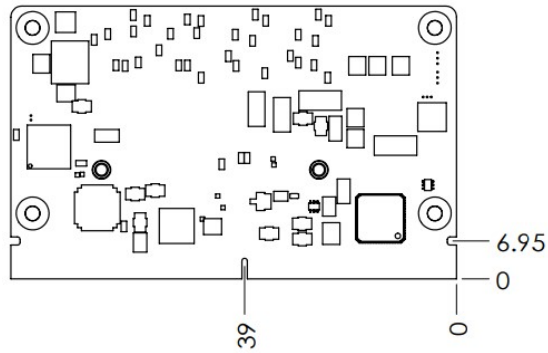


Figure 2.4 Atom_E3900 Board Mechanical Diagram - Rear




Figure 2.5 Atom_E3900 Board Mechanical Diagram - Side1



Figure 2.6 Atom_E3900 Board Mechanical Diagram - Side2

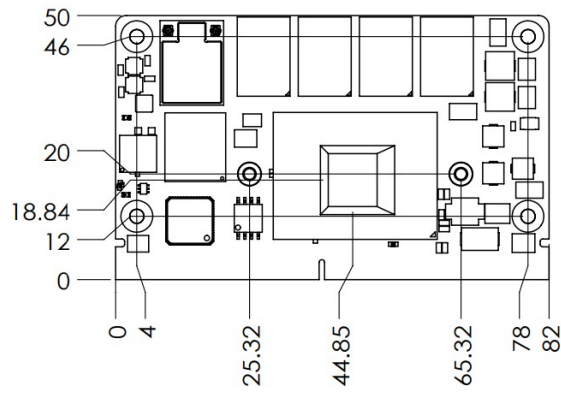


Figure 2.7 Pentium_Celeron_N_J Series Board Mechanical Diagram – Front

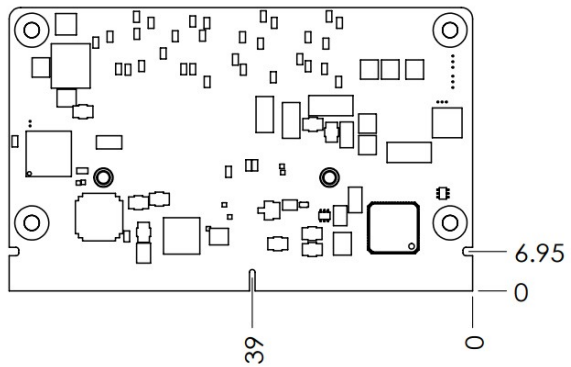


Figure 2.8 Pentium_Celeron_N_J Series Board Mechanical Diagram – Rear




Figure 2.9 Pentium_Celeron_N_J Series Board Mechanical Diagram – Side1

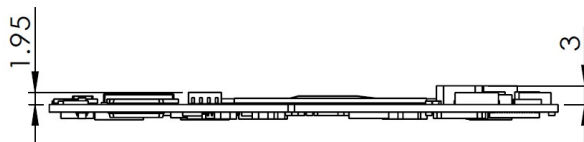


Figure 2.10 Pentium_Celeron_N_J Series Board Mechanical Diagram – Side2

2.3 Assembly Diagram

These figures demonstrate the order of assembly for the thermal module, COM module to carrier board.



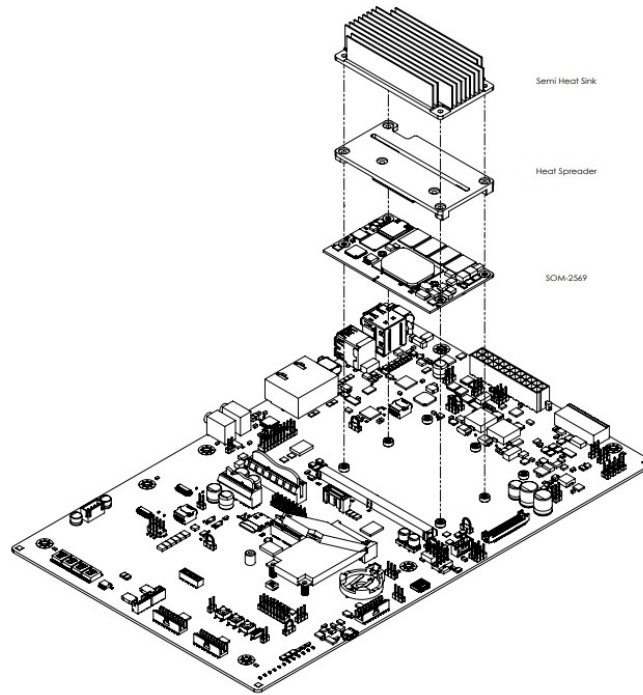


Figure 2.11 Assembly Diagram

There are 4 reserved screw holes for SOM-2569 to be pre-assembled with heat spreader. Please consider the CPU and chip height tolerance when designing your thermal solution.

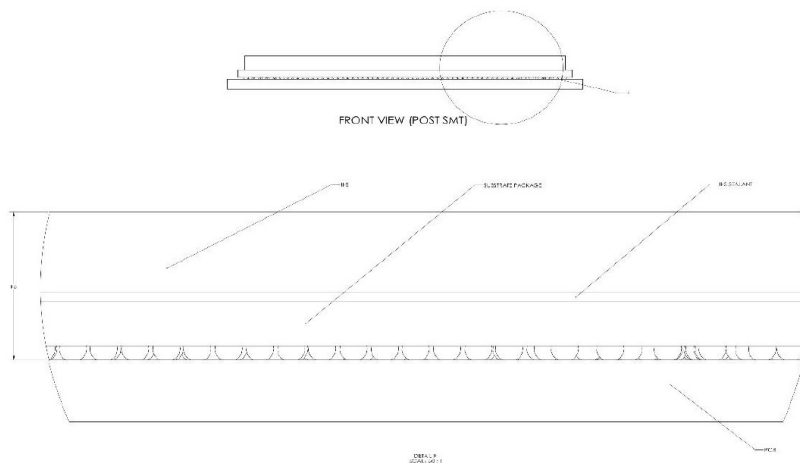

Intel Atom® Processor E3900 & A3900 Series
Figure 2.12 Main Chip Height and Tolerance

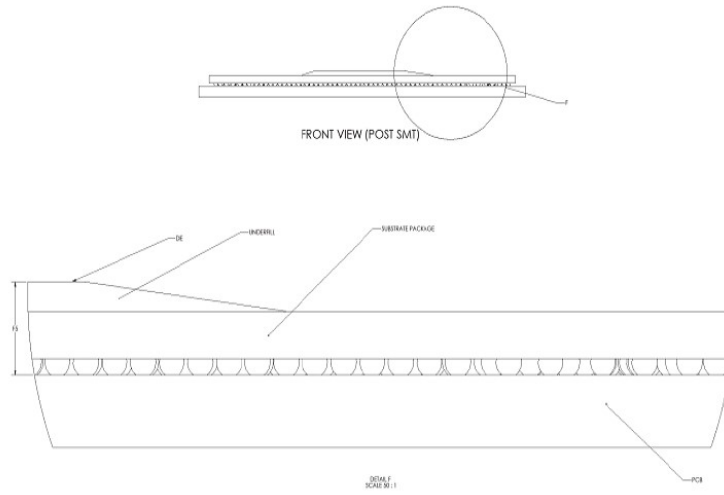

Intel® Pentium and Celeron N and J Series Processors
Figure 2.13 Main Chip Height and Tolerance

Chapter 3

AMI BIOS

This chapter details BIOS setup information for the SOM-2569 CPU computer-on module.

Sections include:

- Introduction
- Entering Setup
- Hot/Operation Key
- Exit BIOS Setup Utility

3.1 Introduction

AMI BIOS has been integrated into motherboards for over a decade. With the AMI BIOS Setup Utility, users can modify BIOS settings and control various system features. This chapter describes the basic navigation of the BIOS Setup Utility.



Figure 3.1 Setup program initial screen

AMI's BIOS ROM has a built-in Setup program that allows users to modify the basic system configurations. This information is stored in a flash ROM so it retains the Setup information when the power is turned off.

3.2 Entering Setup

Turn on the computer and press or <ESC> to enter the Setup menu.

3.3 Main Setup

When users first enter the BIOS Setup Utility, users will enter the Main setup screen. Users can always return to the Main setup screen by selecting the Main tab. There are two Main Setup options. They are described in this section. The Main BIOS Setup screen is shown below.



Figure 3.2 Main setup screen

The Main BIOS setup screen has two main frames. The left frame displays all the options that can be configured. Grayed-out options cannot be configured; options in blue can. The right frame displays the key legend.

Above the key legend is an area reserved for a text message. When an option is selected in the left frame, it is highlighted in white. Often a text message will accompany it.

System time / System date

Use this option to change the system time and date. Highlight System Time or System Date using the <Arrow> keys. Enter new values through the keyboard. Press the <Tab> key or the <Arrow> keys to move between fields. The date must be entered in MM/DD/YY format. The time must be entered in HH: MM: SS format.

3.4 Advanced BIOS Features Setup

Select the Advanced tab from the SOM-2569 setup screen to enter the Advanced BIOS Setup screen. Users can select any item in the left frame of the screen, such as CPU Configuration, to go to the sub menu for that item. Users can display an Advanced BIOS Setup option by highlighting it using the <Arrow> keys. All Advanced BIOS Setup options are described in this section. The Advanced BIOS Setup screens are shown below. The sub menus are described on the following pages.

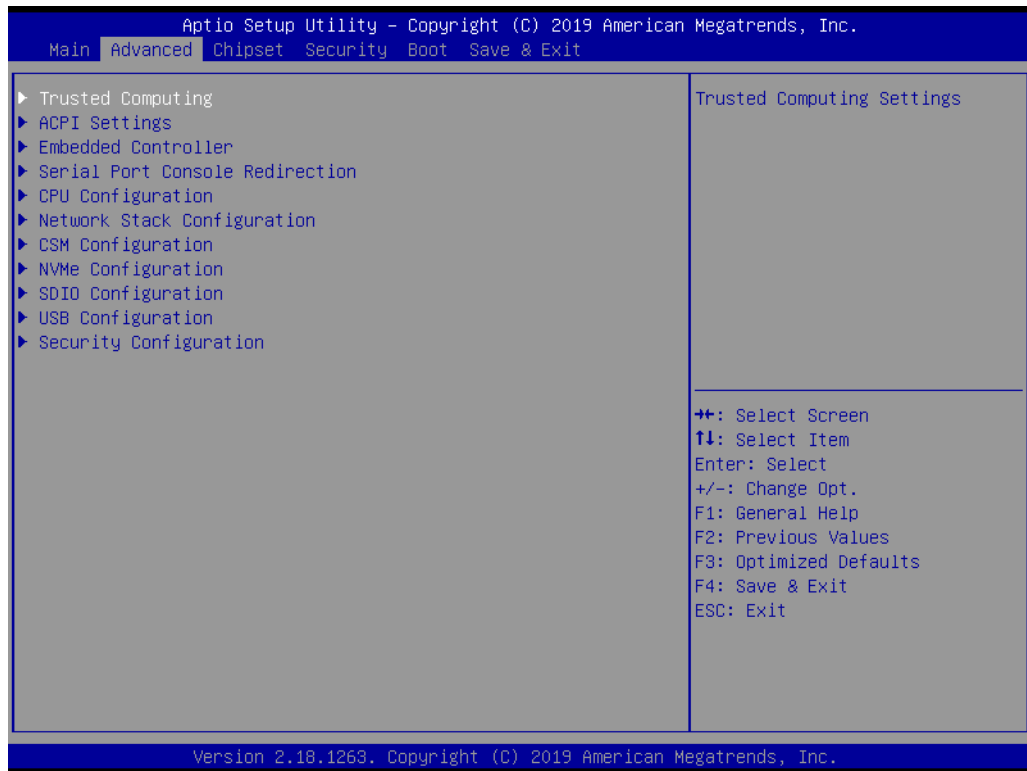


Figure 3.3 Advanced BIOS features setup screen

Trusted Computing

Trusted Computing Settings.

ACPI Settings

System ACPI Parameters.

Embedded Controller

Embedded Controller Parameters.

Serial Port Console Redirection

Serial Port Console Redirection.

CPU Configuration

CPU Configuration Parameters.

Network Stack Configuration

Network Stack Settings.

CSM Configuration

CSM configuration: Enable/Disable, Option ROM execution settings, etc.

NVMe Configuration

NVMe Device Options Settings.

SDIO Configuration

SDIO Configuration Parameters.

USB Configuration

USB Configuration Parameters.

Platform Trust Technology

Platform Trust Technology.

Security Configuration

Intel® Anti-Theft Technology Configuration.

3.4.1 Trusted Computing

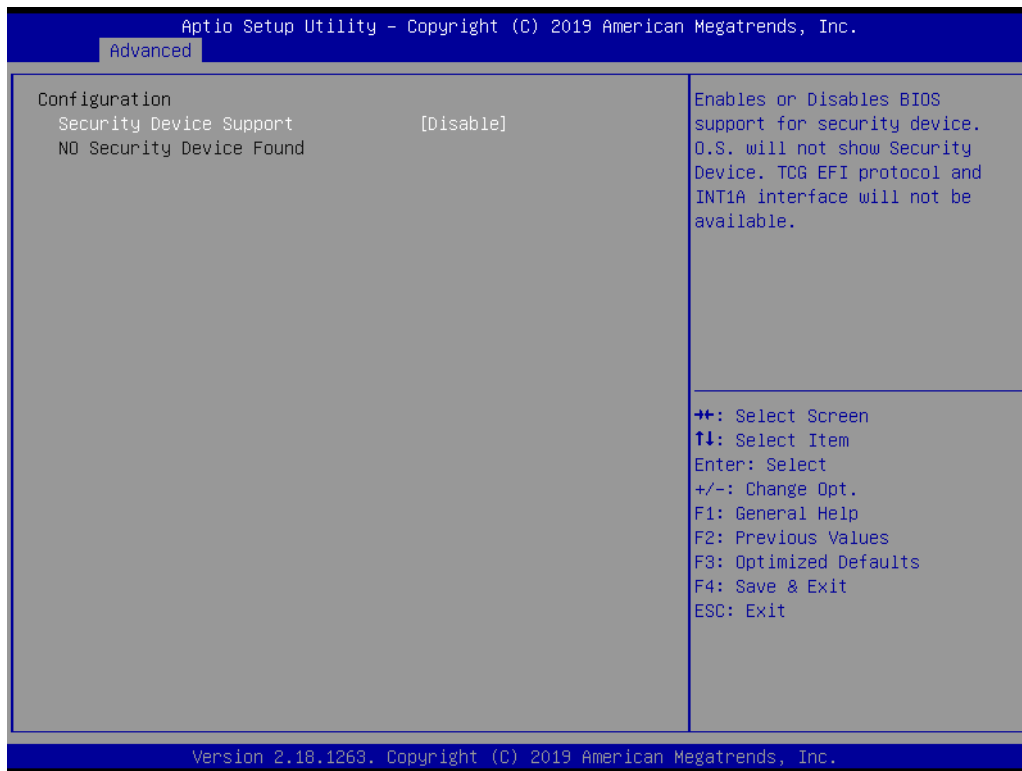


Figure 3.4 Trusted Computing

Security Device Support

Enables or Disables BIOS support for security device. The OS will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

3.4.2 ACPI Settings

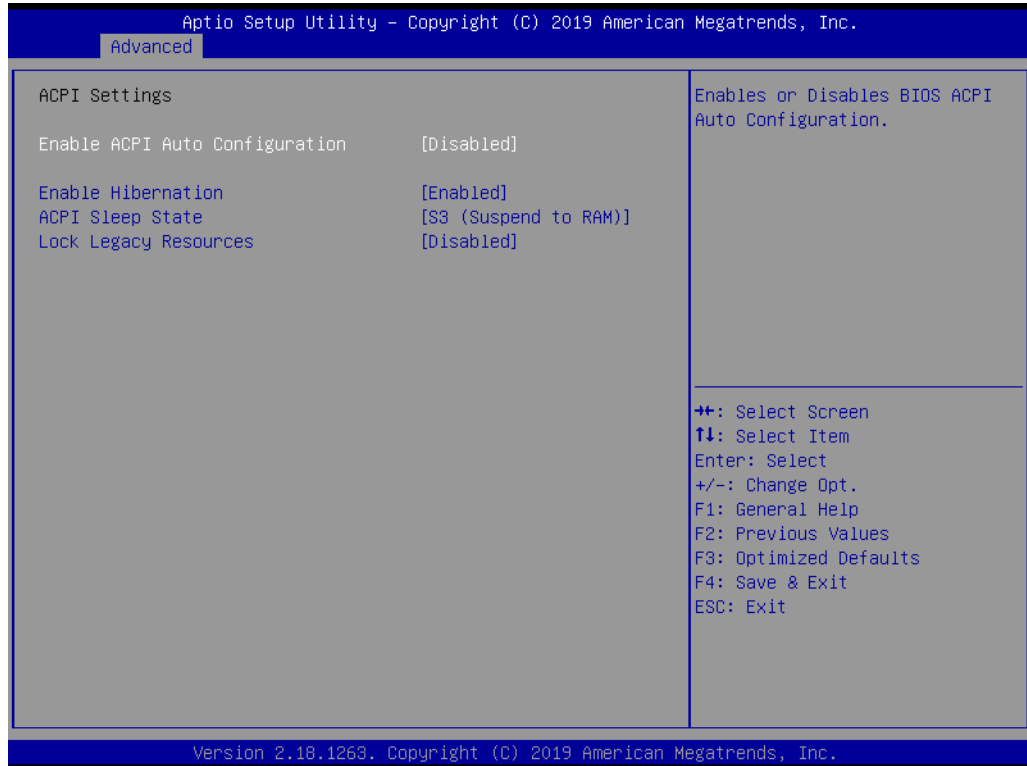


Figure 3.5 ACPI Settings

Enable ACPI Auto Configuration

Enables or Disables BIOS ACPI Auto Configuration.

Enable Hibernation

Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may be not effective with some OS.

ACPI Sleep State

Select the highest ACPI sleep state the system will enter when the SUSPEND button is pressed.

Lock Legacy Resources

Enables or Disables Lock of Legacy Resources.

3.4.3 Embedded Controller



Figure 3.6 Embedded Controller

CPU Shutdown Temperature

CPU Shutdown Temperature.

Smart Fan - Carrier Board

Control Carrier Board Smart FAN function. Get value from EC and only set value when using Save Changes.

Backlight Enable Polarity

Switch Backlight Enable Polarity for Native or Invert.

Brightness PWM Polarity

Backlight Control Brightness PWM Polarity for Native or Invert.

Power Saving Mode

Select power saving Mode.

Serial Port 1 Configuration

Set parameters of Serial Port 1 (COMA).

Serial Port 2 Configuration

Set parameters of Serial Port 2 (COMB).

Hardware Monitor

Monitor hardware status.

3.4.3.1 Serial Port 1 Configuration



Figure 3.7 Serial Port 1 Configuration

Serial Port

Enable or disable Serial Port (COM).

Device Settings

Set parameters of Serial Port 1 (COMA).

Change Settings

Select an optimal setting for Super I/O Device.

3.4.3.2 Serial Port 2 Configuration

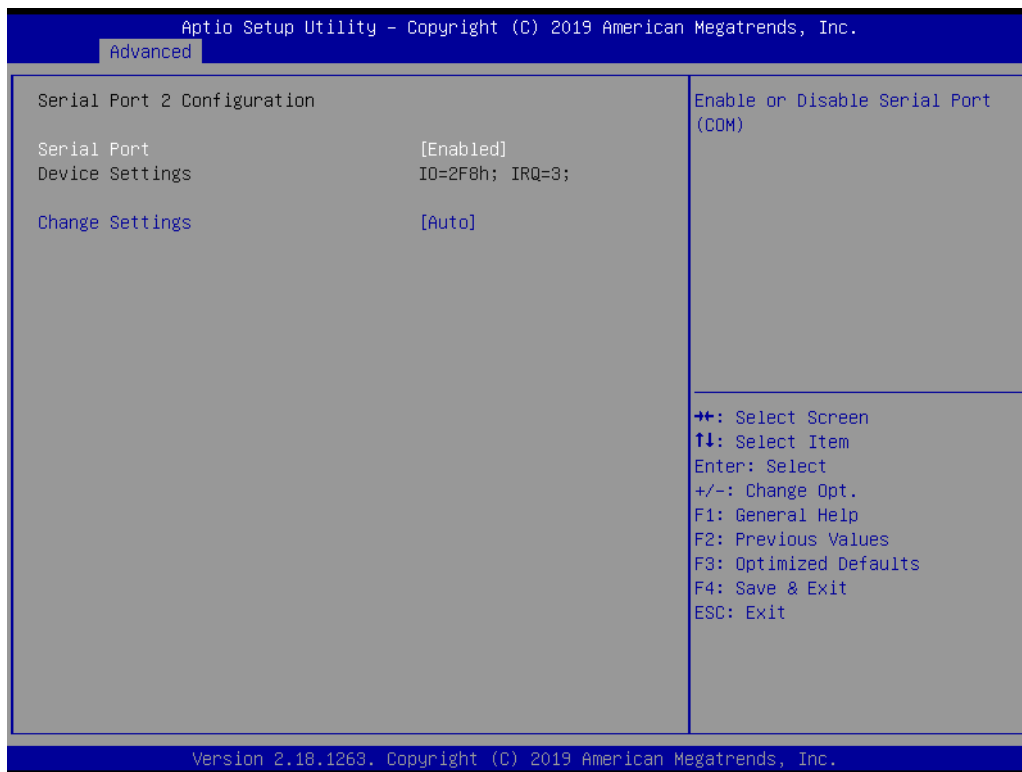


Figure 3.8 Serial Port 2 Configuration

Serial Port

Enable or Disable Serial Port (COM).

Device Settings

Set parameters of Serial Port 2 (COMB).

Change Settings

Select an optimal setting for Super I/O Device.

3.4.3.3 Hardware Monitor

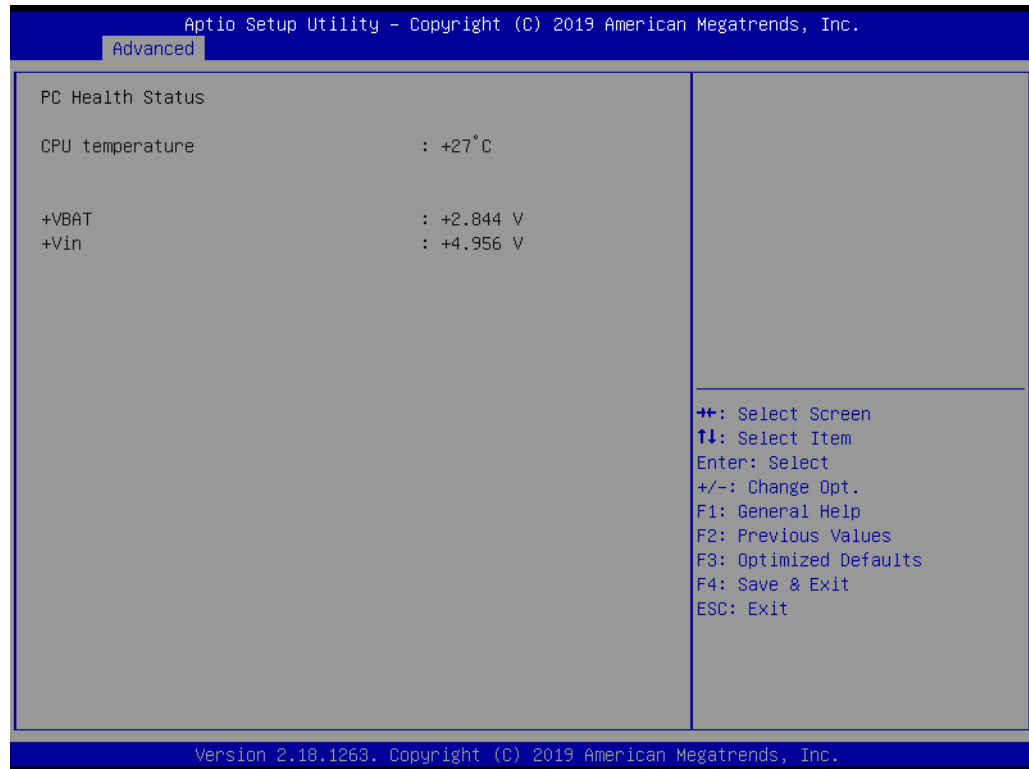


Figure 3.9 Hardware Monitor

3.4.4 Serial Port Console Redirection

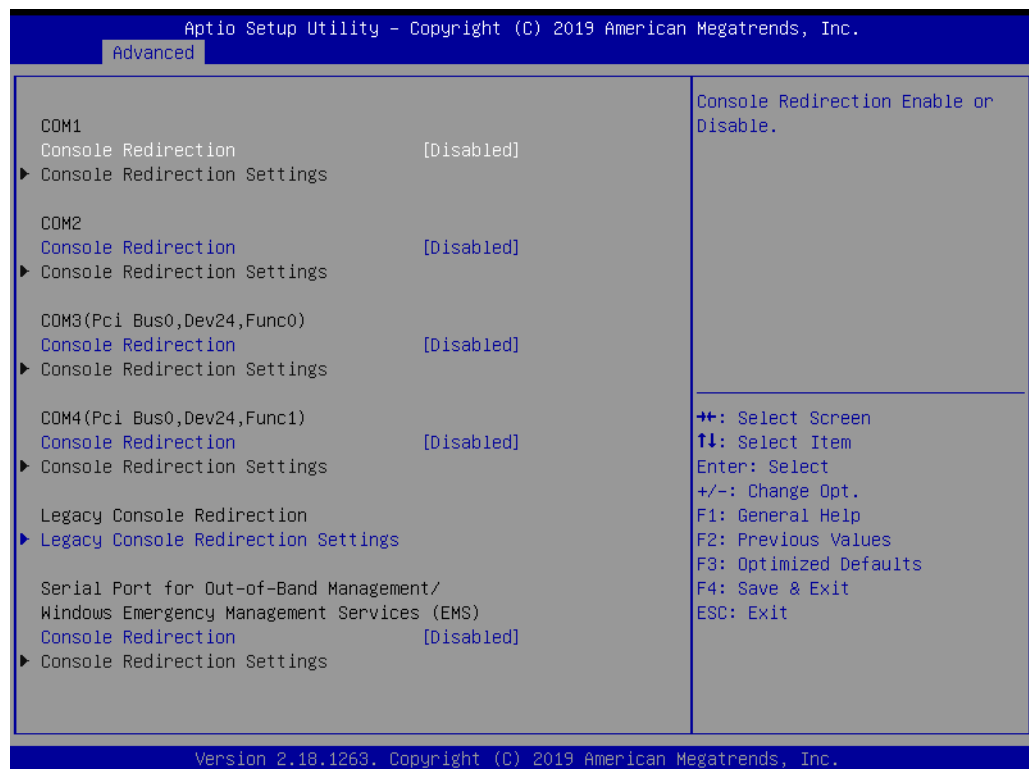


Figure 3.10 Serial Port console Redirection

COM1

Console Redirection

Console Redirection Enable or Disable.

Console Redirection Settings

These settings specify how the host computer and the remote computer (which the user is using) will exchange data. Both computers should have the same or compatible settings.

COM2**Console Redirection**

Console Redirection Enable or Disable.

Console Redirection Settings

These settings specify how the host computer and the remote computer (which the user is using) will exchange data. Both computers should have the same or compatible settings.

COM3**Console Redirection**

Console Redirection Enable or Disable.

Console Redirection Settings

These settings specify how the host computer and the remote computer (which the user is using) will exchange data. Both computers should have the same or compatible settings.

COM4**Console Redirection**

Console Redirection Enable or Disable.

Console Redirection Settings

These settings specify how the host computer and the remote computer (which the user is using) will exchange data. Both computers should have the same or compatible.

Legacy Console Redirection**Legacy Console Redirection Settings**

Legacy Console Redirection Settings.

Serial Port for Out-of-Band Management/ Windows Emergency Management Services (EMS)**Console Redirection**

Console Redirection Enable or Disable.

Console Redirection Settings

Theses settings specify how the host computer and the remote computer (which the user is using) will exchange data. Both computers should have the same or compatible settings.

3.4.5 CPU Configuration

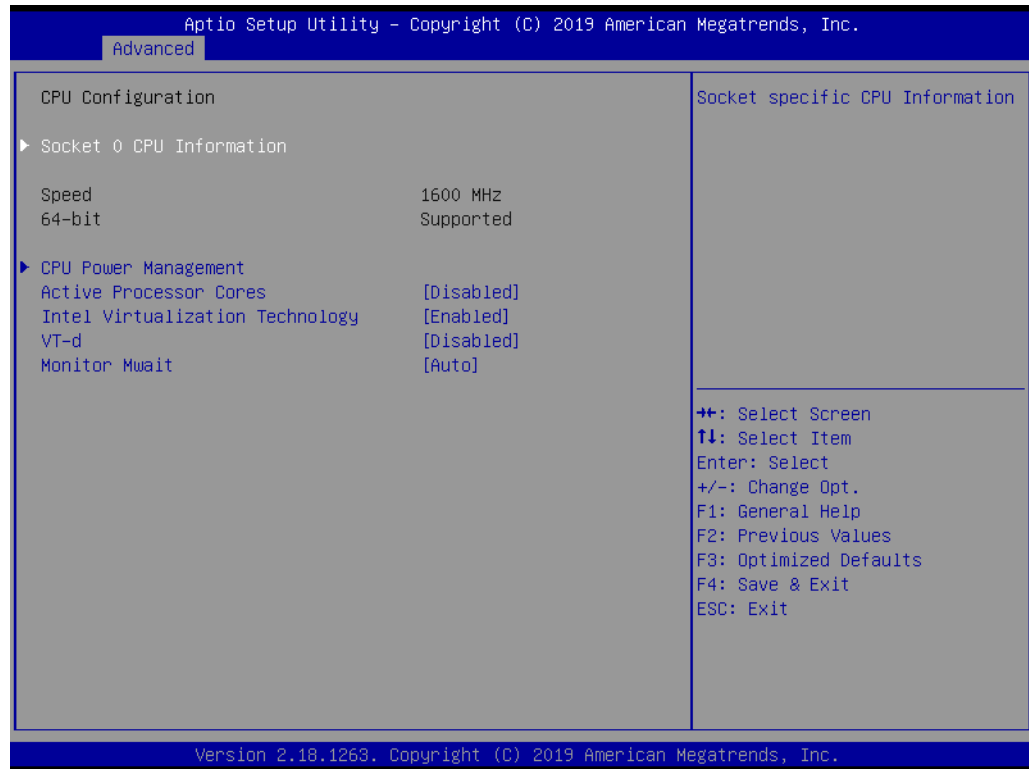


Figure 3.11 CPU Configuration

Socket 0 CPU Information

Socket specific CPU Information.

Speed

Displays the Processor Speed.

64-bit

Displays if 64-bit is supported.

CPU Power Management

CPU Power Management options.

Active Processor Cores

Number of cores to enable in each processor package.

Intel Virtualization Technology

When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

VT-d

Enable/Disable CPU VT-d.

Monitor Mwait

Enable/Disable Monitor Mwait.

3.4.5.1 Socket 0 CPU Information

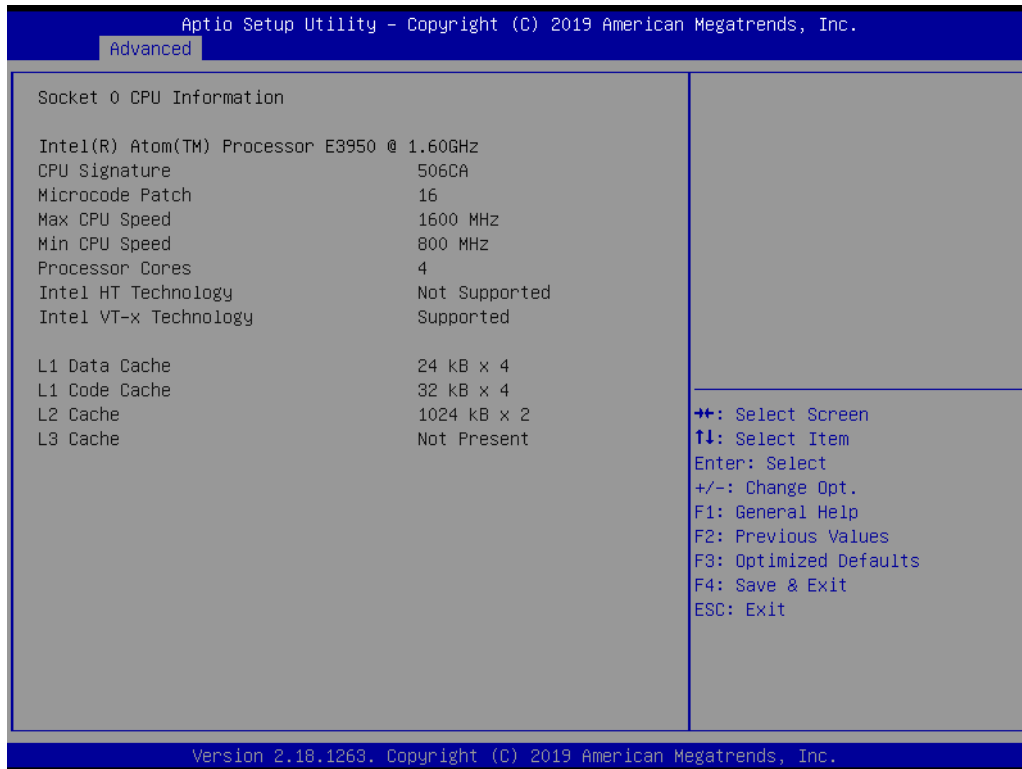


Figure 3.12 Socket 0 CPU Information

CPU Signature

Displays CPU Signature.

Microcode Patch

CPU Microcode Patch Revision.

Max CPU Speed

Displays the Max CPU Speed.

Min CPU Speed

Displays the Max CPU Speed.

Processor Cores

Displays number of cores.

Intel HT Technology

When Hyper-threading is enabled, 2 logical CPUs per core are present.

Intel VT-x Technology

CPU VMX hardware support for virtual machines.

L1 Data Cache

L1 Data Cache Size.

L1 Code Cache

L1 Code Cache Size.

L2 Cache

L2 Cache Size.

L3 Cache

L3 Cache Size.

3.4.5.2 CPU Power Management



Figure 3.13 CPU Power Management

EIST

Enable/Disable Intel SpeedStep.

Turbo Mode

Turbo Mode.

Boot performance mode

Select the performance state that the BIOS will set before OS handoff.

C-States

Enable/Disable C States.

Power Limit 1 Enable

Enable/Disable Power Limit 1.

3.4.6 Network Stack Configuration



Figure 3.14 Network Stack Configuration

Network Stack

Enable/Disable UEFI Network Stack.

3.4.7 CSM Configuration

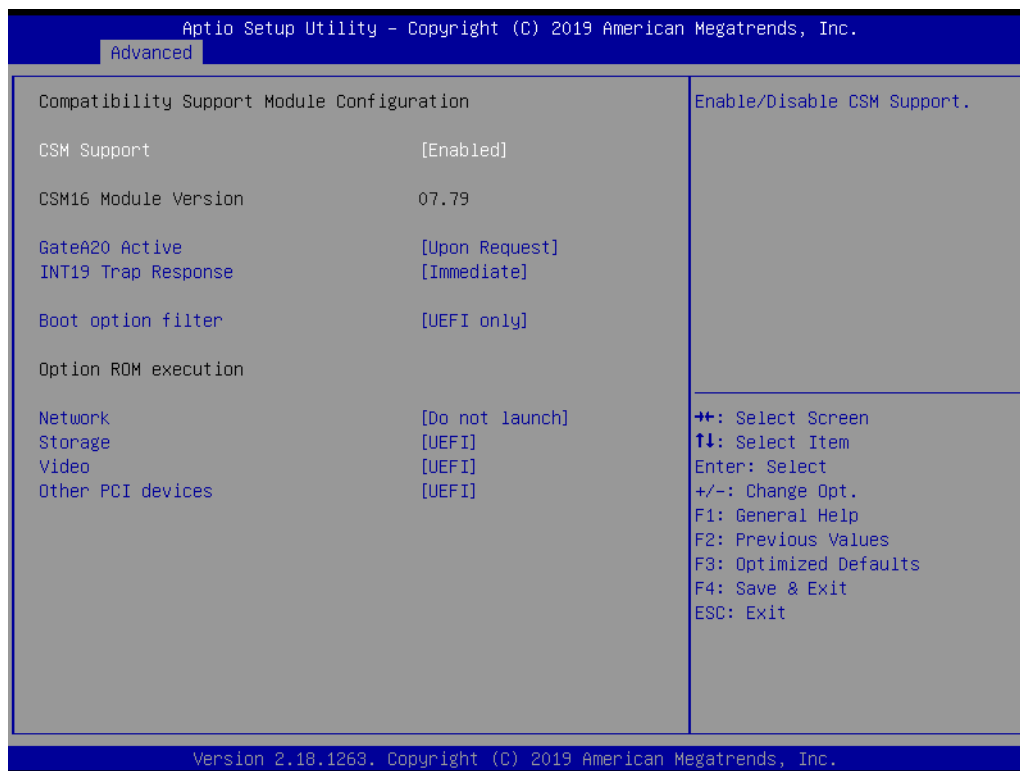


Figure 3.15 CSM Configuration

CSM Support

Enable/Disable CSM Support.

CSM16 Module Version

CSM16 Module Version.

GateA20 Active

This item is useful when RT code is executed above 1MB. When this is set as "Upon Request", GA20 can be disabled using BIOS services. When it's set as "Always", it does not allow disabling of GA20.

Option ROM Messages

Set display mode for Option ROM.

INT19 Trap Response

BIOS reaction on INT19 trapping by Option ROM: IMMEDIATE - execute the trap right away; POSTPONED - execute the trap during legacy boot.

Boot option filter

This option controls Legacy/UEFI ROMs priority.

Option ROM execution

Network

Controls the execution of UEFI and Legacy PXE OpROM.

Storage

Controls the execution of UEFI and Legacy Storage OpROM.

Video

Controls the execution of UEFI and Legacy Video OpROM.

Other PCI devices

Determines OpROM execution policy for devices other than Network, Storage, or Video.

3.4.8 NVMe Configuration

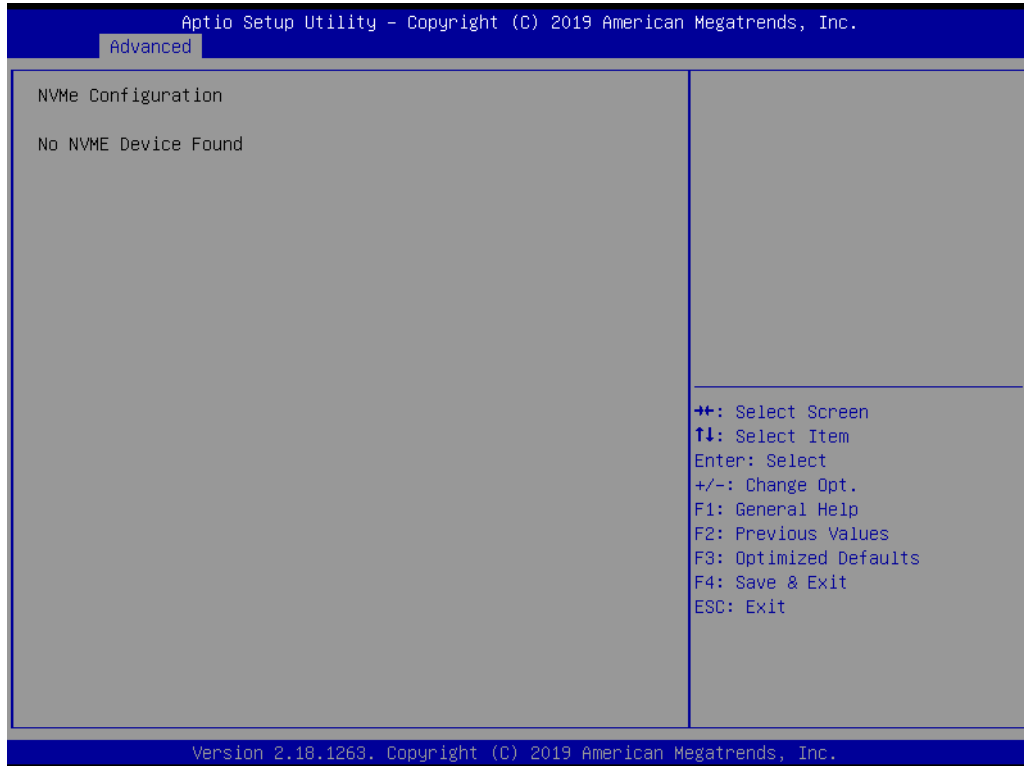


Figure 3.16 NVMe Configuration

3.4.9 SDIO Configuration



Figure 3.17 SDIO Configuration

SDIO Access Mode

Auto Option: Access SD device in DMA mode if the controller supports it, otherwise in PIO mode. DMA Option: Access SD device in DMA mode. PIO Option: Access SD device in PIO mode.

MMC – G4032

3.4.10 USB Configuration

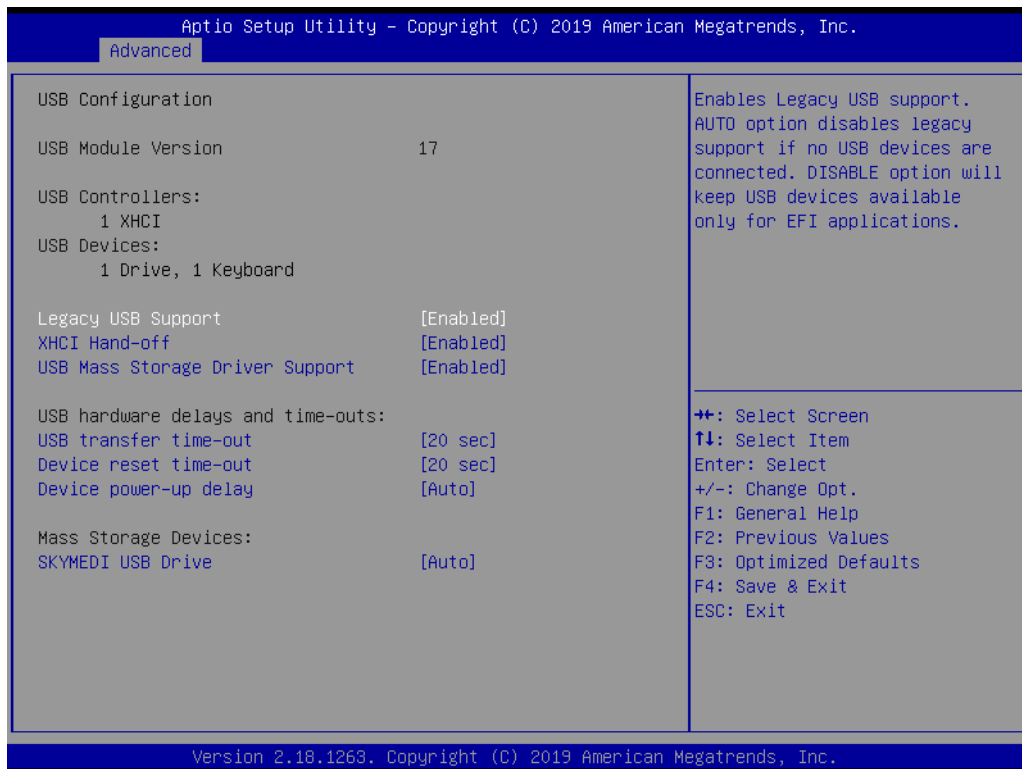


Figure 3.18 USB Configuration

Legacy USB Support

Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.

XHCI Hand-off

This is a workaround for OS without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.

USB Mass Storage Driver Support

Enable/Disable USB Mass Storage Driver Support.

USB transfer time-out

The time-out value for Control, Bulk, and Interrupt transfers.

Device reset time-out

USB mass storage device Start Unit command time-out.

Device power-up delay

Maximum time the device will take before it properly reports itself to the Host Controller.

'Auto' uses default value: for a Root port it is 100 ms, for a Hub port the delay is taken from Hub descriptor.

Device power-up delay in seconds

Delay range is 1 ~ 40 seconds, in one second increments.

3.4.11 Security Configuration

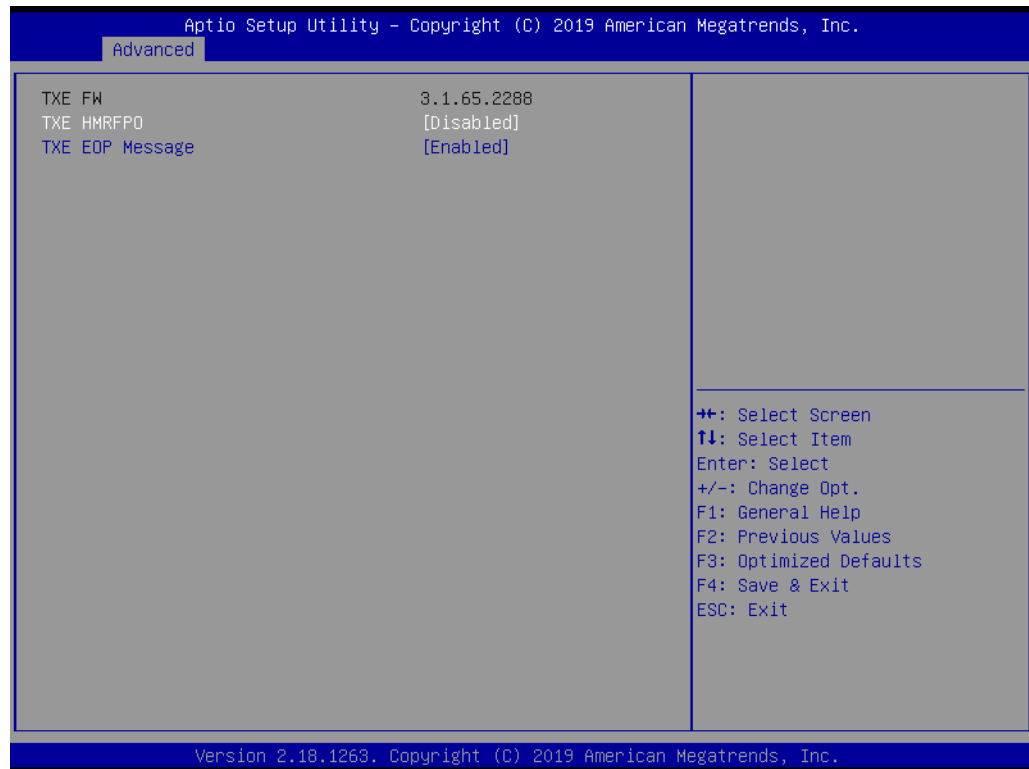


Figure 3.19 Security Configuration

TXE HMRFPD

TXE EOP Message

Send EOP Message Before Enter OS.

3.5 Chipset Setup

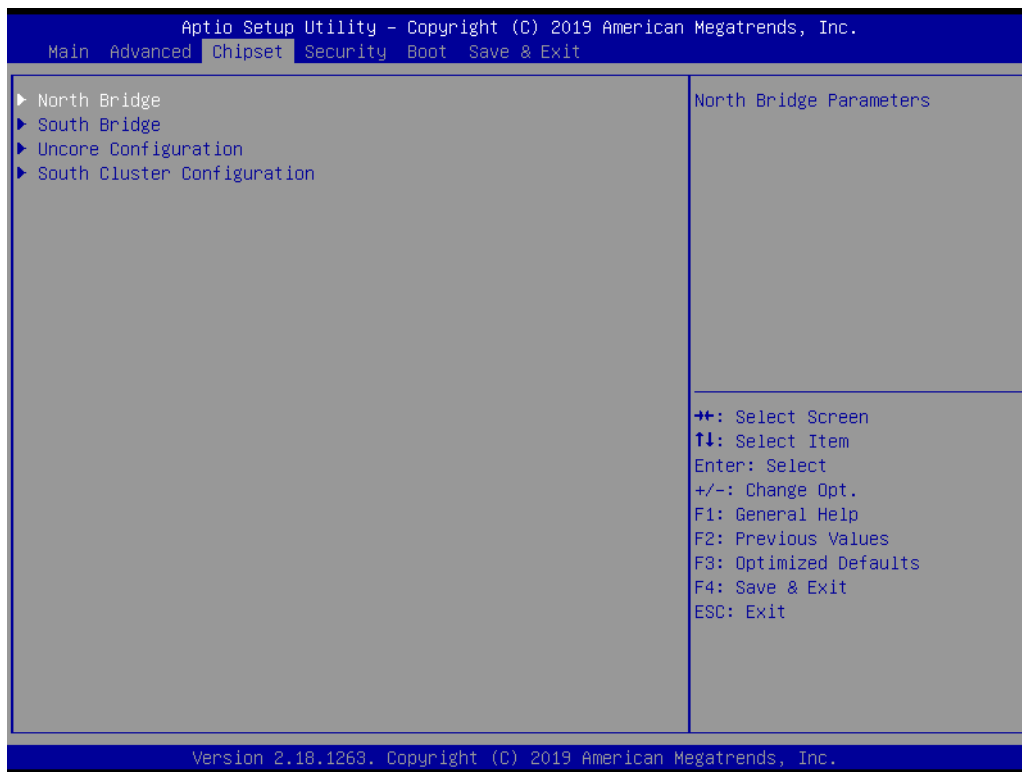


Figure 3.20 Chipset Setup

North Bridge

North Bridge Parameters.

South Bridge

South Bridge Parameters.

Uncore Configuration

Uncore Configuration.

South Cluster Configuration

South Cluster Configuration.

3.5.1 North Bridge

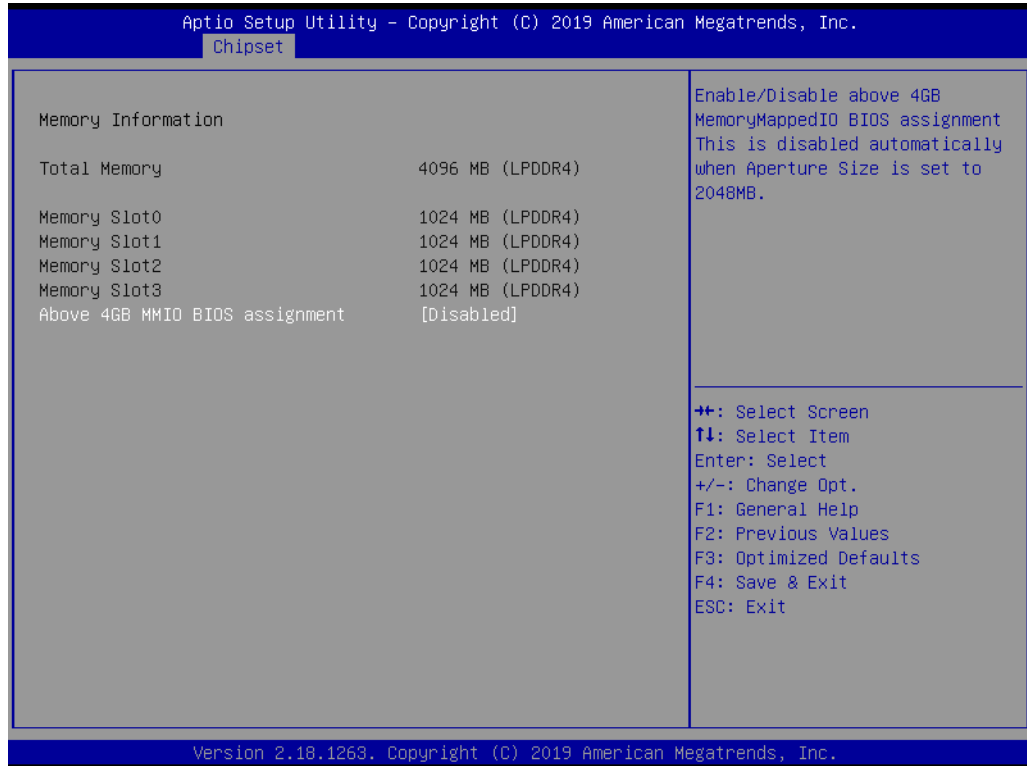


Figure 3.21 North Bridge

Total Memory

Total Memory in the system.

Memory Slot0

Memory in the slot.

Memory Slot1

Memory in the slot.

Memory Slot2

Memory in the slot.

Memory Slot3

Memory in the slot.

Above 4GB MMIO BIOS assignment

Enable/Disable above 4GB Memory Mapped I/O BIOS assignment. This is disabled automatically when Aperture Size is set to 2048MB.

3.5.2 South Bridge

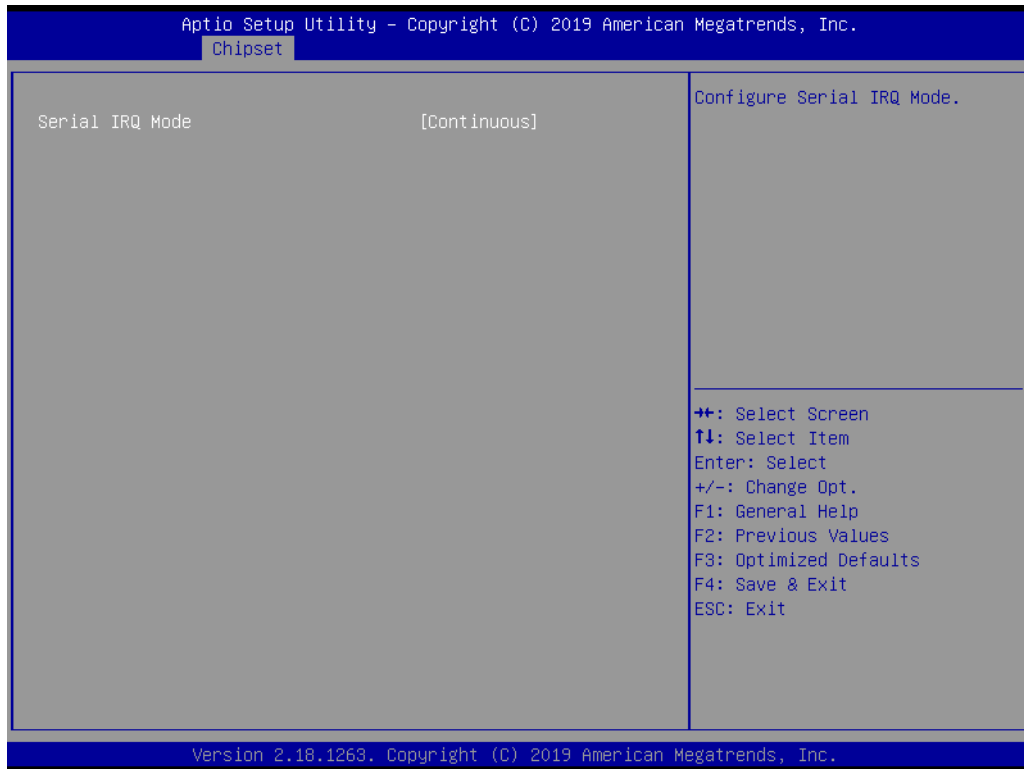


Figure 3.22 South Bridge

Serial IRQ Mode

Configure Serial IRQ Mode.

3.5.3 Uncore Configuration

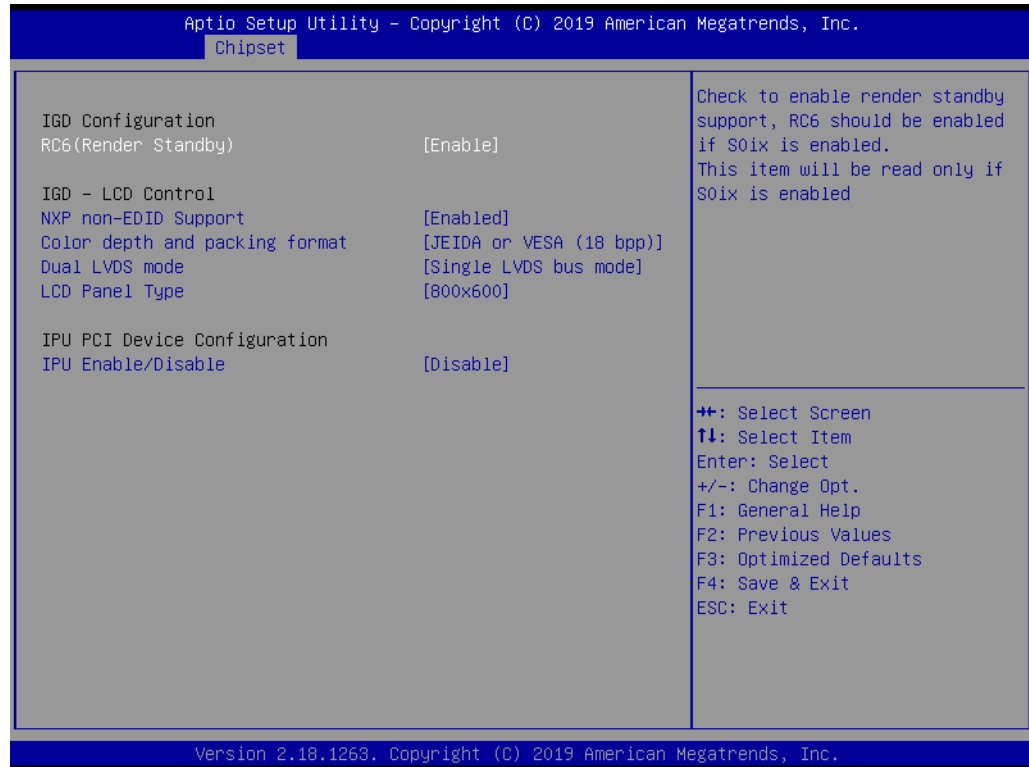


Figure 3.23 Uncore Configuration

IGD Configuration

RC6(Render Standby)

Check to enable render standby support, RC6 should be enabled if S0ix is enabled. This item will be read only if S0ix is enabled.

IGD - LCD Control

NXP non-EDID Support

NXP PTN3460 Support: Enable: Used internal EDID setting; Disable: Get EDID from DDC bus.

Color depth and packing format

Color depth and packing format.

Dual LVDS mode

Dual LVDS mode.

LCD Panel Type

Select LCD panel used by Internal Graphics Device by selecting the appropriate setup item.

IPU

Enable Image Processing Unit function.

(IPC: A processor analyzes and modifies input images).

3.5.4 South Cluster Configuration

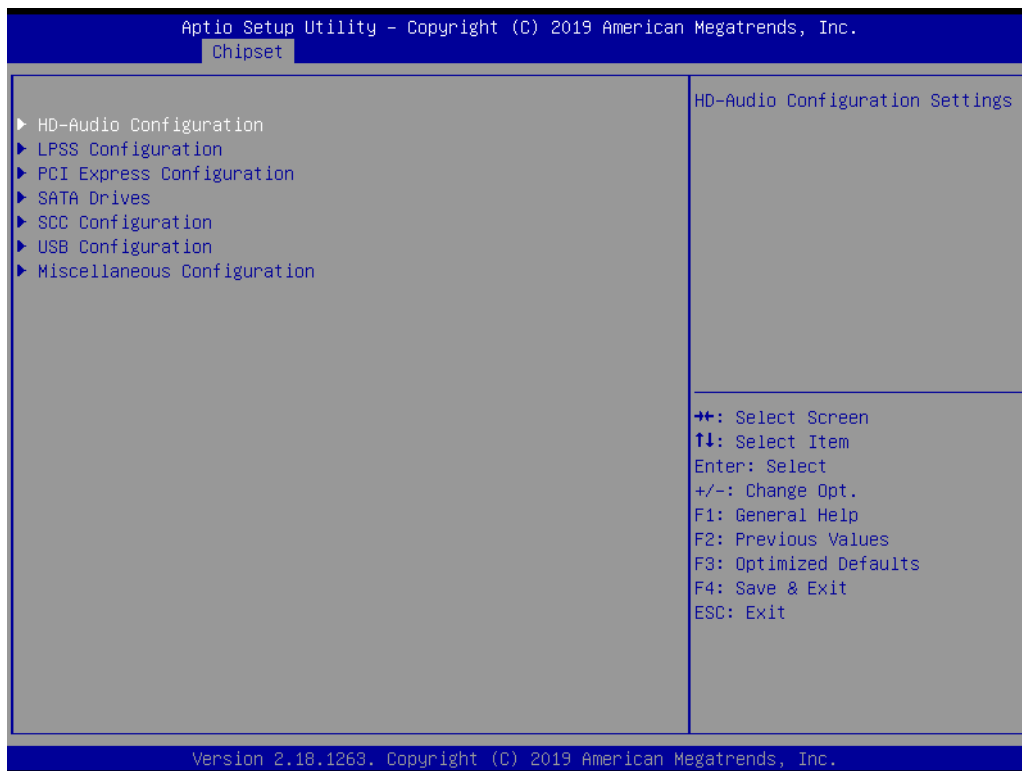


Figure 3.24 South Cluster Configuration

HD-Audio Configuration

HD-Audio Configuration Settings.

PCI Express Configuration

PCI Express Configuration Settings.

SATA Drives

Press <Enter> to select the SATA Device Configuration Setup options.

SCC Configuration

SCC Configuration Settings.

USB Configuration

USB Configuration Settings.

Miscellaneous Configuration

Enable/Disable Misc. Features.

3.5.4.1 HD-Audio Configuration

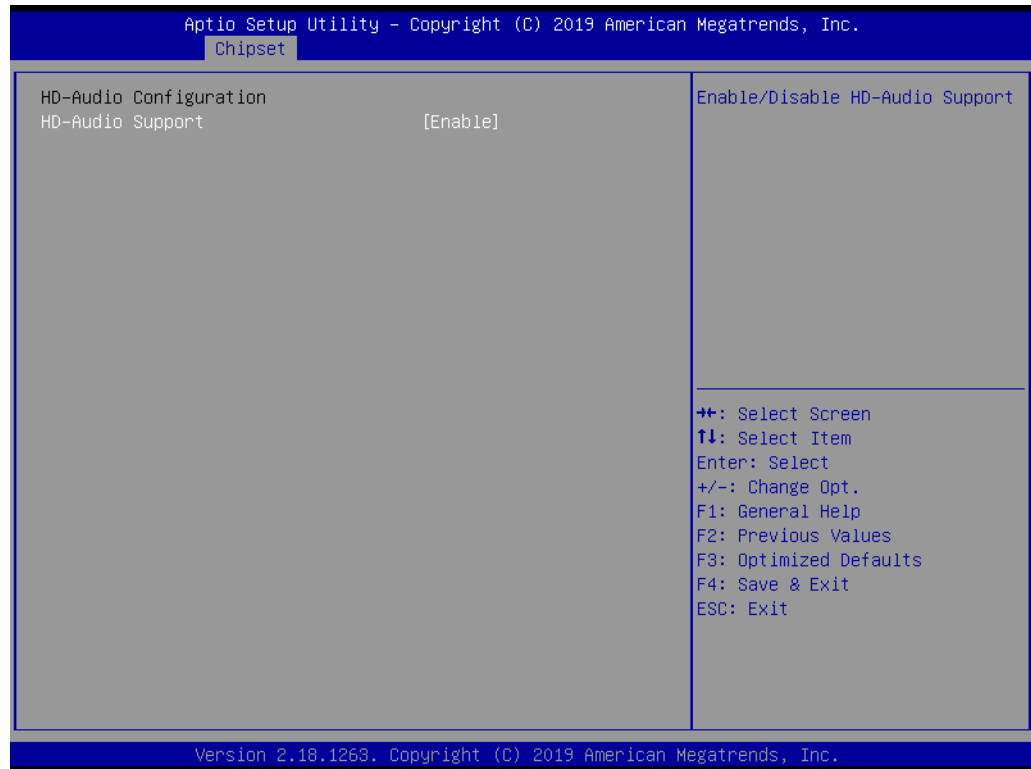


Figure 3.25 HD-Audio Configuration

HD-Audio Support

Enable/Disable HD-Audio Support.

3.5.4.2 PCI Express Configuration

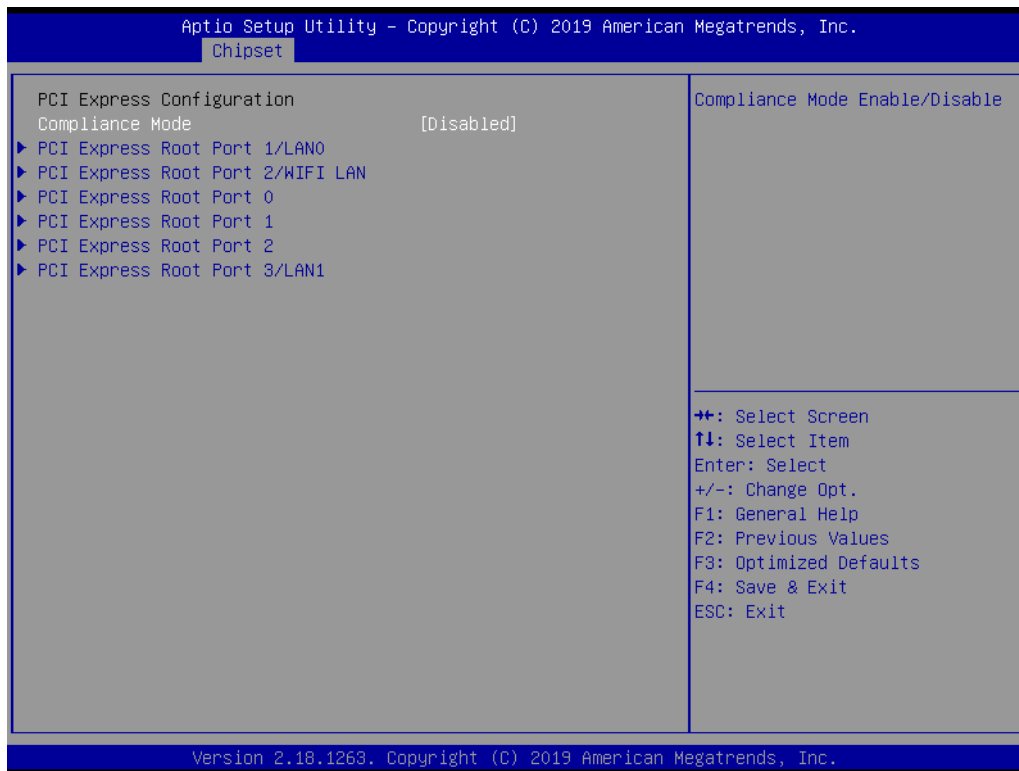


Figure 3.26 PCI Express Configuration

Compliance Mode

Compliance Mode Enable/Disable.

PCI Express Root Port 1 /LANO

Control the PCI Express Root Port. AUTO: To disable unused root port automatically for the most optimum power savings. Enable: Enable PCIe root port Disable: Disable PCIe root port.

PCI Express Root Port 2 WIFI LAN

Control the PCI Express Root Port. AUTO: To disable unused root port automatically for the most optimum power savings. Enable: Enable PCIe root port Disable: Disable PCIe root port.

PCI Express Root Port 0

Control the PCI Express Root Port. AUTO: To disable unused root port automatically for the most optimum power savings. Enable: Enable PCIe root port Disable: Disable PCIe root port.

PCI Express Root Port 1

Control the PCI Express Root Port. AUTO: To disable unused root port automatically for the most optimum power savings. Enable: Enable PCIe root port Disable: Disable PCIe root port.

PCI Express Root Port 2

Control the PCI Express Root Port. AUTO: To disable unused root port automatically for the most optimum power savings. Enable: Enable PCIe root port Disable: Disable PCIe root port.

PCI Express Root Port 3 /LANO

Control the PCI Express Root Port. AUTO: To disable unused root port automatically for the most optimum power savings. Enable: Enable PCIe root port Disable: Disable PCIe root port.

PCI Express Root Port 1 /LANO

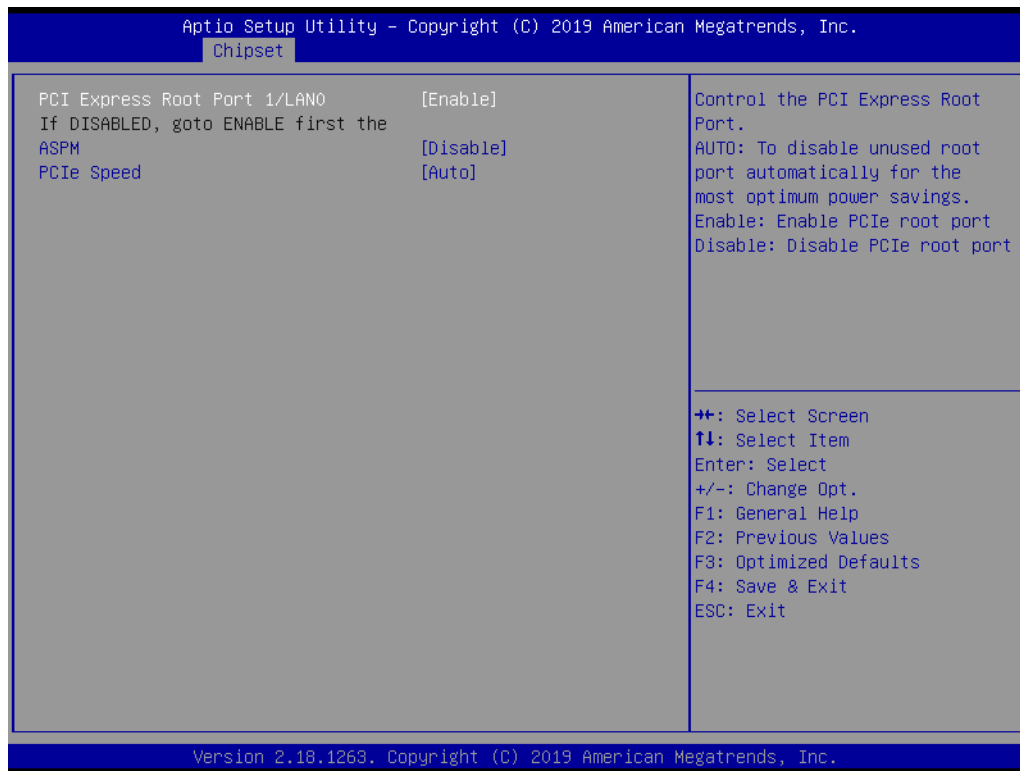


Figure 3.27 PCI Express Root Port 1 /LANO

PCI Express Root Port 1 /LANO

Control the PCI Express Root Port. AUTO: To disable unused root port automatically for the most optimum power savings. Enable: Enable PCIe root port Disable: Disable PCIe root port.

ASPM

PCI Express Active State Power Management settings.

PCIe Speed

Configure PCIe Speed.

PCI Express Root Port 2 WIFI LAN

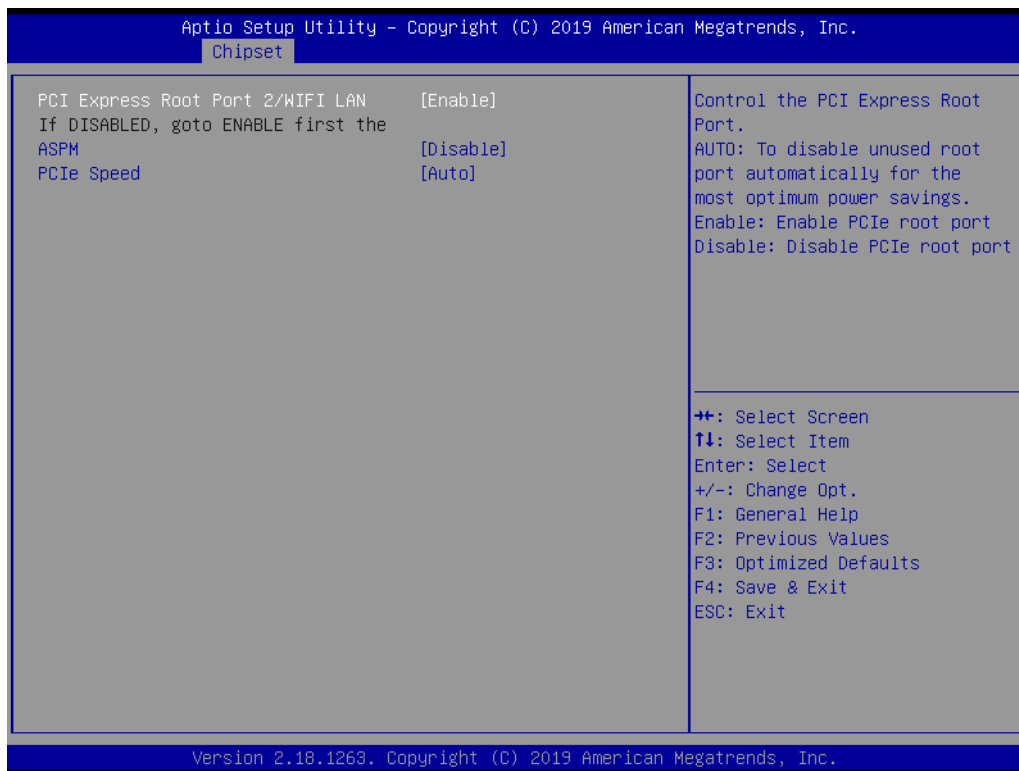


Figure 3.28 PCI Express Root Port 2 WIFI LAN

PCI Express Root Port 2 WIFI LAN

Control the PCI Express Root Port. AUTO: To disable unused root port automatically for the most optimum power savings. Enable: Enable PCIe root port Disable: Disable PCIe root port.

ASPM

PCI Express Active State Power Management settings.

PCIe Speed

Configure PCIe Speed.

PCI Express Root Port 0

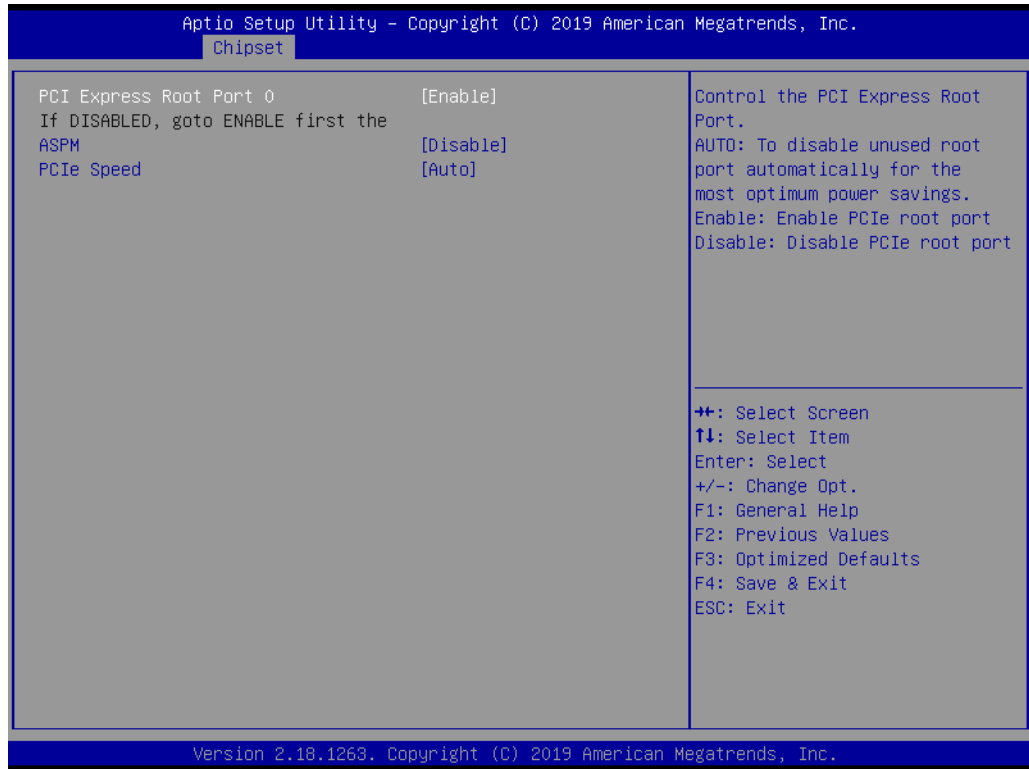


Figure 3.29 PCI Express Root Port 0

PCI Express Root Port 0

Control the PCI Express Root Port. AUTO: To disable unused root port automatically for the most optimum power savings. Enable: Enable PCIe root port Disable: Disable PCIe root port.

ASPM

PCI Express Active State Power Management settings.

PCIe Speed

Configure PCIe Speed.

PCI Express Root Port 1



Figure 3.30 PCI Express Root Port 1

PCI Express Root Port 1

Control the PCI Express Root Port. AUTO: To disable unused root port automatically for the most optimum power savings. Enable: Enable PCIe root port Disable: Disable PCIe root port.

ASPM

PCI Express Active State Power Management settings.

PCIe Speed

Configure PCIe Speed.

PCI Express Root Port 2

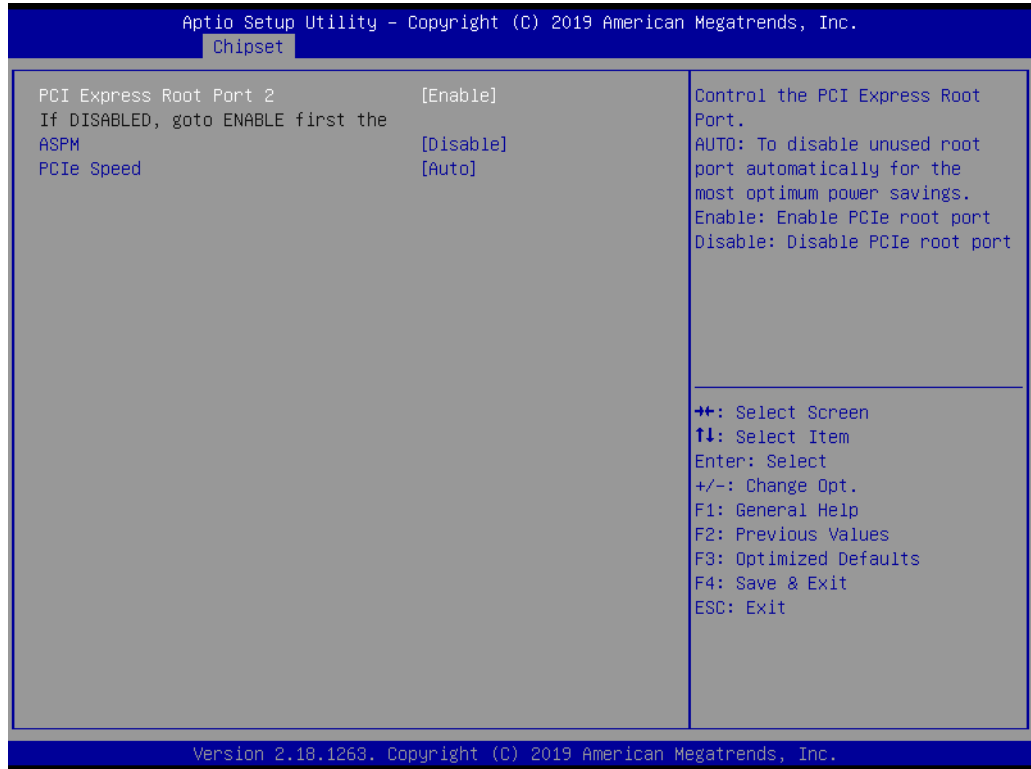


Figure 3.31 PCI Express Root Port 2

PCI Express Root Port 2

Control the PCI Express Root Port. AUTO: To disable unused root port automatically for the most optimum power savings. Enable: Enable PCIe root port Disable: Disable PCIe root port.

ASPM

PCI Express Active State Power Management settings.

PCIe Speed

Configure PCIe Speed.

PCI Express Root Port 3/LAN1

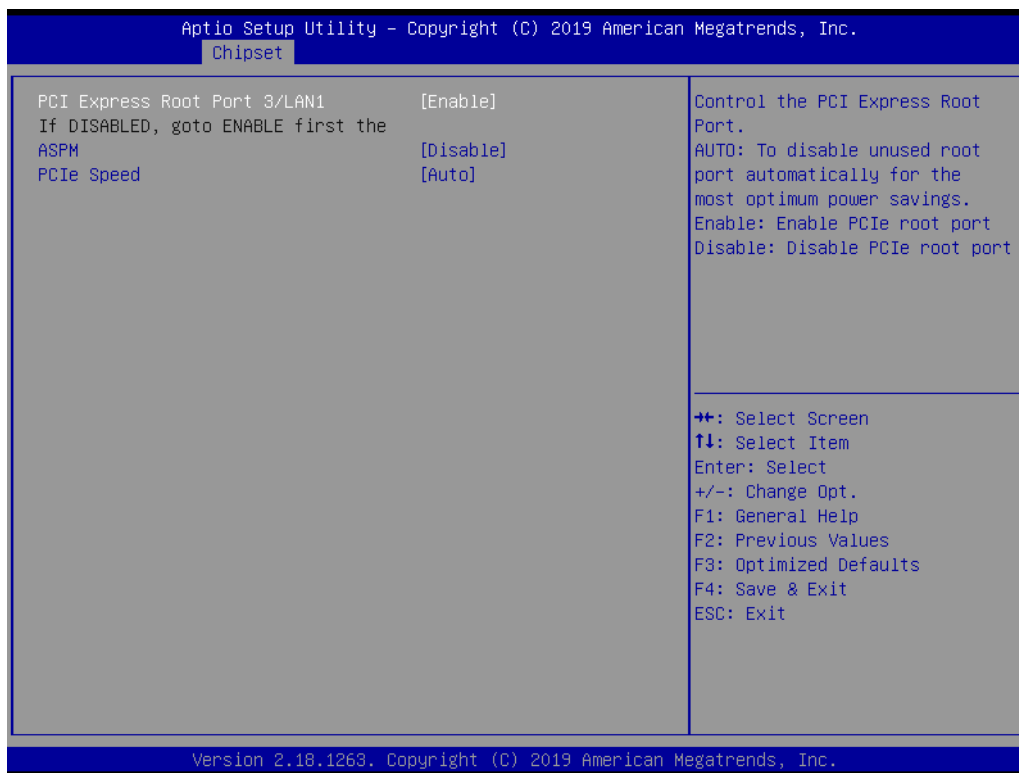


Figure 3.32 PCI Express Root Port 3/LAN1

PCI Express Root Port 3

Control the PCI Express Root Port. AUTO: To disable unused root port automatically for the most optimum power savings. Enable: Enable PCIe root port Disable: Disable PCIe root port.

ASPM

PCI Express Active State Power Management settings.

PCIe Speed

Configure PCIe Speed.

3.5.4.3 SATA Drive

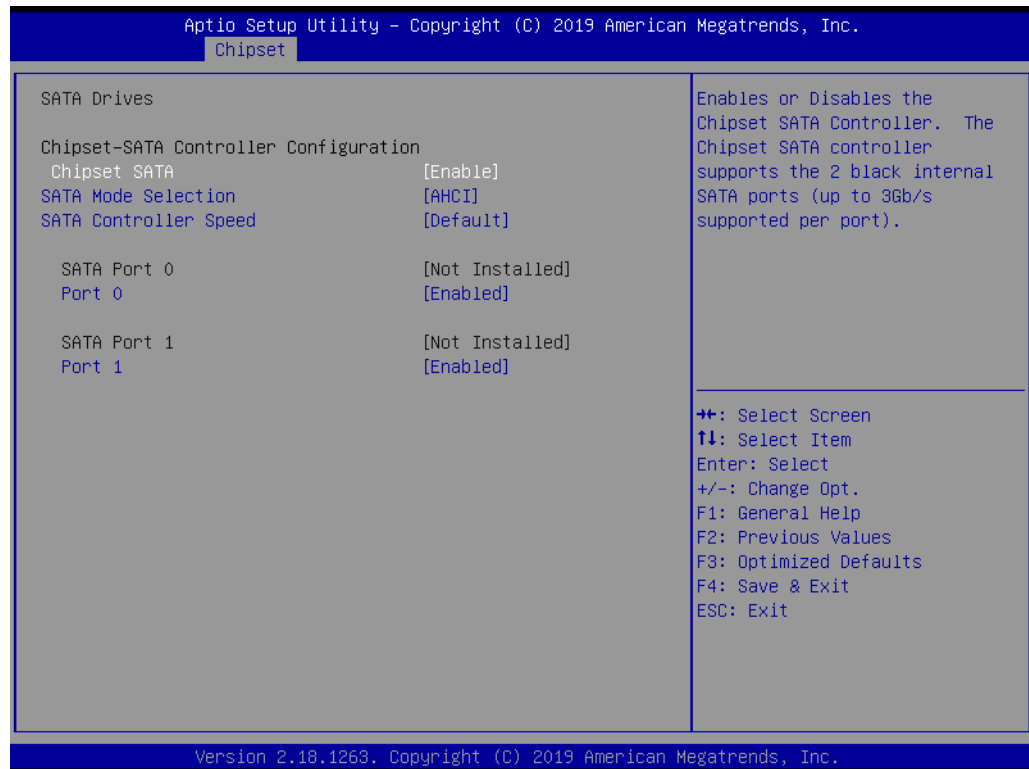


Figure 3.33 SATA Drives

Chipset-SATA Controller Configuration

Chipset SATA

Enables or Disables the Chipset SATA Controller. The Chipset SATA controller supports the 2 black internal SATA ports (up to 3Gb/s supported per port).

SATA Mode Selection

Determines how SATA controller(s) operate.

SATA Controller Speed

Indicates the maximum speed the SATA controller can support.

SATA Port 0

Port 0

Enable or Disable SATA Port.

SATA Port 1

Port 1

Enable or Disable SATA Port.

3.5.4.4 SCC Configuration

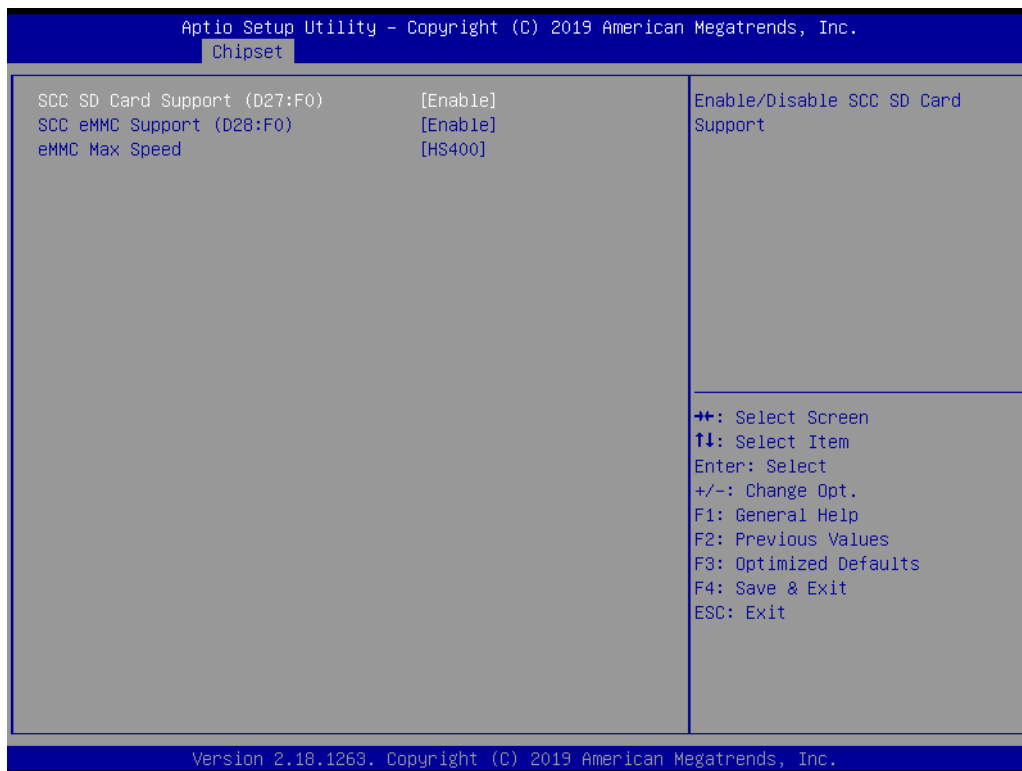


Figure 3.34 SCC Configuration

SCC SD Card Support (D27:F0)

Enable/Disable SCC SD card support.

SCC eMMC Support (D28:F0)

Enable/Disable SCC eMMC support.

eMMC Max Speed

Select the eMMC max speed allowed.

3.5.4.5 USB Configuration

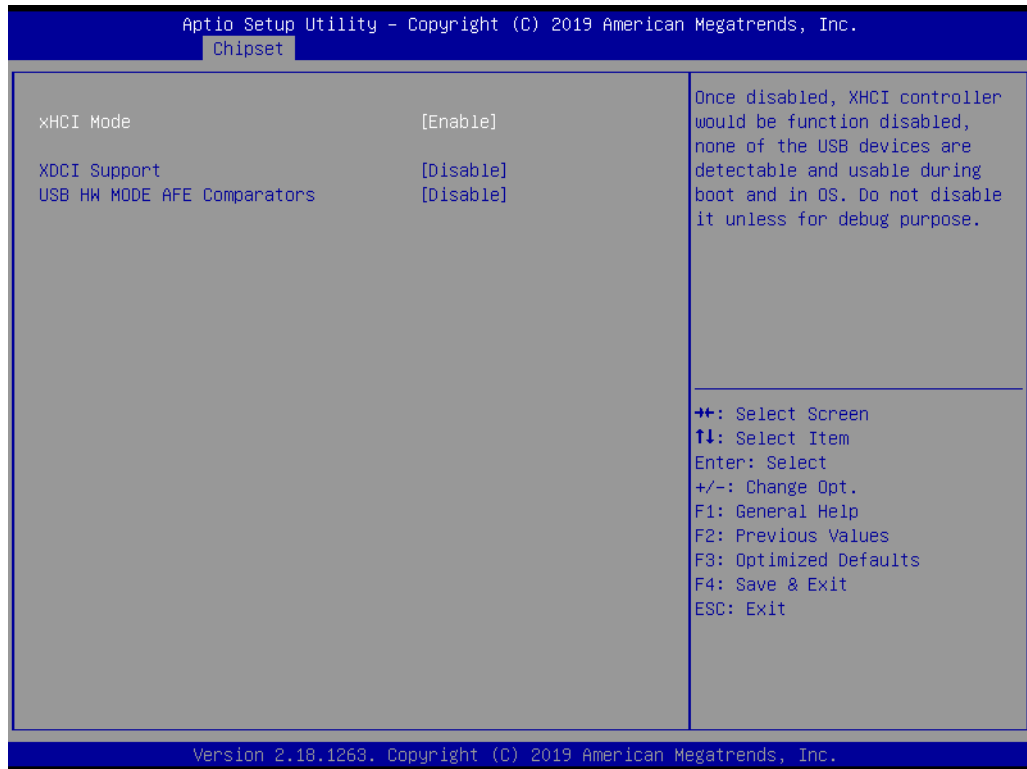


Figure 3.35 USB Configuration

xHCI Mode

Once disabled, XHCI controller would be function disabled, none of the USB devices are detectable and usable during boot and in OS. Do not disable it unless for debugging purposes.

XDCI Support

Enable/Disable XDCI.

USB HW MODE AFE Comparators

Enable/Disable USB HW MODE AFE comparators.

3.5.4.6 Miscellaneous Configuration

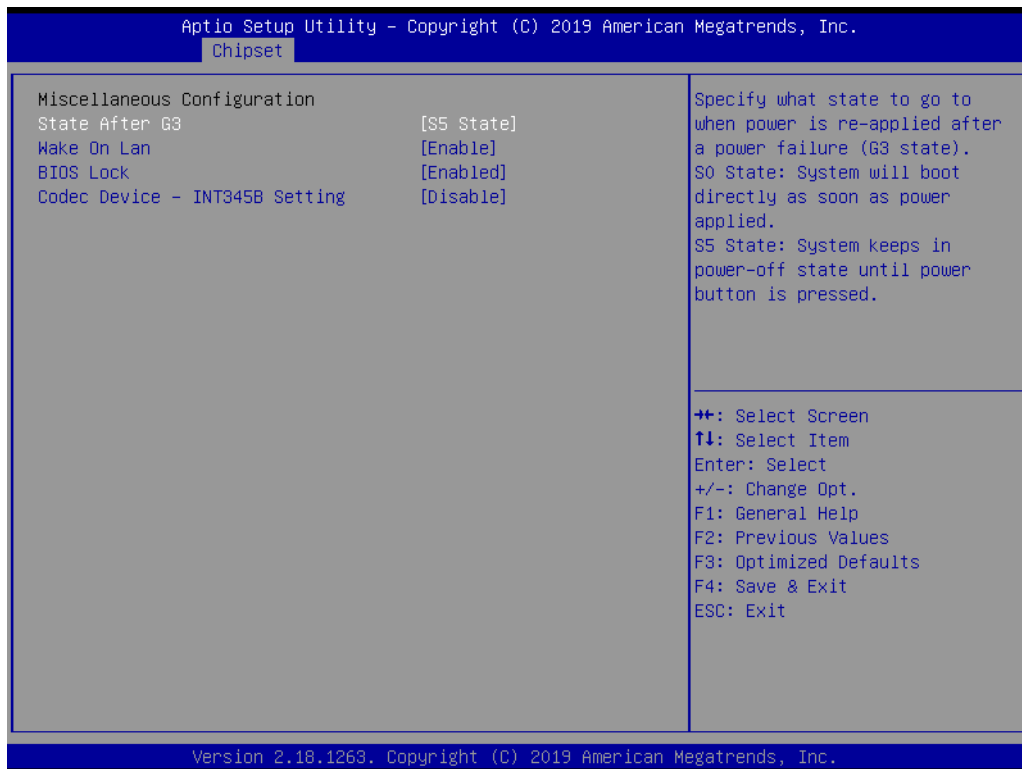


Figure 3.36 Miscellaneous Configuration

State After G3

Specify what state to go to when power is re-applied after a power failure (G3 state). S0 State: System will boot directly as soon as power applied. S5 State: System keeps in power-off state until power button is pressed.

Wake On Lan

Enable or Disable the Wake on Lan.

BIOS Lock

Enable/Disable the SC BIOS Lock Enable feature. Required to be enabled to ensure SMM protection of flash.

3.6 Security Chipset

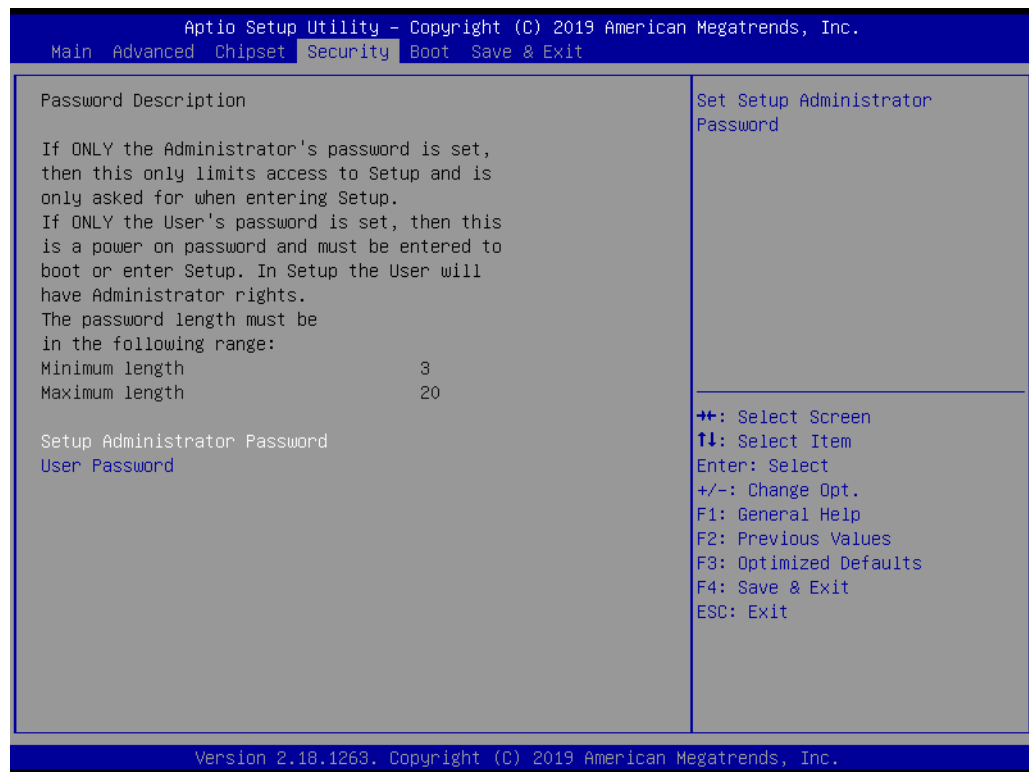


Figure 3.37 Security Chipset

Setup Administrator Password

Set Setup Administrator Password.

User Password

Set User Password.

3.7 Boot Setup

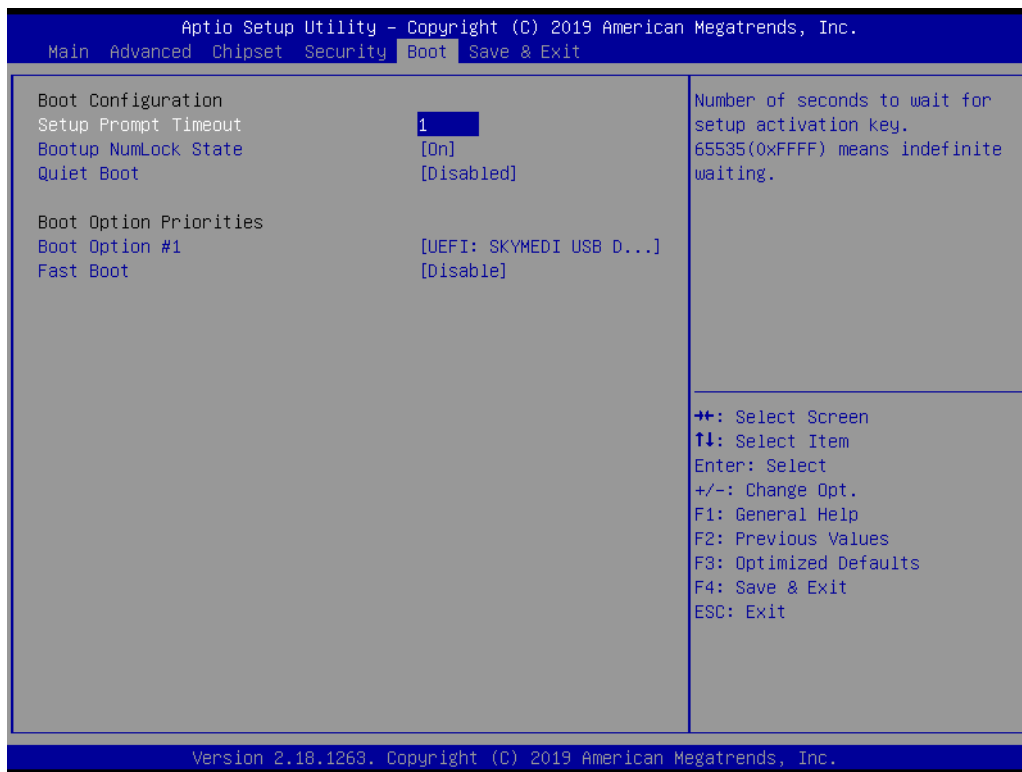


Figure 3.38 Boot Setup

Boot Configuration

Setup Prompt Timeout

Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.

Bootup NumLock State

Select the keyboard NumLock state.

Quiet Boot

Enables or disables Quiet Boot option.

Boot Option Priorities

Boot Option #1

Sets the system boot order

Fast Boot

Enable or Disable FastBoot features. Most probes are skipped to reduce time cost during boot.

3.8 Save & Exit

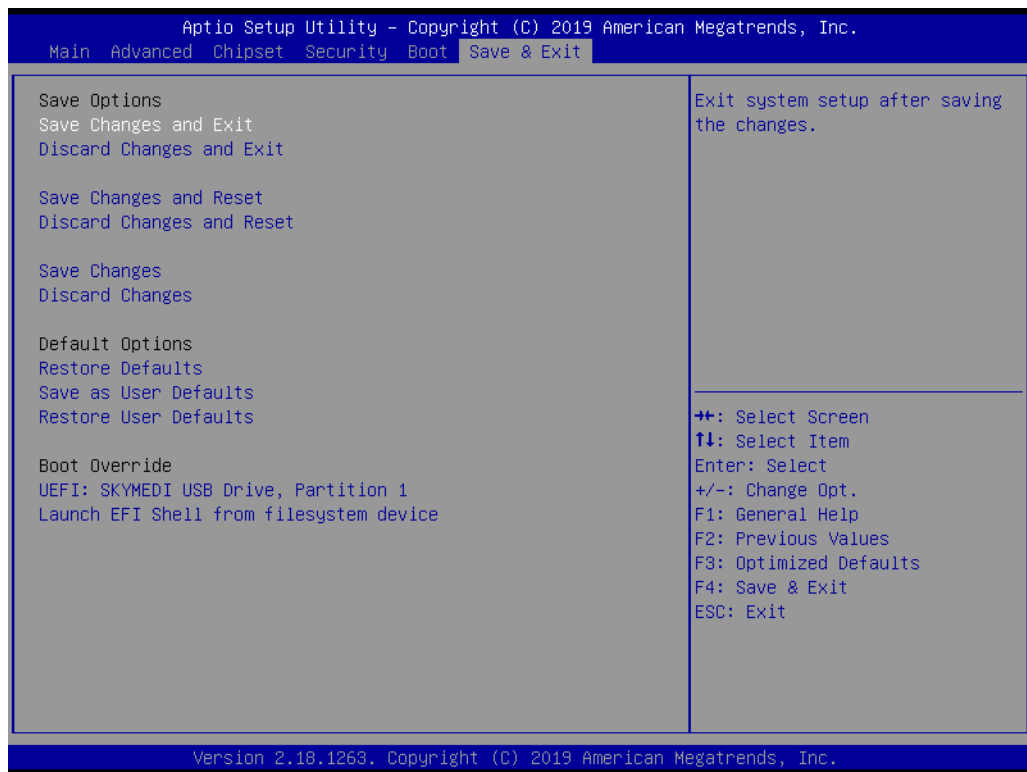


Figure 3.39 Save & Exit

Save Options

Save Changes and Exit^{3.4.1}

Exit system setup after saving the changes.

Discard Changes and Exit

Exit system setup without saving any changes.

Save Changes and Reset

Reset the system after saving the changes.

Discard Changes and Reset

Reset system setup without saving any changes.

Default Options

Restore Defaults

Restore/Load Default values for all the setup options.

Save as User Defaults

Save the changes done so far as User Defaults.

Restore User Defaults

Restore the User Defaults to all the setup options.

Boot Override

Launch EFI Shell from file system device

Attempts to Launch EFI Shell application (Shell.efi) from one of the available filesystem devices.

Chapter 4

S/W Introduction & Installation

- S/W Introduction
- Driver Installation
- Advantech iManager (SUSI 4)

4.1 S/W Introduction

The mission of Advantech Embedded Software Services is to "Enhance quality of life with Advantech platforms and Microsoft Windows embedded technology." We enable Windows Embedded software products on Advantech platforms to more effectively support the embedded computing community. Customers are freed from the hassle of dealing with multiple vendors (Hardware suppliers, System integrators, Embedded OS distributor) for projects. Our goal is to make Windows Embedded Software solutions easily and widely available to the embedded computing community.

4.2 Driver Installation

The Intel Chipset Software Installation (CSI) utility installs the Windows INF files that outline to the operating system how the chipset components will be configured.

4.2.1 Windows Driver Setup

To install the drivers on a windows-based operating system, please connect to Internet, enter the website <http://support.advantech.com.tw>, and download the drivers you want to install. Follow Driver Setup instructions to complete the installation.

4.2.2 Other OS

Linux Ubuntu 18.04.1

Windows 10 IoT Core











Linux Wind River 64-bit

VxWorks (7.0)

4.3 Advantech iManager

Advantech's platforms come equipped with iManager, a micro controller that provides embedded features for system integrators. Embedded features have been moved from the OS/BIOS level to the board level, to increase reliability and simplify integration.

iManager runs whether the operating system is running or not; it can count the boot times and running hours of the device, monitor device health, and provide an advanced watchdog to handle errors just as they happen. iManager also comes with a secure & encrypted EEPROM for storing important security key or other customer define information. All the embedded functions are configured through API and provide corresponding utilities to demonstrate. These APIs comply with PICMG EAPI (Embedded Application Programmable Interface) specification and unify in the same structures. It makes these embedded features easier to integrate, speed up developing schedule, and provide the customer's software continuity while upgrade hardware. For more details on how to use the APIs and utilities, please refer to Advantech iManager 2.0 Software API User Manual.

| Control | Monitor |
|---|---|
|  <p>GPIO</p> <p>General Purpose Input/Output is a flexible parallel interface that allows a variety of custom connections. It allows users to monitor the level of signal input or set the output status to switch on/off a device. Our API also provides Programmable GPIO, which allows developers to dynamically set the GPIO input or output status.</p> |  <p>Watchdog</p> <p>A watchdog timer (WDT) is a device that performs a specific operation after a certain period of time if something goes wrong and the system does not recover on its own. A watchdog timer can be programmed to perform a warm boot (restarting the system) after a certain number of seconds.</p> |
|  <p>SMBus</p> <p>SMBus is the System Management Bus defined by Intel® Corporation in 1995. It is used in personal computers and servers for low-speed system management communications. The SMBus API allows a developer to interface a embedded system environment and transfer serial messages using the SMBus protocols, allowing multiple simultaneous device control.</p> |  <p>Hardware Monitor</p> <p>The Hardware Monitor (HWM) API is a system health supervision API that inspects certain condition indexes, such as fan speed, temperature and voltage.</p> |
|  <p>I2C</p> <p>I2C is a bi-directional two wire bus that was developed by Philips for use in their televisions in the 1960s. The I2C API allows a developer to interface with an embedded system environment and transfer serial messages using the I2C protocols, allowing multiple simultaneous device control.</p> |  <p>Hardware Control</p> <p>The Hardware Control API allows developers to set the PWM (Pulse Width Modulation) value to adjust fan speed or other devices; it can also be used to adjust the LCD brightness.</p> |
| Display | Power Saving |
|  <p>Brightness Control</p> <p>The Brightness Control API allows a developer to interface with an embedded device to easily control brightness.</p> |  <p>CPU Speed</p> <p>Make use of Intel SpeedStep technology to reduce power power consumption. The system will automatically adjust the CPU Speed depending on system loading.</p> |
|  <p>Backlight</p> <p>The Backlight API allows a developer to control the backlight (screen) on/off in an embedded device.</p> |  <p>System Throttling</p> <p>Refers to a series of methods for reducing power consumption in computers by lowering the clock frequency. These APIs allow the user to lower the clock from 87.5% to 12.5%.</p> |

Appendix **A**

Pin Assignment

This appendix details information on the hardware pin assignment of the SOM-2569 CPU System on Module.

Sections include:

- SOM-2569 Pin Assignment

A.1 SOM-2569 Pin Assignment

This section details SOM-2569 pin assignments on SMARC connectors compliant with SMARC 2.0/SMARC 2.1 definitions. For further details on pins usage, or to find design reference materials, please contact to Advantech for design guides, check-lists, reference schematics, and other hardware/software support.

| SMARC Function | Pin | Pin Name | SOM-2569 | |
|----------------|----------------|--------------------------|-----------------------|---|
| LVDS / eDP | S125 | LVDS0_0+ / eDP0_TX0+ | v /v | |
| | S126 | LVDS0_0- / eDP0_TX0- | v /v | |
| | S128 | LVDS0_1+ / eDP0_TX1+ | v /v | |
| | S129 | LVDS0_1- / eDP0_TX1- | v /v | |
| | S131 | LVDS0_2+ / eDP0_TX2+ | v /v | |
| | S132 | LVDS0_2- / eDP0_TX2- | v /v | |
| | S137 | LVDS0_3+ / eDP0_TX3+ | v /v | |
| | S138 | LVDS0_3- / eDP0_TX3- | v /v | |
| | S134 | LVDS0_CK+ / eDP0_AUX+ | v /v | |
| | S135 | LVDS0_CK- / eDP0_AUX- | v /v | |
| | S111 | LVDS1_0+ / eDP1_TX0+ | v / - | |
| | S112 | LVDS1_0- / eDP1_TX0- | v / - | |
| | S114 | LVDS1_1+ / eDP1_TX1+ | v / - | |
| | S115 | LVDS1_1- / eDP1_TX1- | v / - | |
| | S117 | LVDS1_2+ / eDP1_TX2+ | v / - | |
| | S118 | LVDS1_2- / eDP1_TX2- | v / - | |
| | S120 | LVDS1_3+ / eDP1_TX3+ | v / - | |
| | S121 | LVDS1_3- / eDP1_TX3- | v / - | |
| | S108 | LVDS1_CK+ / eDP1_AUX+ | v / - | |
| | S109 | LVDS1_CK- / eDP1_AUX- | v / - | |
| | S139 | I ² C_LCD_CK | v | |
| | S140 | I ² C_LCD_DAT | v | |
| | S133 | LCD0_VDD_EN | v | |
| | S116 | LCD1_VDD_EN | v | |
| | S127 | LCD0_BKLT_EN | v | |
| | S107 | LCD1_BKLT_EN | v | |
| | S141 | LCD0_BKLT_PWM | v | |
| | S122 | LCD1_BKLT_PWM | v | |
| | S144 | EDP0_HPD | v | |
| | S113 | EDP1_HPD | v | |
| | DP++ over HDMI | P92 | DP1_LANE0+ / HDMI_D2+ | v |
| | | P93 | DP1_LANE0- / HDMI_D2- | v |
| | | P95 | DP1_LANE1+ / HDMI_D1+ | v |
| | | P96 | DP1_LANE1- / HDMI_D1- | v |
| | | P98 | DP1_LANE2+ / HDMI_D0+ | v |
| P99 | | DP1_LANE2- / HDMI_D0- | v | |
| P101 | | DP1_LANE3+ / HDMI_CK+ | v | |
| P102 | | DP1_LANE3- / HDMI_CK- | v | |
| P104 | | DP1_HPD / HDMI_HPD | v | |
| P105 | | DP1_AUX- / HDMI_CTRL_DAT | v | |
| P106 | | DP1_AUX+ / HDMI_CTRL_CK | v | |
| P107 | DP1_AUX_SEL | v | | |

| | | | | |
|------------------|------------|---------------------------|-------------------|---|
| DP++ | S102 | DP0_LANE3+ | v | |
| | S103 | DP0_LANE3- | v | |
| | S99 | DP0_LANE2+ | v | |
| | S100 | DP0_LANE2- | v | |
| | S96 | DP0_LANE1+ | v | |
| | S97 | DP0_LANE1- | v | |
| | S93 | DP0_LANE0+ | v | |
| | S94 | DP0_LANE0- | v | |
| | S105 | DP0_AUX+ | v | |
| | S106 | DP0_AUX - | v | |
| | S98 | DP0_HPDP | v | |
| | S95 | DP0_AUX_SEL | v | |
| | CSI | P108 | GPIO0 / CAM0_PWR# | v |
| | | P109 | GPIO1 / CAM1_PWR# | v |
| P110 | | GPIO2 / CAM0_RST# | v | |
| P111 | | GPIO3 / CAM1_RST# | v | |
| S7 | | I ² C_CAM0_DAT | v | |
| S5 | | I ² C_CAM0_CK | v | |
| S2 | | I ² C_CAM1_DAT | v | |
| S1 | | I ² C_CAM1_CK | v | |
| S11 | | CSI0_RX0+ | v | |
| S12 | | CSI0_RX0- | v | |
| S14 | | CSI0_RX1+ | v | |
| S15 | | CSI0_RX1- | v | |
| P7 | | CSI1_RX0+ | v | |
| P8 | | CSI1_RX0- | v | |
| P10 | | CSI1_RX1+ | v | |
| P11 | | CSI1_RX1- | v | |
| P13 | | CSI1_RX2+ | v | |
| P14 | | CSI1_RX2- | v | |
| P16 | | CSI1_RX3+ | v | |
| P17 | | CSI1_RX3- | v | |
| S8 | | CSI0_CK+ | v | |
| S9 | | CSI0_CK- | v | |
| P3 | | CSI1_CK+ | v | |
| P4 | | CSI1_CK- | v | |
| S6 | | CAM_MCK | v | |
| SDIO Card | | P39 | SDIO_D0 | v |
| | | P40 | SDIO_D1 | v |
| | | P41 | SDIO_D2 | v |
| | | P42 | SDIO_D3 | v |
| | | P33 | SDIO_CMD | v |
| | P36 | SDIO_CK | v | |
| | P34 | SDIO_WP | v | |
| | P35 | SDIO_CD# | v | |
| | P37 | SDIO_PWR_EN | v | |

| | | | |
|----------------------------------|------|-------------------------|---|
| SPI0 | P43 | SPI0_CS0# | v |
| | P31 | SPI0_CS1# | v |
| | P44 | SPI0_CK | v |
| | P45 | SPI0_DIN | v |
| | P46 | SPI0_DO | v |
| eSPI/SPI1 | P56 | ESPI_CK | - |
| | P54 | ESPI_CS0# | - |
| | P55 | ESPI_CS1# | - |
| | P57 | ESPI_IO_0 | - |
| | P58 | ESPI_IO_1 | - |
| | S56 | ESPI_IO_2 | - |
| | S57 | ESPI_IO_3 | - |
| | S58 | ESPI_RESET# | - |
| | S43 | ESPI_ALERT0# | - |
| | S44 | ESPI_ALERT1# | - |
| I2S | S38 | I2S0_LRCK | - |
| | S40 | I2S0_SDOOUT | - |
| | S41 | I2S0_SDIN | - |
| | S42 | I2S0_CK | - |
| | S38 | AUDIO_MCK | - |
| HDA / I2S | S50 | HDA_SYNC | v |
| | S51 | HDA_SDO | v |
| | S52 | HDA_SDI | v |
| | S53 | HDA_CK | v |
| | P112 | HDA_RST# | v |
| I²C Interfaces | S48 | I ² C_GP_CK | v |
| | S49 | I ² C_GP_DAT | v |
| Serial Ports | P129 | SER0_TX | v |
| | P130 | SER0_RX | v |
| | P134 | SER1_TX | v |
| | P135 | SER1_RX | v |
| | P136 | SER2_TX | v |
| | P137 | SER2_RX | v |
| | P140 | SER3_TX | v |
| | P141 | SER3_RX | v |
| | P131 | SER0_RTS# | v |
| | P132 | SER0_CTS# | v |
| | P138 | SER2_RTS# | v |
| | P139 | SER2_CTS# | v |
| CAN Bus | P143 | CAN0_TX | v |
| | P145 | CAN1_TX | - |
| | P144 | CAN0_RX | v |
| | P146 | CAN1_RX | - |

| | | | |
|--|------|---------------|---|
| | P60 | USB0+ | v |
| | P61 | USB0- | v |
| | P65 | USB1+ | v |
| | P66 | USB1- | v |
| | P69 | USB2+ | v |
| | P70 | USB2- | v |
| | S68 | USB3+ | v |
| | S69 | USB3- | v |
| | S35 | USB4+ | v |
| | S36 | USB4- | v |
| | S59 | USB5+ | v |
| | S60 | USB5- | v |
| | P62 | USB0_EN_OC# | v |
| | P67 | USB1_EN_OC# | v |
| | P71 | USB2_EN_OC# | v |
| | P74 | USB3_EN_OC# | v |
| | P76 | USB4_EN_OC# | v |
| | S55 | USB5_EN_OC# | v |
| | P63 | USB0_VBUS_DET | v |
| | S37 | USB3_VBUS_DET | v |
| | P64 | USB0_OTG_ID | v |
| | S104 | USB3_OTG_ID | v |
| | S75 | USB2SSRX- | v |
| | S74 | USB2SSRX+ | v |
| | S66 | USB3SSRX- | v |
| | S65 | USB3SSRX+ | v |
| | S72 | USB2SSTX- | v |
| | S71 | USB2SSTX+ | v |
| | S63 | USB3SSTX- | v |
| | S62 | USB3SSTX+ | v |

USB

| | | | |
|-------------|------|---------------|---|
| | P89 | PCIE_A_TX+ | v |
| | P90 | PCIE_A_TX- | v |
| | S90 | PCIE_B_TX+ | v |
| | S91 | PCIE_B_TX- | v |
| | S81 | PCIE_C_TX+ | v |
| | S82 | PCIE_C_TX- | v |
| | S29 | PCIE_D_TX+ | v |
| | S30 | PCIE_D_TX- | v |
| | P86 | PCIE_A_RX+ | v |
| | P87 | PCIE_A_RX- | v |
| | S87 | PCIE_B_RX+ | v |
| | S88 | PCIE_B_RX- | v |
| PCIe | S78 | PCIE_C_RX+ | v |
| | S79 | PCIE_C_RX- | v |
| | S32 | PCIE_D_RX+ | v |
| | S33 | PCIE_D_RX- | v |
| | P83 | PCIE_A_REFCK+ | v |
| | P84 | PCIE_A_REFCK- | v |
| | S84 | PCIE_B_REFCK+ | v |
| | S85 | PCIE_B_REFCK- | v |
| | P80 | PCIE_C_REFCK+ | v |
| | P81 | PCIE_C_REFCK- | v |
| | P75 | PCIE_A_RST# | v |
| | S76 | PCIE_B_RST# | v |
| | S77 | PCIE_C_RST# | v |
| | S146 | PCIE_WAKE# | v |
| SATA | P48 | SATA_TX+ | v |
| | P49 | SATA_TX- | v |
| | P51 | SATA_RX+ | v |
| | P52 | SATA_RX- | v |
| | S54 | SATA_ACT# | v |

| | | | |
|-----------------|------|-------------------|---|
| | P30 | GBE0_MDI0+ | v |
| | P29 | GBE0_MDI0- | v |
| | P27 | GBE0_MDI1+ | v |
| | P26 | GBE0_MDI1- | v |
| | P24 | GBE0_MDI2+ | v |
| | P23 | GBE0_MDI2- | v |
| | P20 | GBE0_MDI3+ | v |
| | P19 | GBE0_MDI3- | v |
| | S17 | GBE1_MDI0+ | v |
| | S18 | GBE1_MDI0- | v |
| | S20 | GBE1_MDI1+ | v |
| | S21 | GBE1_MDI1- | v |
| Ethernet | S23 | GBE1_MDI2+ | v |
| | S24 | GBE1_MDI2- | v |
| | S26 | GBE1_MDI3+ | v |
| | S27 | GBE1_MDI3- | v |
| | P21 | GBE0_LINK100# | v |
| | S19 | GBE0_LINK100# | v |
| | P22 | GBE0_LINK1000# | v |
| | S22 | GBE1_LINK1000# | v |
| | P25 | GBE0_LINK_ACT# | v |
| | s31 | GBE1_LINK_ACT# | v |
| | P28 | GBE0_CTREF | v |
| | S28 | GBE1_CTREF | v |
| | P6 | GBE0_SDP | v |
| | P5 | GBE1_SDP | v |
| Watchdog | S145 | WDT_TIME_OUT# | v |
| | P108 | GPIO0 / CAM0_PWR# | v |
| | P109 | GPIO1 / CAM1_PWR# | v |
| | P110 | GPIO2 / CAM0_RST# | v |
| | P111 | GPIO3 / CAM1_RST# | v |
| | P112 | GPIO4 / HDA_RST# | v |
| GPIO | P113 | GPIO5 / PWM_OUT | v |
| | P114 | GPIO6 / TACHIN | v |
| | P115 | GPIO7 | v |
| | P116 | GPIO8 | v |
| | P117 | GPIO9 | v |
| | P118 | GPIO10 | v |
| | P119 | GPIO11 | v |

| | | | |
|------------------------|------|-------------------------|---|
| | S150 | VIN_PWR_BAD# | v |
| | S154 | CARRIER_PWR_ON | v |
| | S153 | CARRIER_STBY# | v |
| | P126 | RESET_OUT# | v |
| | P127 | RESET_IN# | v |
| | P128 | POWER_BTN# | v |
| | S149 | SLEEP# | v |
| Management Pins | S148 | LID# | v |
| | S156 | BATLOW# | v |
| | P122 | I ² C_PM_DAT | v |
| | P121 | I ² C_PM_CK | v |
| | S151 | CHARGING# | v |
| | S152 | CHARGER_PRSNT# | v |
| | S157 | TEST# | v |
| | P1 | SMB_ALERT_1V8# | v |
| | P123 | BOOT_SEL0# | - |
| Boot Select | P124 | BOOT_SEL0# | - |
| | P125 | BOOT_SEL2# | v |
| | S155 | FORCE_RECOV# | v |

| | | |
|------|---------|---|
| S147 | VDD_RTC | v |
| P147 | VDD_IN | v |
| P148 | VDD_IN | v |
| P149 | VDD_IN | v |
| P150 | VDD_IN | v |
| P151 | VDD_IN | v |
| P152 | VDD_IN | v |
| P153 | VDD_IN | v |
| P154 | VDD_IN | v |
| P155 | VDD_IN | v |
| P156 | VDD_IN | v |
| P2 | GND | v |
| P9 | GND | v |
| P12 | GND | v |
| P12 | GND | v |
| P15 | GND | v |
| P18 | GND | v |
| P32 | GND | v |
| P38 | GND | v |
| P47 | GND | v |
| P50 | GND | v |
| P53 | GND | v |
| P59 | GND | v |
| P68 | GND | v |
| P79 | GND | v |
| P82 | GND | v |
| P85 | GND | v |
| P88 | GND | v |
| P91 | GND | v |
| P94 | GND | v |
| P97 | GND | v |
| P100 | GND | v |
| P103 | GND | v |
| P120 | GND | v |
| P133 | GND | v |
| P142 | GND | v |
| S3 | GND | v |
| S10 | GND | v |
| S13 | GND | v |
| S16 | GND | v |
| S25 | GND | v |
| S34 | GND | v |
| S47 | GND | v |
| S61 | GND | v |
| S64 | GND | v |
| S67 | GND | v |
| S70 | GND | v |
| S73 | GND | v |
| S80 | GND | v |

Power / GND /RSVD

| | | | |
|-------------|---|-------------|----|
| JTAG | - | VDD_JTAG_IO | NC |
| | - | JTAG_TRST# | NC |
| | - | JTAG_TMS | NC |
| | - | JTAG_TDO | NC |
| | - | JTAG_TDI | NC |
| | - | JTAG_TCK | NC |

Appendix **B**

Watchdog Timer

This appendix details information on the watchdog timer programming on the SOM-2569 CPU System on Module.

Sections include:

- Watchdog Timer Programming

B.1 Programming the Watchdog Timer

| Trigger Event | Note |
|------------------|----------------------------------|
| IRQ | (BIOS setting default disable)** |
| NMI | N/A |
| SCI | Power button event |
| Power Off | Support |
| H/W Restart | Support |
| WDT Pin Activate | Support |

** WDT new driver support automatic select available IRQ number from BIOS, and then set to EC. Only Win10 supports it. In other OS, it will still use IRQ number from BIOS setting as usual.

For details, please refer to iManager & Software API User Manual.

Appendix **C**

System Assignments

This appendix details information on system resource allocation for the SOM-2569 CPU System on Module.

Sections include:

- System I/O ports
- DMA Channel Assignments
- Interrupt Assignments
- 1st MB Memory Map

C.1 System I/O Ports

| Resource | Device |
|-----------------------|--|
| 0x0000029C-0x0000029D | Motherboard resources |
| 0x0000002E-0x0000002F | Motherboard resources |
| 0x0000004E-0x0000004F | Motherboard resources |
| 0x00000061-0x00000061 | Motherboard resources |
| 0x00000063-0x00000063 | Motherboard resources |
| 0x00000065-0x00000065 | Motherboard resources |
| 0x00000067-0x00000067 | Motherboard resources |
| 0x00000070-0x00000070 | Motherboard resources |
| 0x00000070-0x00000070 | System CMOS/real time clock |
| 0x00000080-0x0000008F | Motherboard resources |
| 0x00000092-0x00000092 | Motherboard resources |
| 0x000000B2-0x000000B3 | Motherboard resources |
| 0x00000680-0x0000069F | Motherboard resources |
| 0x00000400-0x0000047F | Motherboard resources |
| 0x00000500-0x000005FE | Motherboard resources |
| 0x00000600-0x0000061F | Motherboard resources |
| 0x0000164E-0x0000164F | Motherboard resources |
| 0x00000062-0x00000062 | Microsoft ACPI-Compliant Embedded Controller |
| 0x00000066-0x00000066 | Microsoft ACPI-Compliant Embedded Controller |
| 0x000003F8-0x000003FF | Communications Port (COM1) |
| 0x000002F8-0x000002FF | Communications Port (COM2) |
| 0x0000F000-0x0000F03F | Intel® HD Graphics 505 |
| 0x0000E000-0x0000EFFF | Intel® Celeron®/ Pentium® Processor PCI Express Root Port - 5ADB |
| 0x0000CF00-0x0000CFFF | Realtek 8822BE Wireless LAN 802.11ac PCI-E NIC |
| 0x00000020-0x00000021 | Programmable interrupt controller |
| 0x00000024-0x00000025 | Programmable interrupt controller |
| 0x00000028-0x00000029 | Programmable interrupt controller |
| 0x0000002C-0x0000002D | Programmable interrupt controller |
| 0x00000030-0x00000031 | Programmable interrupt controller |
| 0x00000034-0x00000035 | Programmable interrupt controller |
| 0x00000038-0x00000039 | Programmable interrupt controller |
| 0x0000003C-0x0000003D | Programmable interrupt controller |
| 0x000000A0-0x000000A1 | Programmable interrupt controller |
| 0x000000A4-0x000000A5 | Programmable interrupt controller |
| 0x000000A8-0x000000A9 | Programmable interrupt controller |
| 0x000000AC-0x000000AD | Programmable interrupt controller |
| 0x000000B0-0x000000B1 | Programmable interrupt controller |
| 0x000000B4-0x000000B5 | Programmable interrupt controller |
| 0x000000B8-0x000000B9 | Programmable interrupt controller |
| 0x000000BC-0x000000BD | Programmable interrupt controller |
| 0x000004D0-0x000004D1 | Programmable interrupt controller |
| 0x0000C000-0x0000CFFF | Intel® Celeron®/ Pentium® Processor PCI Express Root Port - 5AD7 |

| | |
|-----------------------|--|
| 0x0000F090-0x0000F097 | Standard SATA AHCI Controller |
| 0x0000F080-0x0000F083 | Standard SATA AHCI Controller |
| 0x0000F060-0x0000F07F | Standard SATA AHCI Controller |
| 0x00000000-0x0000006F | PCI Express Root Complex |
| 0x00000078-0x00000CF7 | PCI Express Root Complex |
| 0x00000D00-0x0000FFFF | PCI Express Root Complex |
| 0x0000F040-0x0000F05F | Intel® Celeron®/ Pentium® Processor SMBUS - 5AD4 |
| 0x0000D000-0x0000DFFF | Intel® Celeron®/ Pentium® Processor PCI Express Root Port - 5AD6 |
| 0x00000040-0x00000043 | System timer |
| 0x00000050-0x00000053 | System timer |

C.2 Interrupt Assignments

| Resource | Device |
|----------------|--|
| IRQ 0 | System timer |
| IRQ 3 | Communications Port (COM2) |
| IRQ 4 | Intel® Serial I/O UART Host Controller - 5ABC |
| IRQ 5 | Intel® Serial I/O UART Host Controller - 5ABE |
| IRQ 7 | Communications Port (COM1) |
| IRQ 8 | System CMOS/real time clock |
| IRQ 10 | Intel® Celeron®/ Pentium® Processor SMBUS - 5AD4 |
| IRQ 14 | Intel SD Host Controller |
| IRQ 14 | Intel® Serial I/O GPIO Host Controller - INT3452 |
| IRQ 14 | Intel® Serial I/O GPIO Host Controller - INT3452 |
| IRQ 14 | Intel® Serial I/O GPIO Host Controller - INT3452 |
| IRQ 14 | Intel® Serial I/O GPIO Host Controller - INT3452 |
| IRQ 25 | High Definition Audio Controller |
| IRQ 27 | Intel® Serial I/O I ² C Host Controller - 5AAC |
| IRQ 29 | Intel® Serial I/O I ² C Host Controller - 5AB0 |
| IRQ 35 | Intel® Serial I/O SPI Host Controller - 5AC2 |
| IRQ 39 | Intel SD Host Controller |
| IRQ 31 | Intel® Serial I/O I ² C Host Controller - 5AB4 |
| IRQ 4294967294 | Intel® Celeron®/ Pentium® Processor PCI Express Root Port - 5AD8 |
| IRQ 4294967286 | Intel® Trusted Execution Engine Interface |
| IRQ 4294967287 | Intel® HD Graphics 505 |
| IRQ 4294967291 | Intel® Celeron®/ Pentium® Processor PCI Express Root Port - 5ADB |
| IRQ 4294967272 | Realtek 8822BE Wireless LAN 802.11ac PCI-E NIC |
| IRQ 4294967289 | Intel® Celeron®/Pentium® Processor PCI Express Root Port - 5AD7 |
| IRQ 1024 | Intel SD Host Controller |
| IRQ 4294967288 | Standard SATA AHCI Controller |
| IRQ 4294967293 | Intel® Celeron®/Pentium® Processor PCI Express Root Port - 5AD9 |
| IRQ 4294967292 | Intel® Celeron®/Pentium® Processor PCI Express Root Port - 5ADA |
| IRQ 4294967290 | Intel® Celeron®/Pentium® Processor PCI Express Root Port - 5AD6 |
| IRQ 4294967273 | Intel® USB 3.0 eXtensible Host Controller - 1.0 (Microsoft) |
| IRQ 4294967279 | Intel® I210 Gigabit Network Connection #3 |
| IRQ 4294967278 | Intel® I210 Gigabit Network Connection #3 |
| IRQ 4294967277 | Intel® I210 Gigabit Network Connection #3 |
| IRQ 4294967276 | Intel® I210 Gigabit Network Connection #3 |
| IRQ 4294967275 | Intel® I210 Gigabit Network Connection #3 |

| | |
|----------------|---|
| IRQ 4294967274 | Intel® I210 Gigabit Network Connection #3 |
| IRQ 4294967285 | Intel® I210 Gigabit Network Connection #4 |
| IRQ 4294967284 | Intel® I210 Gigabit Network Connection #4 |
| IRQ 4294967283 | Intel® I210 Gigabit Network Connection #4 |
| IRQ 4294967282 | Intel® I210 Gigabit Network Connection #4 |
| IRQ 4294967281 | Intel® I210 Gigabit Network Connection #4 |
| IRQ 4294967280 | Intel® I210 Gigabit Network Connection #4 |
| IRQ 54 | Microsoft ACPI-Compliant System |
| IRQ 55 | Microsoft ACPI-Compliant System |
| IRQ 56 | Microsoft ACPI-Compliant System |
| IRQ 57 | Microsoft ACPI-Compliant System |
| IRQ 58 | Microsoft ACPI-Compliant System |
| IRQ 59 | Microsoft ACPI-Compliant System |
| IRQ 60 | Microsoft ACPI-Compliant System |
| IRQ 61 | Microsoft ACPI-Compliant System |
| IRQ 62 | Microsoft ACPI-Compliant System |
| IRQ 63 | Microsoft ACPI-Compliant System |
| IRQ 64 | Microsoft ACPI-Compliant System |
| IRQ 65 | Microsoft ACPI-Compliant System |
| IRQ 66 | Microsoft ACPI-Compliant System |
| IRQ 67 | Microsoft ACPI-Compliant System |
| IRQ 68 | Microsoft ACPI-Compliant System |
| IRQ 69 | Microsoft ACPI-Compliant System |
| IRQ 70 | Microsoft ACPI-Compliant System |
| IRQ 71 | Microsoft ACPI-Compliant System |
| IRQ 72 | Microsoft ACPI-Compliant System |
| IRQ 73 | Microsoft ACPI-Compliant System |
| IRQ 74 | Microsoft ACPI-Compliant System |
| IRQ 75 | Microsoft ACPI-Compliant System |
| IRQ 76 | Microsoft ACPI-Compliant System |
| IRQ 77 | Microsoft ACPI-Compliant System |
| IRQ 78 | Microsoft ACPI-Compliant System |
| IRQ 79 | Microsoft ACPI-Compliant System |
| IRQ 80 | Microsoft ACPI-Compliant System |
| IRQ 81 | Microsoft ACPI-Compliant System |
| IRQ 82 | Microsoft ACPI-Compliant System |
| IRQ 83 | Microsoft ACPI-Compliant System |
| IRQ 84 | Microsoft ACPI-Compliant System |
| IRQ 85 | Microsoft ACPI-Compliant System |
| IRQ 86 | Microsoft ACPI-Compliant System |
| IRQ 87 | Microsoft ACPI-Compliant System |
| IRQ 88 | Microsoft ACPI-Compliant System |
| IRQ 89 | Microsoft ACPI-Compliant System |
| IRQ 90 | Microsoft ACPI-Compliant System |
| IRQ 91 | Microsoft ACPI-Compliant System |
| IRQ 92 | Microsoft ACPI-Compliant System |
| IRQ 93 | Microsoft ACPI-Compliant System |

| | |
|---------|---------------------------------|
| IRQ 94 | Microsoft ACPI-Compliant System |
| IRQ 95 | Microsoft ACPI-Compliant System |
| IRQ 96 | Microsoft ACPI-Compliant System |
| IRQ 97 | Microsoft ACPI-Compliant System |
| IRQ 98 | Microsoft ACPI-Compliant System |
| IRQ 99 | Microsoft ACPI-Compliant System |
| IRQ 100 | Microsoft ACPI-Compliant System |
| IRQ 101 | Microsoft ACPI-Compliant System |
| IRQ 102 | Microsoft ACPI-Compliant System |
| IRQ 103 | Microsoft ACPI-Compliant System |
| IRQ 104 | Microsoft ACPI-Compliant System |
| IRQ 105 | Microsoft ACPI-Compliant System |
| IRQ 106 | Microsoft ACPI-Compliant System |
| IRQ 107 | Microsoft ACPI-Compliant System |
| IRQ 108 | Microsoft ACPI-Compliant System |
| IRQ 109 | Microsoft ACPI-Compliant System |
| IRQ 110 | Microsoft ACPI-Compliant System |
| IRQ 111 | Microsoft ACPI-Compliant System |
| IRQ 112 | Microsoft ACPI-Compliant System |
| IRQ 113 | Microsoft ACPI-Compliant System |
| IRQ 114 | Microsoft ACPI-Compliant System |
| IRQ 115 | Microsoft ACPI-Compliant System |
| IRQ 116 | Microsoft ACPI-Compliant System |
| IRQ 117 | Microsoft ACPI-Compliant System |
| IRQ 118 | Microsoft ACPI-Compliant System |
| IRQ 119 | Microsoft ACPI-Compliant System |
| IRQ 120 | Microsoft ACPI-Compliant System |
| IRQ 121 | Microsoft ACPI-Compliant System |
| IRQ 122 | Microsoft ACPI-Compliant System |
| IRQ 123 | Microsoft ACPI-Compliant System |
| IRQ 124 | Microsoft ACPI-Compliant System |
| IRQ 125 | Microsoft ACPI-Compliant System |
| IRQ 126 | Microsoft ACPI-Compliant System |
| IRQ 127 | Microsoft ACPI-Compliant System |
| IRQ 128 | Microsoft ACPI-Compliant System |
| IRQ 129 | Microsoft ACPI-Compliant System |
| IRQ 130 | Microsoft ACPI-Compliant System |
| IRQ 131 | Microsoft ACPI-Compliant System |
| IRQ 132 | Microsoft ACPI-Compliant System |
| IRQ 133 | Microsoft ACPI-Compliant System |
| IRQ 134 | Microsoft ACPI-Compliant System |
| IRQ 135 | Microsoft ACPI-Compliant System |
| IRQ 136 | Microsoft ACPI-Compliant System |
| IRQ 137 | Microsoft ACPI-Compliant System |
| IRQ 138 | Microsoft ACPI-Compliant System |
| IRQ 139 | Microsoft ACPI-Compliant System |
| IRQ 140 | Microsoft ACPI-Compliant System |
| IRQ 141 | Microsoft ACPI-Compliant System |

| | |
|---------|---------------------------------|
| IRQ 142 | Microsoft ACPI-Compliant System |
| IRQ 143 | Microsoft ACPI-Compliant System |
| IRQ 144 | Microsoft ACPI-Compliant System |
| IRQ 145 | Microsoft ACPI-Compliant System |
| IRQ 146 | Microsoft ACPI-Compliant System |
| IRQ 147 | Microsoft ACPI-Compliant System |
| IRQ 148 | Microsoft ACPI-Compliant System |
| IRQ 149 | Microsoft ACPI-Compliant System |
| IRQ 150 | Microsoft ACPI-Compliant System |
| IRQ 151 | Microsoft ACPI-Compliant System |
| IRQ 152 | Microsoft ACPI-Compliant System |
| IRQ 153 | Microsoft ACPI-Compliant System |
| IRQ 154 | Microsoft ACPI-Compliant System |
| IRQ 155 | Microsoft ACPI-Compliant System |
| IRQ 156 | Microsoft ACPI-Compliant System |
| IRQ 157 | Microsoft ACPI-Compliant System |
| IRQ 158 | Microsoft ACPI-Compliant System |
| IRQ 159 | Microsoft ACPI-Compliant System |
| IRQ 160 | Microsoft ACPI-Compliant System |
| IRQ 161 | Microsoft ACPI-Compliant System |
| IRQ 162 | Microsoft ACPI-Compliant System |
| IRQ 163 | Microsoft ACPI-Compliant System |
| IRQ 164 | Microsoft ACPI-Compliant System |
| IRQ 165 | Microsoft ACPI-Compliant System |
| IRQ 166 | Microsoft ACPI-Compliant System |
| IRQ 167 | Microsoft ACPI-Compliant System |
| IRQ 168 | Microsoft ACPI-Compliant System |
| IRQ 169 | Microsoft ACPI-Compliant System |
| IRQ 170 | Microsoft ACPI-Compliant System |
| IRQ 171 | Microsoft ACPI-Compliant System |
| IRQ 172 | Microsoft ACPI-Compliant System |
| IRQ 173 | Microsoft ACPI-Compliant System |
| IRQ 174 | Microsoft ACPI-Compliant System |
| IRQ 175 | Microsoft ACPI-Compliant System |
| IRQ 176 | Microsoft ACPI-Compliant System |
| IRQ 177 | Microsoft ACPI-Compliant System |
| IRQ 178 | Microsoft ACPI-Compliant System |
| IRQ 179 | Microsoft ACPI-Compliant System |
| IRQ 180 | Microsoft ACPI-Compliant System |
| IRQ 181 | Microsoft ACPI-Compliant System |
| IRQ 182 | Microsoft ACPI-Compliant System |
| IRQ 183 | Microsoft ACPI-Compliant System |
| IRQ 184 | Microsoft ACPI-Compliant System |
| IRQ 185 | Microsoft ACPI-Compliant System |
| IRQ 186 | Microsoft ACPI-Compliant System |
| IRQ 187 | Microsoft ACPI-Compliant System |
| IRQ 188 | Microsoft ACPI-Compliant System |
| IRQ 189 | Microsoft ACPI-Compliant System |

| | |
|---------|---------------------------------|
| IRQ 190 | Microsoft ACPI-Compliant System |
| IRQ 191 | Microsoft ACPI-Compliant System |
| IRQ 192 | Microsoft ACPI-Compliant System |
| IRQ 193 | Microsoft ACPI-Compliant System |
| IRQ 194 | Microsoft ACPI-Compliant System |
| IRQ 195 | Microsoft ACPI-Compliant System |
| IRQ 196 | Microsoft ACPI-Compliant System |
| IRQ 197 | Microsoft ACPI-Compliant System |
| IRQ 198 | Microsoft ACPI-Compliant System |
| IRQ 199 | Microsoft ACPI-Compliant System |
| IRQ 200 | Microsoft ACPI-Compliant System |
| IRQ 201 | Microsoft ACPI-Compliant System |
| IRQ 202 | Microsoft ACPI-Compliant System |
| IRQ 203 | Microsoft ACPI-Compliant System |
| IRQ 204 | Microsoft ACPI-Compliant System |
| IRQ 256 | Microsoft ACPI-Compliant System |
| IRQ 257 | Microsoft ACPI-Compliant System |
| IRQ 258 | Microsoft ACPI-Compliant System |
| IRQ 259 | Microsoft ACPI-Compliant System |
| IRQ 260 | Microsoft ACPI-Compliant System |
| IRQ 261 | Microsoft ACPI-Compliant System |
| IRQ 262 | Microsoft ACPI-Compliant System |
| IRQ 263 | Microsoft ACPI-Compliant System |
| IRQ 264 | Microsoft ACPI-Compliant System |
| IRQ 265 | Microsoft ACPI-Compliant System |
| IRQ 266 | Microsoft ACPI-Compliant System |
| IRQ 267 | Microsoft ACPI-Compliant System |
| IRQ 268 | Microsoft ACPI-Compliant System |
| IRQ 269 | Microsoft ACPI-Compliant System |
| IRQ 270 | Microsoft ACPI-Compliant System |
| IRQ 271 | Microsoft ACPI-Compliant System |
| IRQ 272 | Microsoft ACPI-Compliant System |
| IRQ 273 | Microsoft ACPI-Compliant System |
| IRQ 274 | Microsoft ACPI-Compliant System |
| IRQ 275 | Microsoft ACPI-Compliant System |
| IRQ 276 | Microsoft ACPI-Compliant System |
| IRQ 277 | Microsoft ACPI-Compliant System |
| IRQ 278 | Microsoft ACPI-Compliant System |
| IRQ 279 | Microsoft ACPI-Compliant System |
| IRQ 280 | Microsoft ACPI-Compliant System |
| IRQ 281 | Microsoft ACPI-Compliant System |
| IRQ 282 | Microsoft ACPI-Compliant System |
| IRQ 283 | Microsoft ACPI-Compliant System |
| IRQ 284 | Microsoft ACPI-Compliant System |
| IRQ 285 | Microsoft ACPI-Compliant System |
| IRQ 286 | Microsoft ACPI-Compliant System |
| IRQ 287 | Microsoft ACPI-Compliant System |
| IRQ 288 | Microsoft ACPI-Compliant System |

| | |
|---------|---------------------------------|
| IRQ 289 | Microsoft ACPI-Compliant System |
| IRQ 290 | Microsoft ACPI-Compliant System |
| IRQ 291 | Microsoft ACPI-Compliant System |
| IRQ 292 | Microsoft ACPI-Compliant System |
| IRQ 293 | Microsoft ACPI-Compliant System |
| IRQ 294 | Microsoft ACPI-Compliant System |
| IRQ 295 | Microsoft ACPI-Compliant System |
| IRQ 296 | Microsoft ACPI-Compliant System |
| IRQ 297 | Microsoft ACPI-Compliant System |
| IRQ 298 | Microsoft ACPI-Compliant System |
| IRQ 299 | Microsoft ACPI-Compliant System |
| IRQ 300 | Microsoft ACPI-Compliant System |
| IRQ 301 | Microsoft ACPI-Compliant System |
| IRQ 302 | Microsoft ACPI-Compliant System |
| IRQ 303 | Microsoft ACPI-Compliant System |
| IRQ 304 | Microsoft ACPI-Compliant System |
| IRQ 305 | Microsoft ACPI-Compliant System |
| IRQ 306 | Microsoft ACPI-Compliant System |
| IRQ 307 | Microsoft ACPI-Compliant System |
| IRQ 308 | Microsoft ACPI-Compliant System |
| IRQ 309 | Microsoft ACPI-Compliant System |
| IRQ 310 | Microsoft ACPI-Compliant System |
| IRQ 311 | Microsoft ACPI-Compliant System |
| IRQ 312 | Microsoft ACPI-Compliant System |
| IRQ 313 | Microsoft ACPI-Compliant System |
| IRQ 314 | Microsoft ACPI-Compliant System |
| IRQ 315 | Microsoft ACPI-Compliant System |
| IRQ 316 | Microsoft ACPI-Compliant System |
| IRQ 317 | Microsoft ACPI-Compliant System |
| IRQ 318 | Microsoft ACPI-Compliant System |
| IRQ 319 | Microsoft ACPI-Compliant System |
| IRQ 320 | Microsoft ACPI-Compliant System |
| IRQ 321 | Microsoft ACPI-Compliant System |
| IRQ 322 | Microsoft ACPI-Compliant System |
| IRQ 323 | Microsoft ACPI-Compliant System |
| IRQ 324 | Microsoft ACPI-Compliant System |
| IRQ 325 | Microsoft ACPI-Compliant System |
| IRQ 326 | Microsoft ACPI-Compliant System |
| IRQ 327 | Microsoft ACPI-Compliant System |
| IRQ 328 | Microsoft ACPI-Compliant System |
| IRQ 329 | Microsoft ACPI-Compliant System |
| IRQ 330 | Microsoft ACPI-Compliant System |
| IRQ 331 | Microsoft ACPI-Compliant System |
| IRQ 332 | Microsoft ACPI-Compliant System |
| IRQ 333 | Microsoft ACPI-Compliant System |
| IRQ 334 | Microsoft ACPI-Compliant System |
| IRQ 335 | Microsoft ACPI-Compliant System |
| IRQ 336 | Microsoft ACPI-Compliant System |

| | |
|---------|---------------------------------|
| IRQ 337 | Microsoft ACPI-Compliant System |
| IRQ 338 | Microsoft ACPI-Compliant System |
| IRQ 339 | Microsoft ACPI-Compliant System |
| IRQ 340 | Microsoft ACPI-Compliant System |
| IRQ 341 | Microsoft ACPI-Compliant System |
| IRQ 342 | Microsoft ACPI-Compliant System |
| IRQ 343 | Microsoft ACPI-Compliant System |
| IRQ 344 | Microsoft ACPI-Compliant System |
| IRQ 345 | Microsoft ACPI-Compliant System |
| IRQ 346 | Microsoft ACPI-Compliant System |
| IRQ 347 | Microsoft ACPI-Compliant System |
| IRQ 348 | Microsoft ACPI-Compliant System |
| IRQ 349 | Microsoft ACPI-Compliant System |
| IRQ 350 | Microsoft ACPI-Compliant System |
| IRQ 351 | Microsoft ACPI-Compliant System |
| IRQ 352 | Microsoft ACPI-Compliant System |
| IRQ 353 | Microsoft ACPI-Compliant System |
| IRQ 354 | Microsoft ACPI-Compliant System |
| IRQ 355 | Microsoft ACPI-Compliant System |
| IRQ 356 | Microsoft ACPI-Compliant System |
| IRQ 357 | Microsoft ACPI-Compliant System |
| IRQ 358 | Microsoft ACPI-Compliant System |
| IRQ 359 | Microsoft ACPI-Compliant System |
| IRQ 360 | Microsoft ACPI-Compliant System |
| IRQ 361 | Microsoft ACPI-Compliant System |
| IRQ 362 | Microsoft ACPI-Compliant System |
| IRQ 363 | Microsoft ACPI-Compliant System |
| IRQ 364 | Microsoft ACPI-Compliant System |
| IRQ 365 | Microsoft ACPI-Compliant System |
| IRQ 366 | Microsoft ACPI-Compliant System |
| IRQ 367 | Microsoft ACPI-Compliant System |
| IRQ 368 | Microsoft ACPI-Compliant System |
| IRQ 369 | Microsoft ACPI-Compliant System |
| IRQ 370 | Microsoft ACPI-Compliant System |
| IRQ 371 | Microsoft ACPI-Compliant System |
| IRQ 372 | Microsoft ACPI-Compliant System |
| IRQ 373 | Microsoft ACPI-Compliant System |
| IRQ 374 | Microsoft ACPI-Compliant System |
| IRQ 375 | Microsoft ACPI-Compliant System |
| IRQ 376 | Microsoft ACPI-Compliant System |
| IRQ 377 | Microsoft ACPI-Compliant System |
| IRQ 378 | Microsoft ACPI-Compliant System |
| IRQ 379 | Microsoft ACPI-Compliant System |
| IRQ 380 | Microsoft ACPI-Compliant System |
| IRQ 381 | Microsoft ACPI-Compliant System |
| IRQ 382 | Microsoft ACPI-Compliant System |
| IRQ 383 | Microsoft ACPI-Compliant System |
| IRQ 384 | Microsoft ACPI-Compliant System |

| | |
|---------|---------------------------------|
| IRQ 385 | Microsoft ACPI-Compliant System |
| IRQ 386 | Microsoft ACPI-Compliant System |
| IRQ 387 | Microsoft ACPI-Compliant System |
| IRQ 388 | Microsoft ACPI-Compliant System |
| IRQ 389 | Microsoft ACPI-Compliant System |
| IRQ 390 | Microsoft ACPI-Compliant System |
| IRQ 391 | Microsoft ACPI-Compliant System |
| IRQ 392 | Microsoft ACPI-Compliant System |
| IRQ 393 | Microsoft ACPI-Compliant System |
| IRQ 394 | Microsoft ACPI-Compliant System |
| IRQ 395 | Microsoft ACPI-Compliant System |
| IRQ 396 | Microsoft ACPI-Compliant System |
| IRQ 397 | Microsoft ACPI-Compliant System |
| IRQ 398 | Microsoft ACPI-Compliant System |
| IRQ 399 | Microsoft ACPI-Compliant System |
| IRQ 400 | Microsoft ACPI-Compliant System |
| IRQ 401 | Microsoft ACPI-Compliant System |
| IRQ 402 | Microsoft ACPI-Compliant System |
| IRQ 403 | Microsoft ACPI-Compliant System |
| IRQ 404 | Microsoft ACPI-Compliant System |
| IRQ 405 | Microsoft ACPI-Compliant System |
| IRQ 406 | Microsoft ACPI-Compliant System |
| IRQ 407 | Microsoft ACPI-Compliant System |
| IRQ 408 | Microsoft ACPI-Compliant System |
| IRQ 409 | Microsoft ACPI-Compliant System |
| IRQ 410 | Microsoft ACPI-Compliant System |
| IRQ 411 | Microsoft ACPI-Compliant System |
| IRQ 412 | Microsoft ACPI-Compliant System |
| IRQ 413 | Microsoft ACPI-Compliant System |
| IRQ 414 | Microsoft ACPI-Compliant System |
| IRQ 415 | Microsoft ACPI-Compliant System |
| IRQ 416 | Microsoft ACPI-Compliant System |
| IRQ 417 | Microsoft ACPI-Compliant System |
| IRQ 418 | Microsoft ACPI-Compliant System |
| IRQ 419 | Microsoft ACPI-Compliant System |
| IRQ 420 | Microsoft ACPI-Compliant System |
| IRQ 421 | Microsoft ACPI-Compliant System |
| IRQ 422 | Microsoft ACPI-Compliant System |
| IRQ 423 | Microsoft ACPI-Compliant System |
| IRQ 424 | Microsoft ACPI-Compliant System |
| IRQ 425 | Microsoft ACPI-Compliant System |
| IRQ 426 | Microsoft ACPI-Compliant System |
| IRQ 427 | Microsoft ACPI-Compliant System |
| IRQ 428 | Microsoft ACPI-Compliant System |
| IRQ 429 | Microsoft ACPI-Compliant System |
| IRQ 430 | Microsoft ACPI-Compliant System |
| IRQ 431 | Microsoft ACPI-Compliant System |
| IRQ 432 | Microsoft ACPI-Compliant System |

| | |
|---------|---------------------------------|
| IRQ 433 | Microsoft ACPI-Compliant System |
| IRQ 434 | Microsoft ACPI-Compliant System |
| IRQ 435 | Microsoft ACPI-Compliant System |
| IRQ 436 | Microsoft ACPI-Compliant System |
| IRQ 437 | Microsoft ACPI-Compliant System |
| IRQ 438 | Microsoft ACPI-Compliant System |
| IRQ 439 | Microsoft ACPI-Compliant System |
| IRQ 440 | Microsoft ACPI-Compliant System |
| IRQ 441 | Microsoft ACPI-Compliant System |
| IRQ 442 | Microsoft ACPI-Compliant System |
| IRQ 443 | Microsoft ACPI-Compliant System |
| IRQ 444 | Microsoft ACPI-Compliant System |
| IRQ 445 | Microsoft ACPI-Compliant System |
| IRQ 446 | Microsoft ACPI-Compliant System |
| IRQ 447 | Microsoft ACPI-Compliant System |
| IRQ 448 | Microsoft ACPI-Compliant System |
| IRQ 449 | Microsoft ACPI-Compliant System |
| IRQ 450 | Microsoft ACPI-Compliant System |
| IRQ 451 | Microsoft ACPI-Compliant System |
| IRQ 452 | Microsoft ACPI-Compliant System |
| IRQ 453 | Microsoft ACPI-Compliant System |
| IRQ 454 | Microsoft ACPI-Compliant System |
| IRQ 455 | Microsoft ACPI-Compliant System |
| IRQ 456 | Microsoft ACPI-Compliant System |
| IRQ 457 | Microsoft ACPI-Compliant System |
| IRQ 458 | Microsoft ACPI-Compliant System |
| IRQ 459 | Microsoft ACPI-Compliant System |
| IRQ 460 | Microsoft ACPI-Compliant System |
| IRQ 461 | Microsoft ACPI-Compliant System |
| IRQ 462 | Microsoft ACPI-Compliant System |
| IRQ 463 | Microsoft ACPI-Compliant System |
| IRQ 464 | Microsoft ACPI-Compliant System |
| IRQ 465 | Microsoft ACPI-Compliant System |
| IRQ 466 | Microsoft ACPI-Compliant System |
| IRQ 467 | Microsoft ACPI-Compliant System |
| IRQ 468 | Microsoft ACPI-Compliant System |
| IRQ 469 | Microsoft ACPI-Compliant System |
| IRQ 470 | Microsoft ACPI-Compliant System |
| IRQ 471 | Microsoft ACPI-Compliant System |
| IRQ 472 | Microsoft ACPI-Compliant System |
| IRQ 473 | Microsoft ACPI-Compliant System |
| IRQ 474 | Microsoft ACPI-Compliant System |
| IRQ 475 | Microsoft ACPI-Compliant System |
| IRQ 476 | Microsoft ACPI-Compliant System |
| IRQ 477 | Microsoft ACPI-Compliant System |
| IRQ 478 | Microsoft ACPI-Compliant System |
| IRQ 479 | Microsoft ACPI-Compliant System |
| IRQ 480 | Microsoft ACPI-Compliant System |

| | |
|---------|---------------------------------|
| IRQ 481 | Microsoft ACPI-Compliant System |
| IRQ 482 | Microsoft ACPI-Compliant System |
| IRQ 483 | Microsoft ACPI-Compliant System |
| IRQ 484 | Microsoft ACPI-Compliant System |
| IRQ 485 | Microsoft ACPI-Compliant System |
| IRQ 486 | Microsoft ACPI-Compliant System |
| IRQ 487 | Microsoft ACPI-Compliant System |
| IRQ 488 | Microsoft ACPI-Compliant System |
| IRQ 489 | Microsoft ACPI-Compliant System |
| IRQ 490 | Microsoft ACPI-Compliant System |
| IRQ 491 | Microsoft ACPI-Compliant System |
| IRQ 492 | Microsoft ACPI-Compliant System |
| IRQ 493 | Microsoft ACPI-Compliant System |
| IRQ 494 | Microsoft ACPI-Compliant System |
| IRQ 495 | Microsoft ACPI-Compliant System |
| IRQ 496 | Microsoft ACPI-Compliant System |
| IRQ 497 | Microsoft ACPI-Compliant System |
| IRQ 498 | Microsoft ACPI-Compliant System |
| IRQ 499 | Microsoft ACPI-Compliant System |
| IRQ 500 | Microsoft ACPI-Compliant System |
| IRQ 501 | Microsoft ACPI-Compliant System |
| IRQ 502 | Microsoft ACPI-Compliant System |
| IRQ 503 | Microsoft ACPI-Compliant System |
| IRQ 504 | Microsoft ACPI-Compliant System |
| IRQ 505 | Microsoft ACPI-Compliant System |
| IRQ 506 | Microsoft ACPI-Compliant System |
| IRQ 507 | Microsoft ACPI-Compliant System |
| IRQ 508 | Microsoft ACPI-Compliant System |
| IRQ 509 | Microsoft ACPI-Compliant System |
| IRQ 510 | Microsoft ACPI-Compliant System |
| IRQ 511 | Microsoft ACPI-Compliant System |

C.3 1st MB Memory Map

| Resource | Device |
|-------------------------|---|
| 0xE0000000-0xEFFFFFFF | Motherboard resources |
| 0xE0000000-0xEFFFFFFF | PCI Express Root Complex |
| 0xFEA00000-0xFEFFFFFF | Motherboard resources |
| 0xFED01000-0xFED01FFF | Motherboard resources |
| 0xFED03000-0xFED03FFF | Motherboard resources |
| 0xFED06000-0xFED06FFF | Motherboard resources |
| 0xFED08000-0xFED09FFF | Motherboard resources |
| 0xFED80000-0xFEDBFFFF | Motherboard resources |
| 0xFED1C000-0xFED1CFFF | Motherboard resources |
| 0xFEE00000-0xFEEFFFFFFF | Motherboard resources |
| 0xFED00000-0xFED003FF | High precision event timer |
| 0x91420000-0x91420FFF | Intel [®] Serial I/O UART Host Controller - 5ABC |
| 0x9141F000-0x9141FFFF | Intel [®] Serial I/O UART Host Controller - 5ABC |
| 0x9142B000-0x9142BFFF | Intel [®] Trusted Execution Engine Interface |
| 0x91424000-0x91424FFF | Intel [®] Serial I/O I ² C Host Controller - 5AB0 |
| 0x91423000-0x91423FFF | Intel [®] Serial I/O I ² C Host Controller - 5AB0 |
| 0x90000000-0x90FFFFFF | Intel [®] HD Graphics 505 |
| 0x80000000-0x8FFFFFFF | Intel [®] HD Graphics 505 |
| 0x80000000-0x8FFFFFFF | PCI Express Root Complex |
| 0x91300000-0x913FFFFFFF | Intel [®] Celeron [®] / Pentium [®] Processor PCI Express Root Port - 5ADB |
| 0x91300000-0x913FFFFFFF | Intel [®] I210 Gigabit Network Connection #4 |
| 0x911F0000-0x911FFFFFFF | Realtek 8822BE Wireless LAN 802.11ac PCI-E NIC |
| 0x91100000-0x911FFFFFFF | Intel [®] Celeron [®] / Pentium [®] Processor PCI Express Root Port - 5AD7 |
| 0x9141A000-0x9141AFFF | Intel SD Host Controller |
| 0x91419000-0x91419FFF | Intel SD Host Controller |
| 0x91414000-0x91415FFF | Standard SATA AHCI Controller |
| 0x91428000-0x914280FF | Standard SATA AHCI Controller |
| 0x91427000-0x914277FF | Standard SATA AHCI Controller |
| 0xA0000-0xBFFFF | PCI Express Root Complex |
| 0xC0000-0xDFFFF | PCI Express Root Complex |
| 0xE0000-0xFFFFF | PCI Express Root Complex |
| 0x7C000001-0x7FFFFFFF | PCI Express Root Complex |
| 0x7B800001-0x7BFFFFFF | PCI Express Root Complex |
| 0x9141E000-0x9141EFFF | Intel [®] Serial I/O UART Host Controller - 5ABE |
| 0x9141D000-0x9141DFFF | Intel [®] Serial I/O UART Host Controller - 5ABE |
| 0x91410000-0x91413FFF | High Definition Audio Controller |
| 0x91000000-0x910FFFFFFF | High Definition Audio Controller |
| 0x91416000-0x914160FF | Intel [®] Celeron [®] / Pentium [®] Processor SMBUS - 5AD4 |
| 0x91418000-0x91418FFF | Intel SD Host Controller |
| 0x91417000-0x91417FFF | Intel SD Host Controller |

| | |
|------------------------|--|
| 0xD0C50000-0xD0C5076B | Intel® Serial I/O GPIO Host Controller - INT3452 |
| 0xD0C40000-0xD0C40763 | Intel® Serial I/O GPIO Host Controller - INT3452 |
| 0xD0C70000-0xD0C70673 | Intel® Serial I/O GPIO Host Controller - INT3452 |
| 0xD0C00000-0xD0C00653 | Intel® Serial I/O GPIO Host Controller - INT3452 |
| 0x91200000-0x912FFFFFF | Intel® Celeron®/ Pentium® Processor PCI Express Root Port - 5AD6 |
| 0x91200000-0x912FFFFFF | Intel® I210 Gigabit Network Connection #3 |
| 0x91422000-0x91422FFF | Intel® Serial I/O I ² C Host Controller - 5AB4 |
| 0x91421000-0x91421FFF | Intel® Serial I/O I ² C Host Controller - 5AB4 |
| 0x91426000-0x91426FFF | Intel® Serial I/O I ² C Host Controller - 5AAC |
| 0x91425000-0x91425FFF | Intel® Serial I/O I ² C Host Controller - 5AAC |
| 0x91400000-0x9140FFFF | Intel® USB 3.0 eXtensible Host Controller - 1.0 (Microsoft) |
| 0x91220000-0x91223FFF | Intel® I210 Gigabit Network Connection #3 |
| 0x91320000-0x91323FFF | Intel® I210 Gigabit Network Connection #4 |
| 0x9141C000-0x9141CFFF | Intel® Serial I/O SPI Host Controller - 5AC2 |
| 0x9141B000-0x9141BFFF | Intel® Serial I/O SPI Host Controller - 5AC2 |

ADVANTECH

Enabling an Intelligent Planet

www.advantech.com

Please verify specifications before quoting. This guide is intended for reference purposes only.

All product specifications are subject to change without notice.

No part of this publication may be reproduced in any form or by any means, electronic, photocopying, recording or otherwise, without prior written permission of the publisher.

All brand and product names are trademarks or registered trademarks of their respective companies.

© Advantech Co., Ltd. 2020